 
 


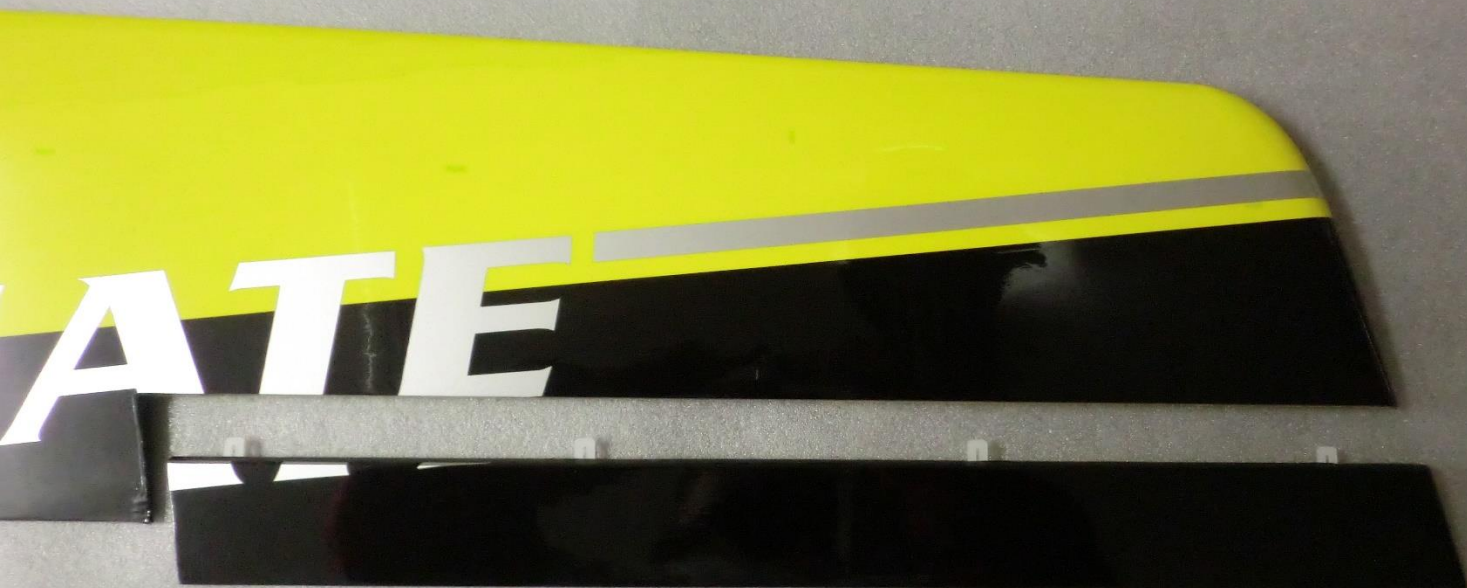


Aileron installation

step 01

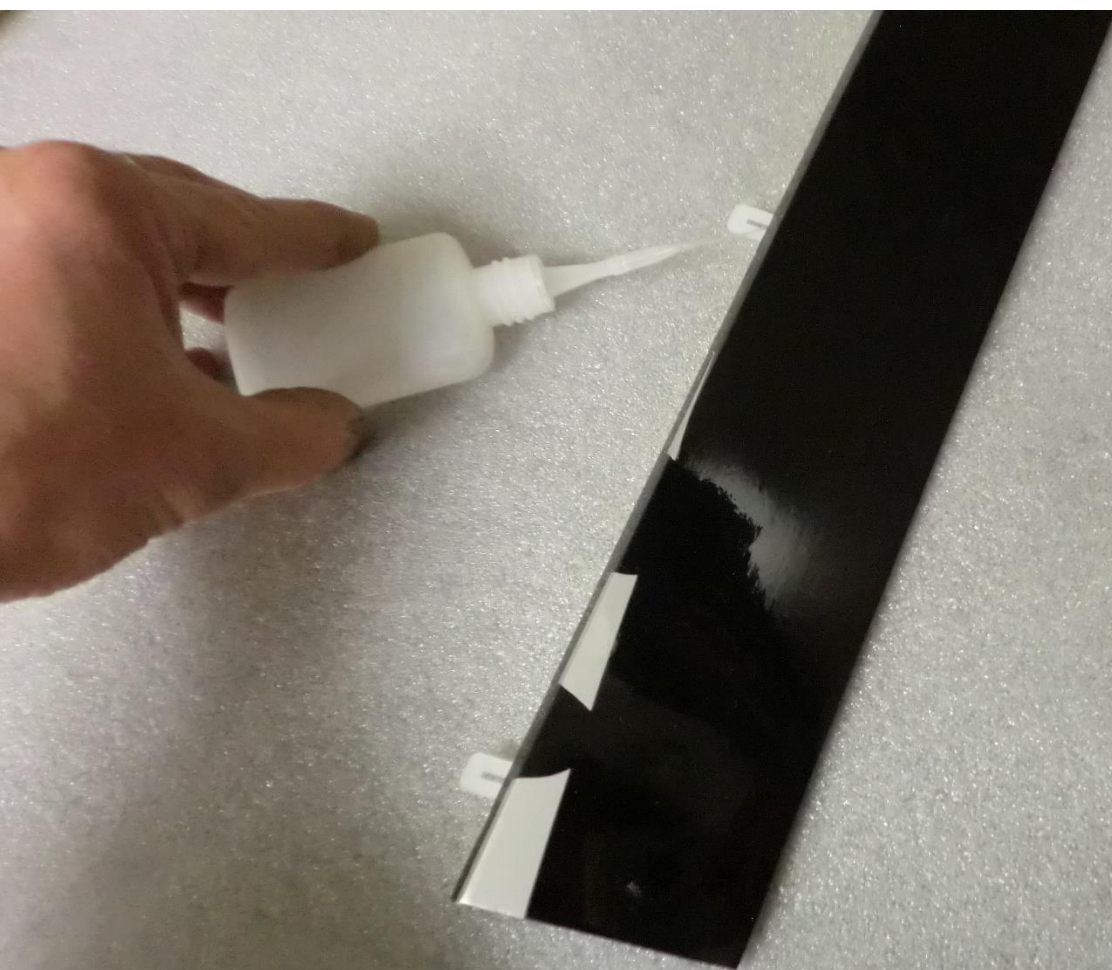

Aileron installation

 step 02

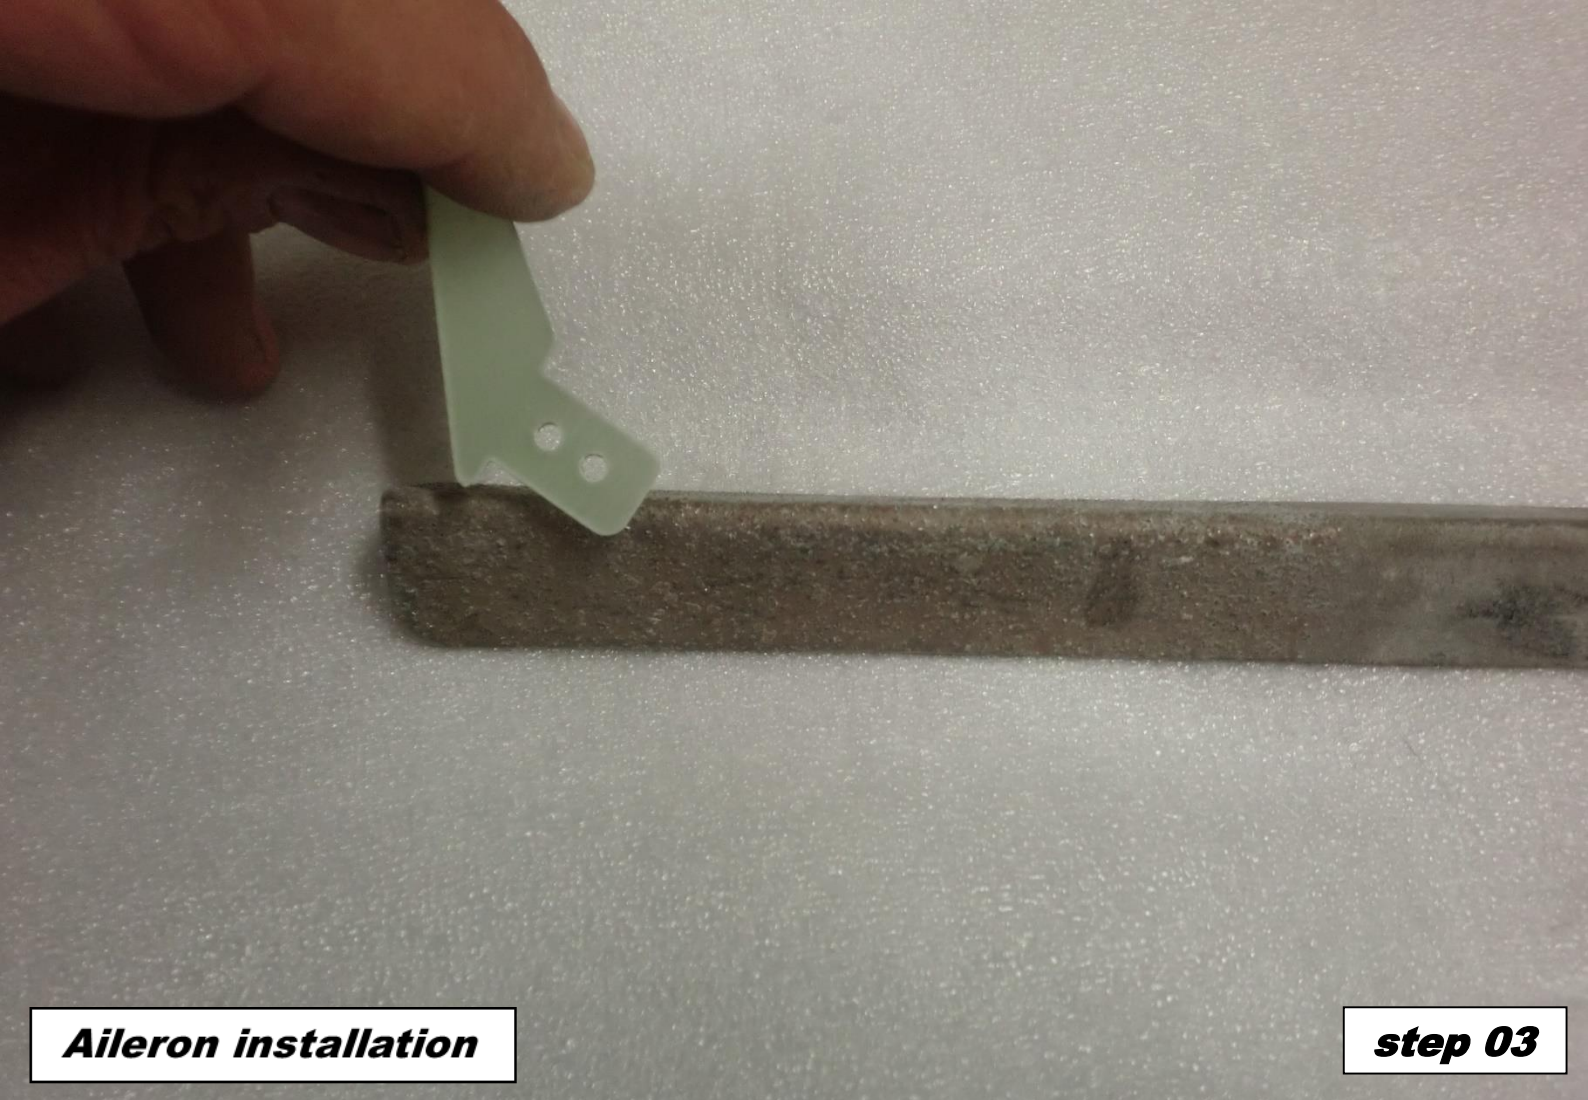



Aileron installation

step 03



Aileron installation


step 04

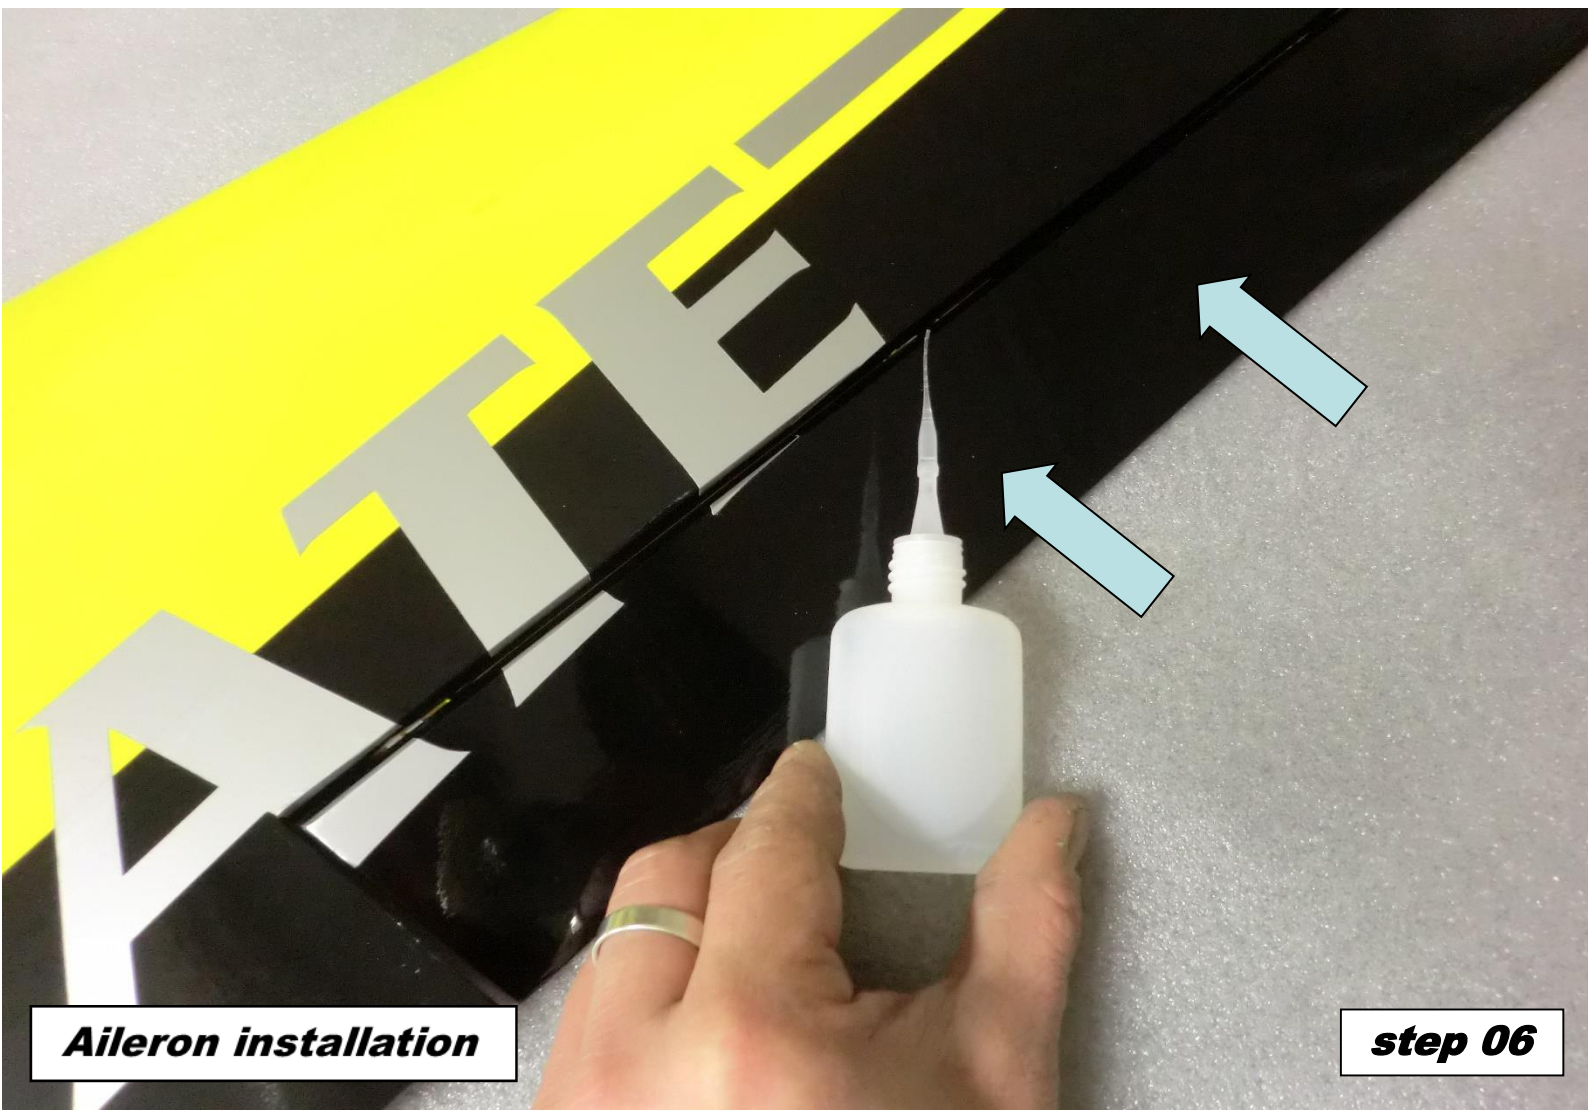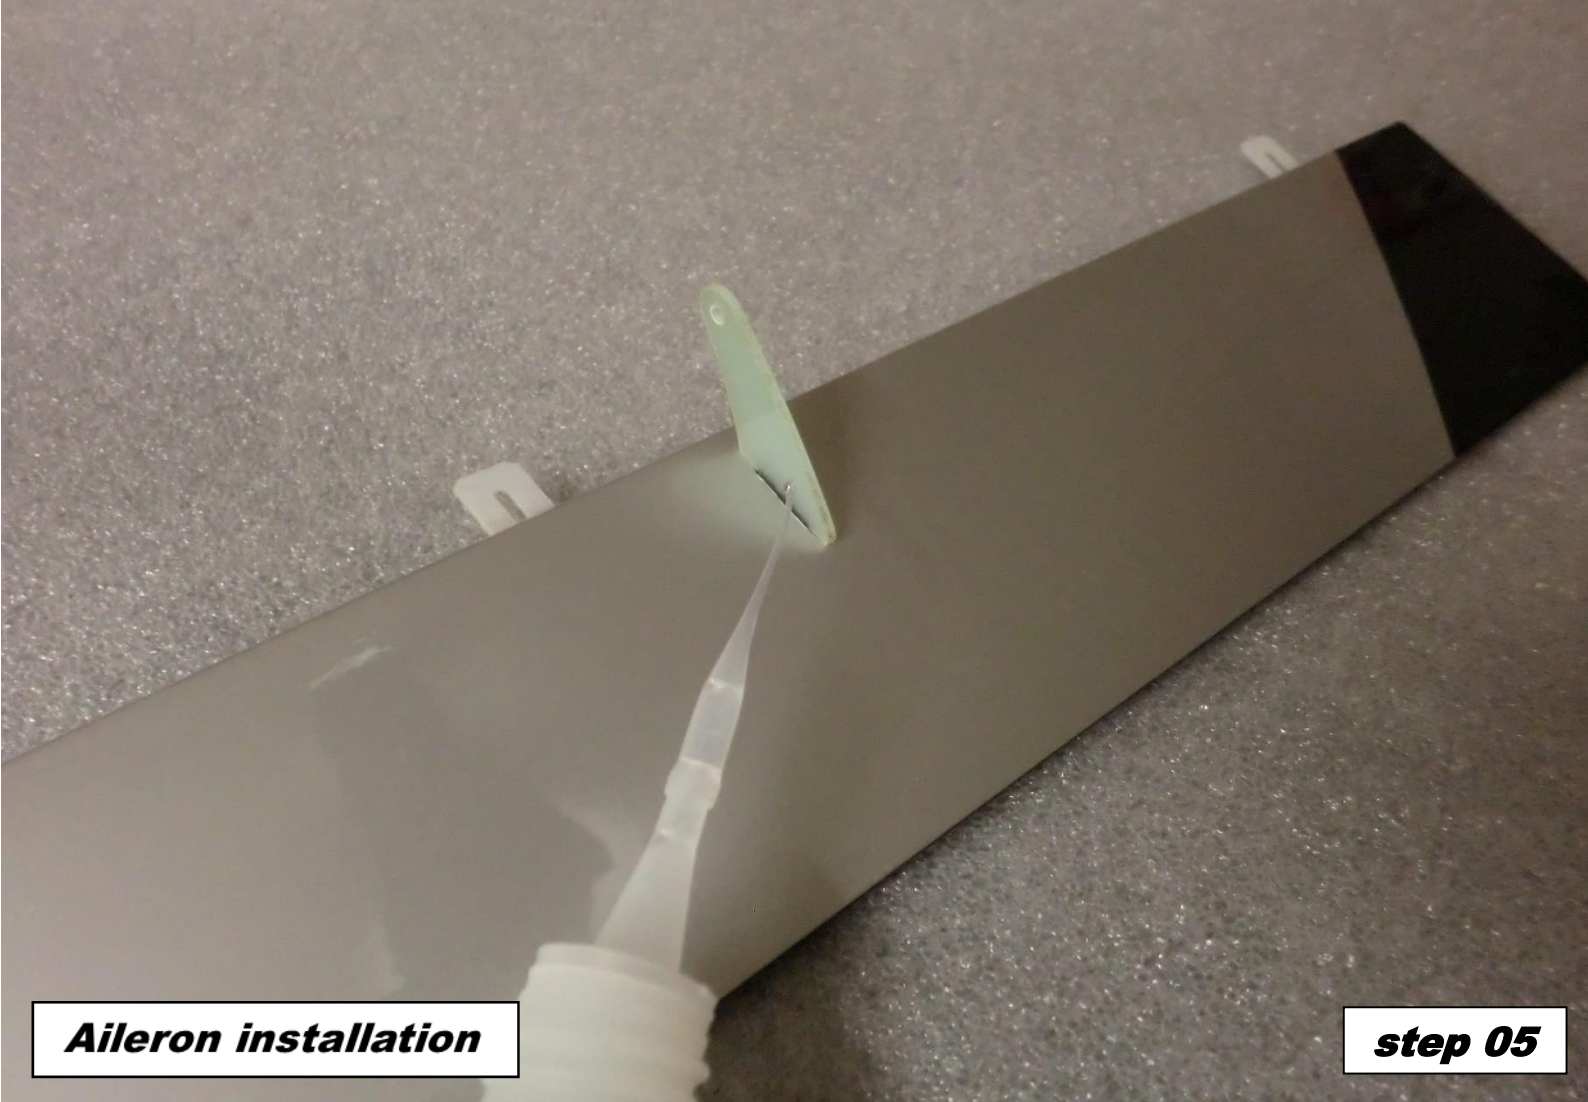




Aileron installation

step 07

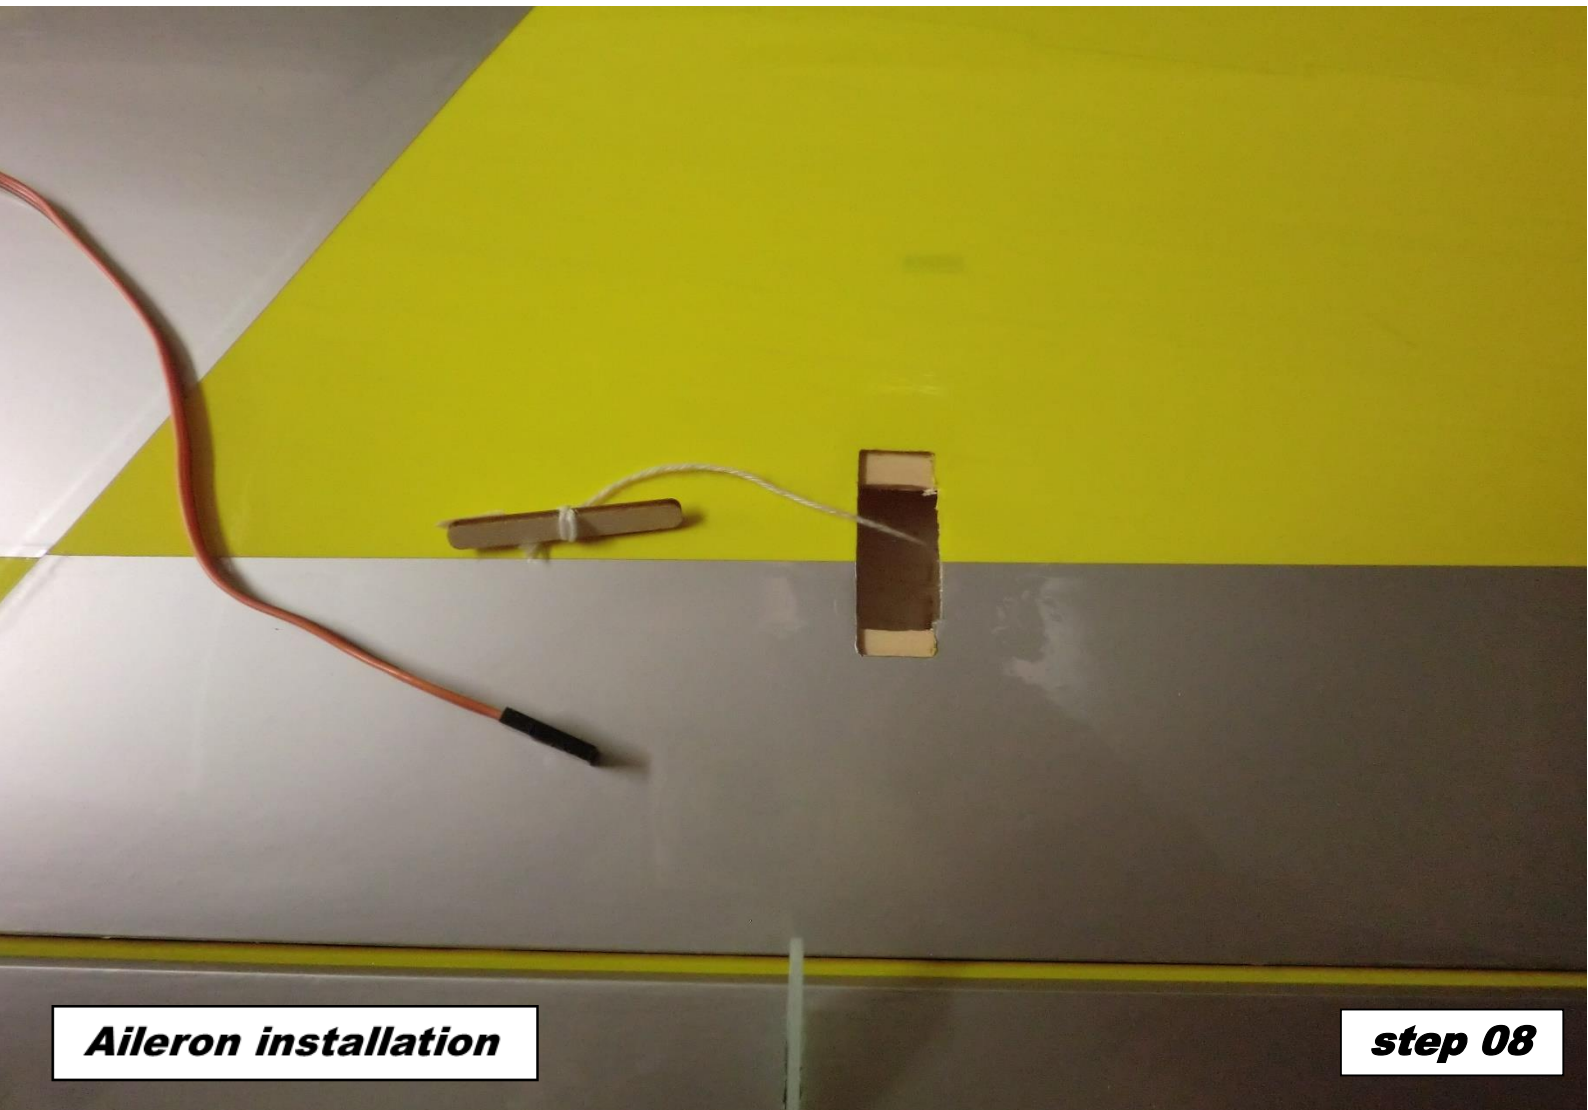

Aileron installation

step 08

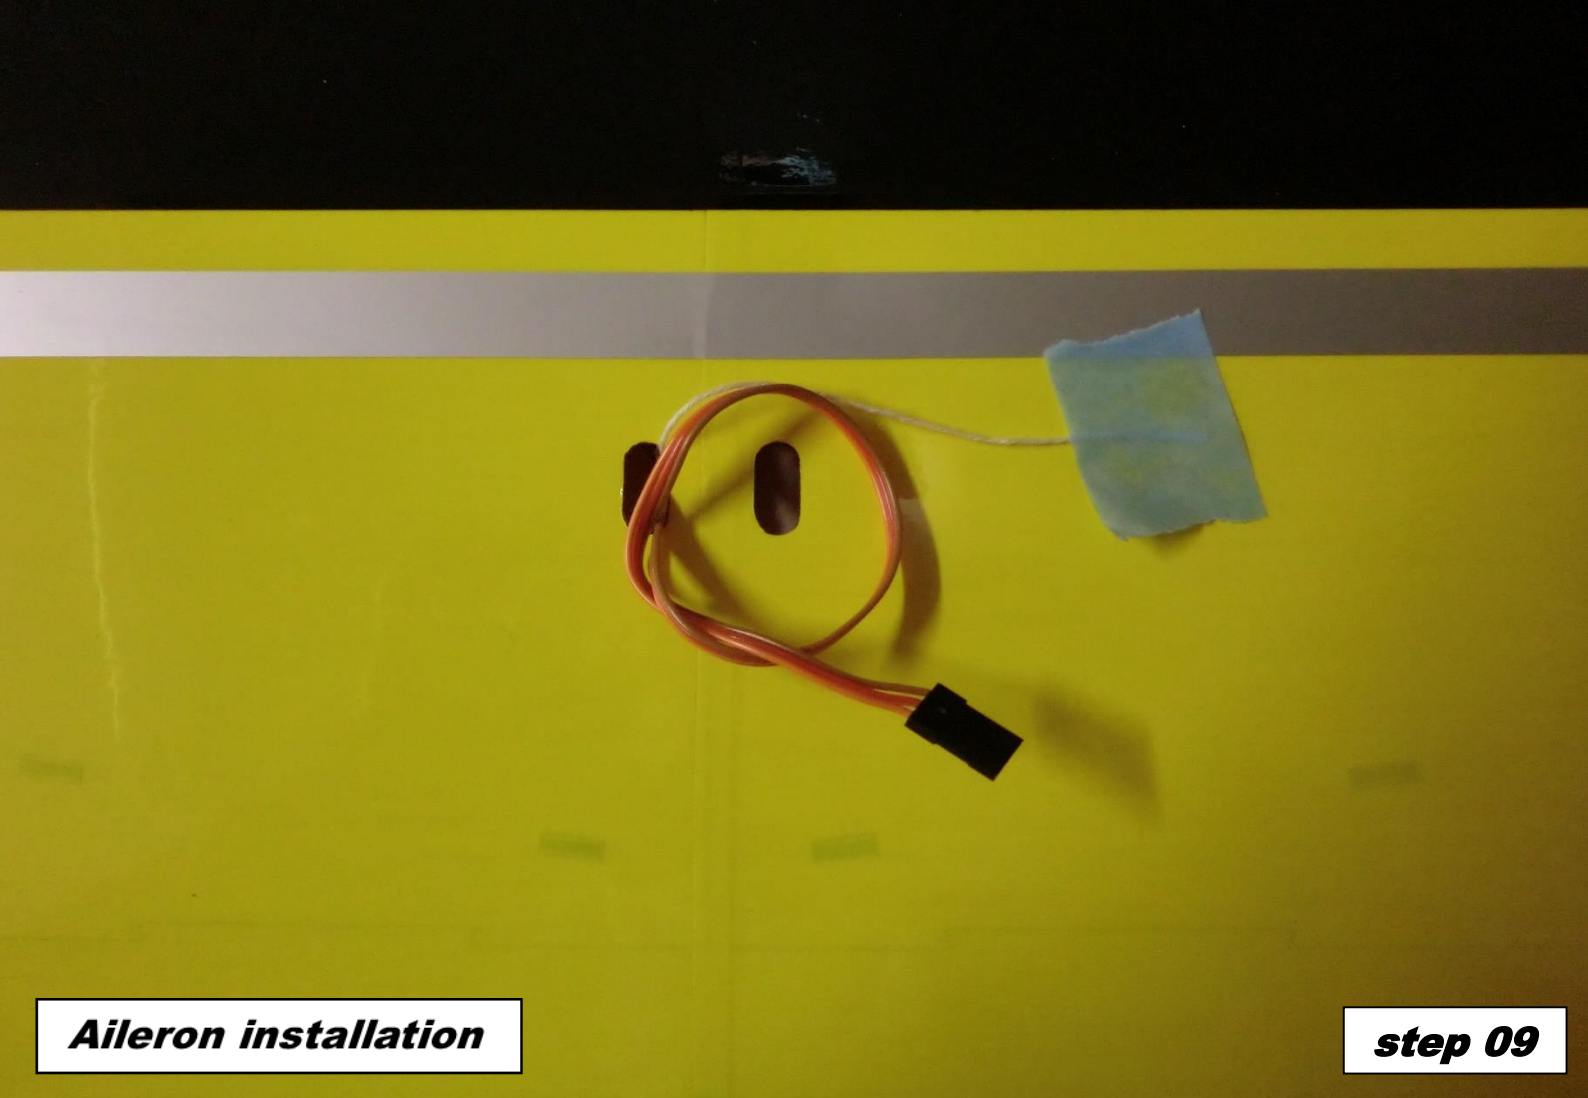


Aileron installation

step 09




Aileron installation

step 10

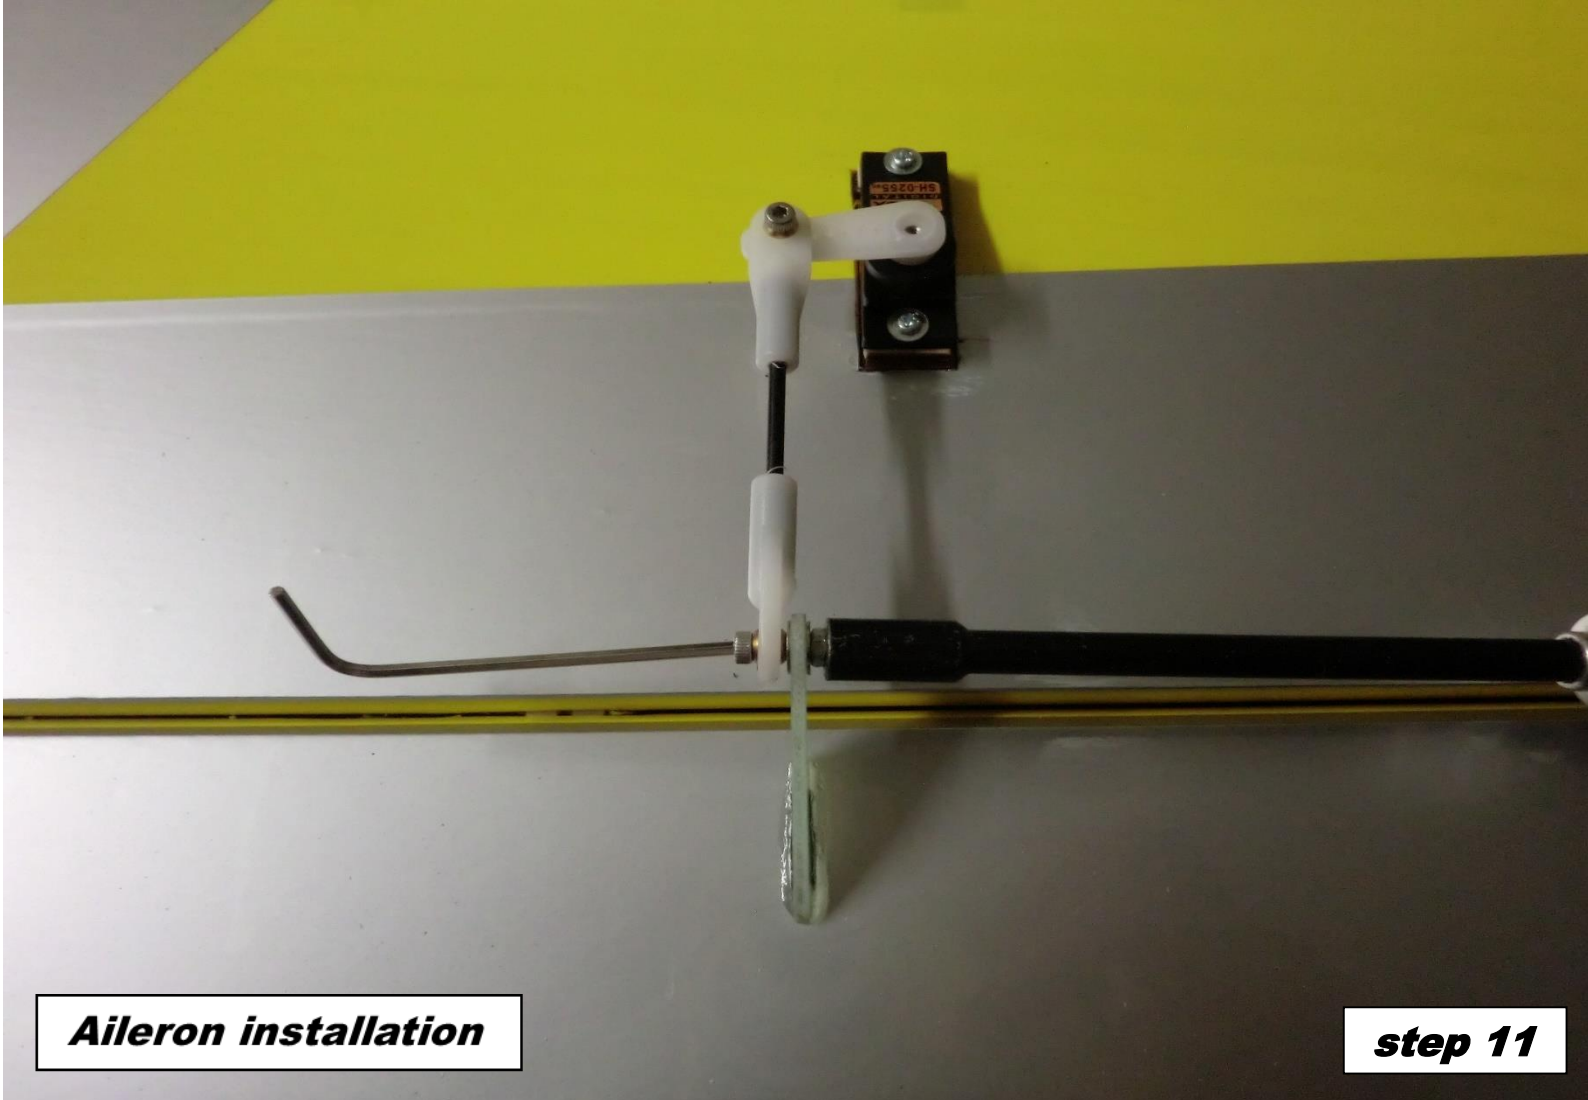

Aileron installation


step 11

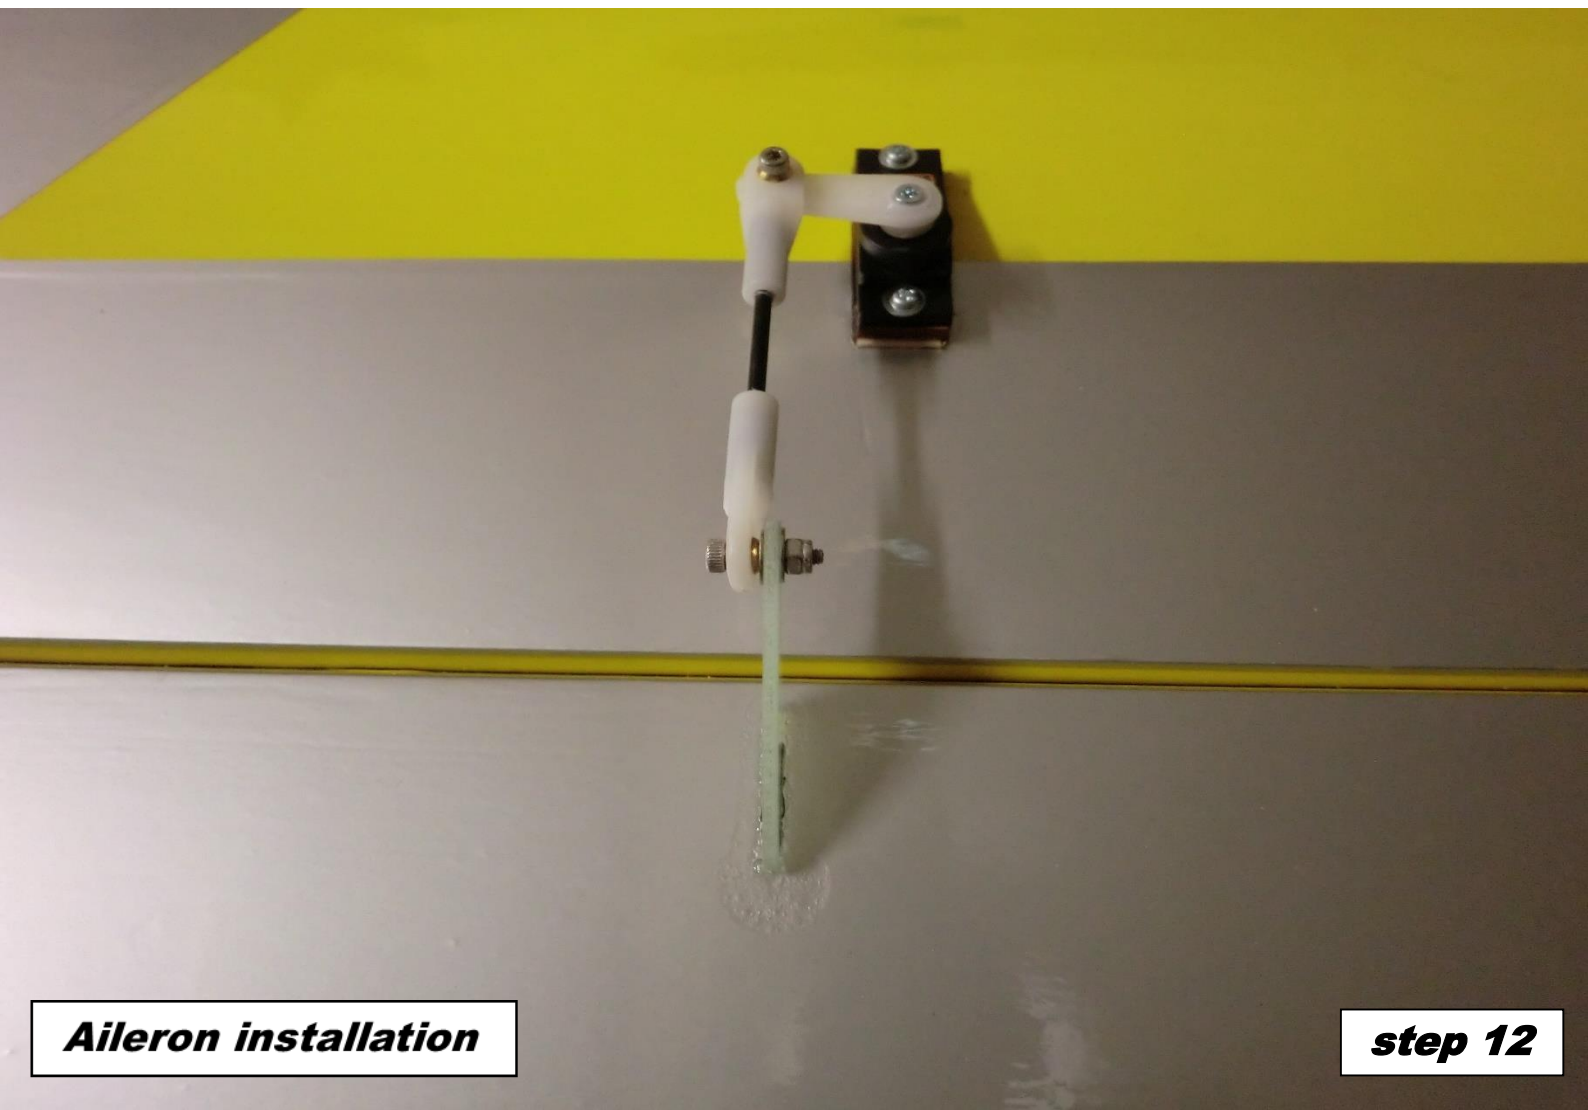

Aileron installation


step 12

INSTALL BOTTOM WING

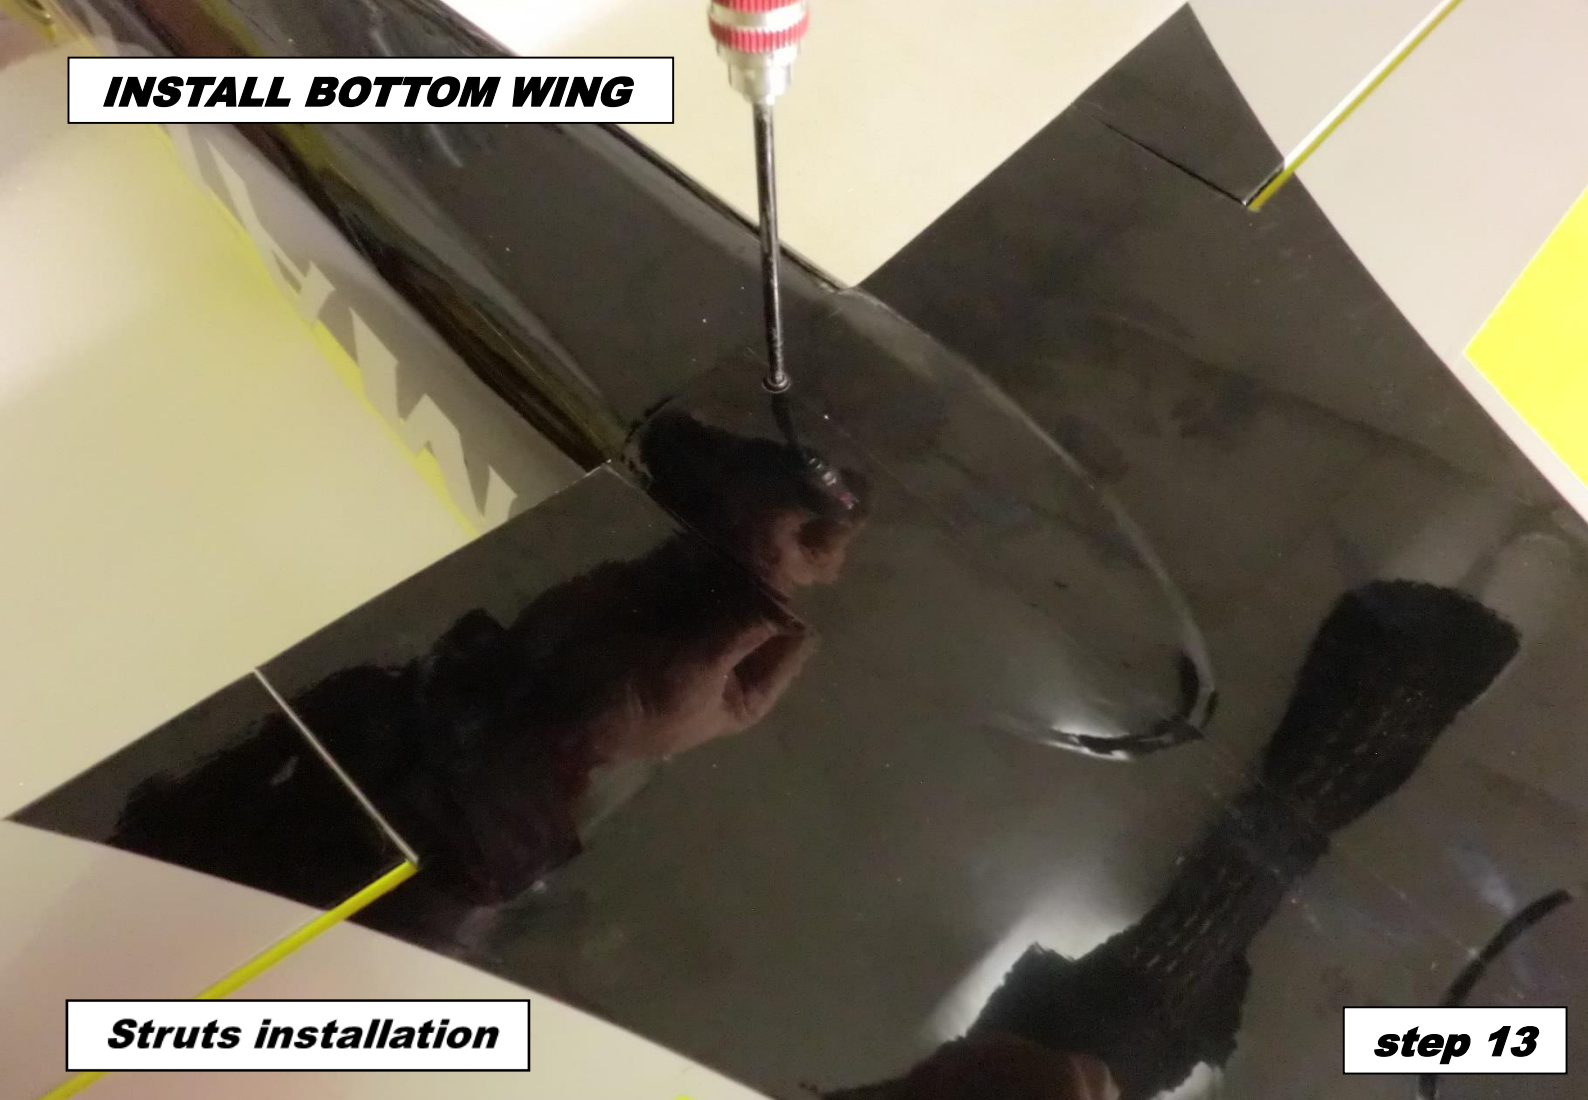

Struts installation

step 13

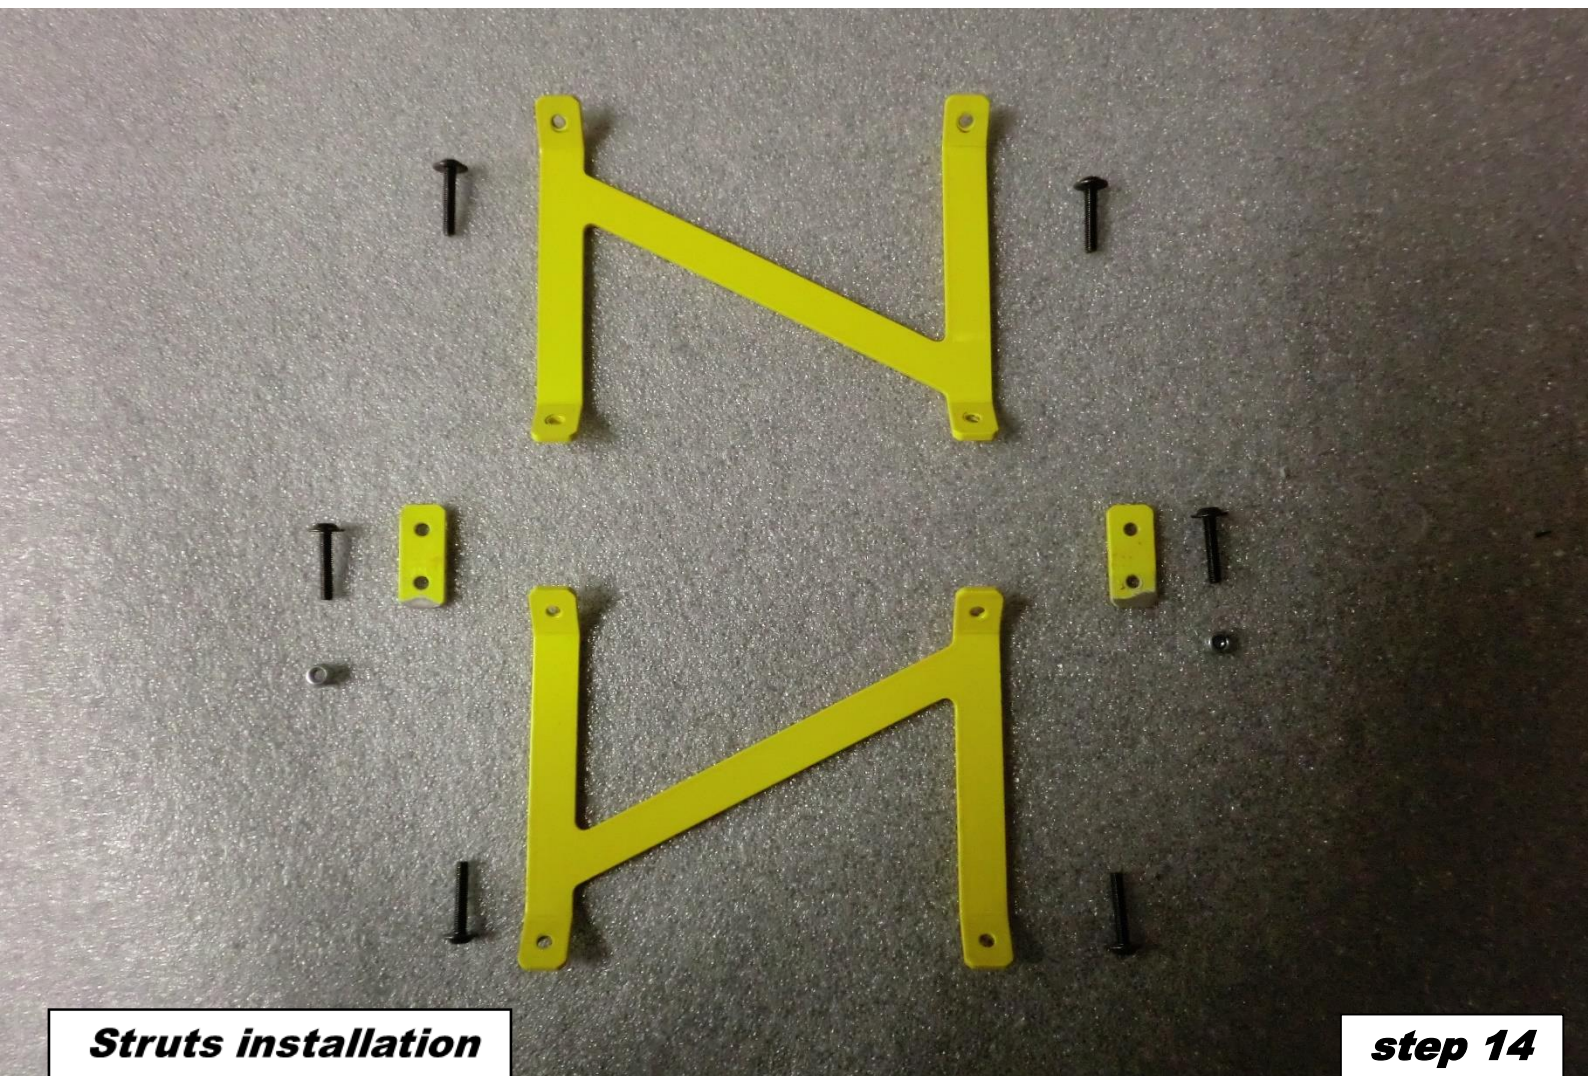


Struts installation

step 14



Struts installation

step 15

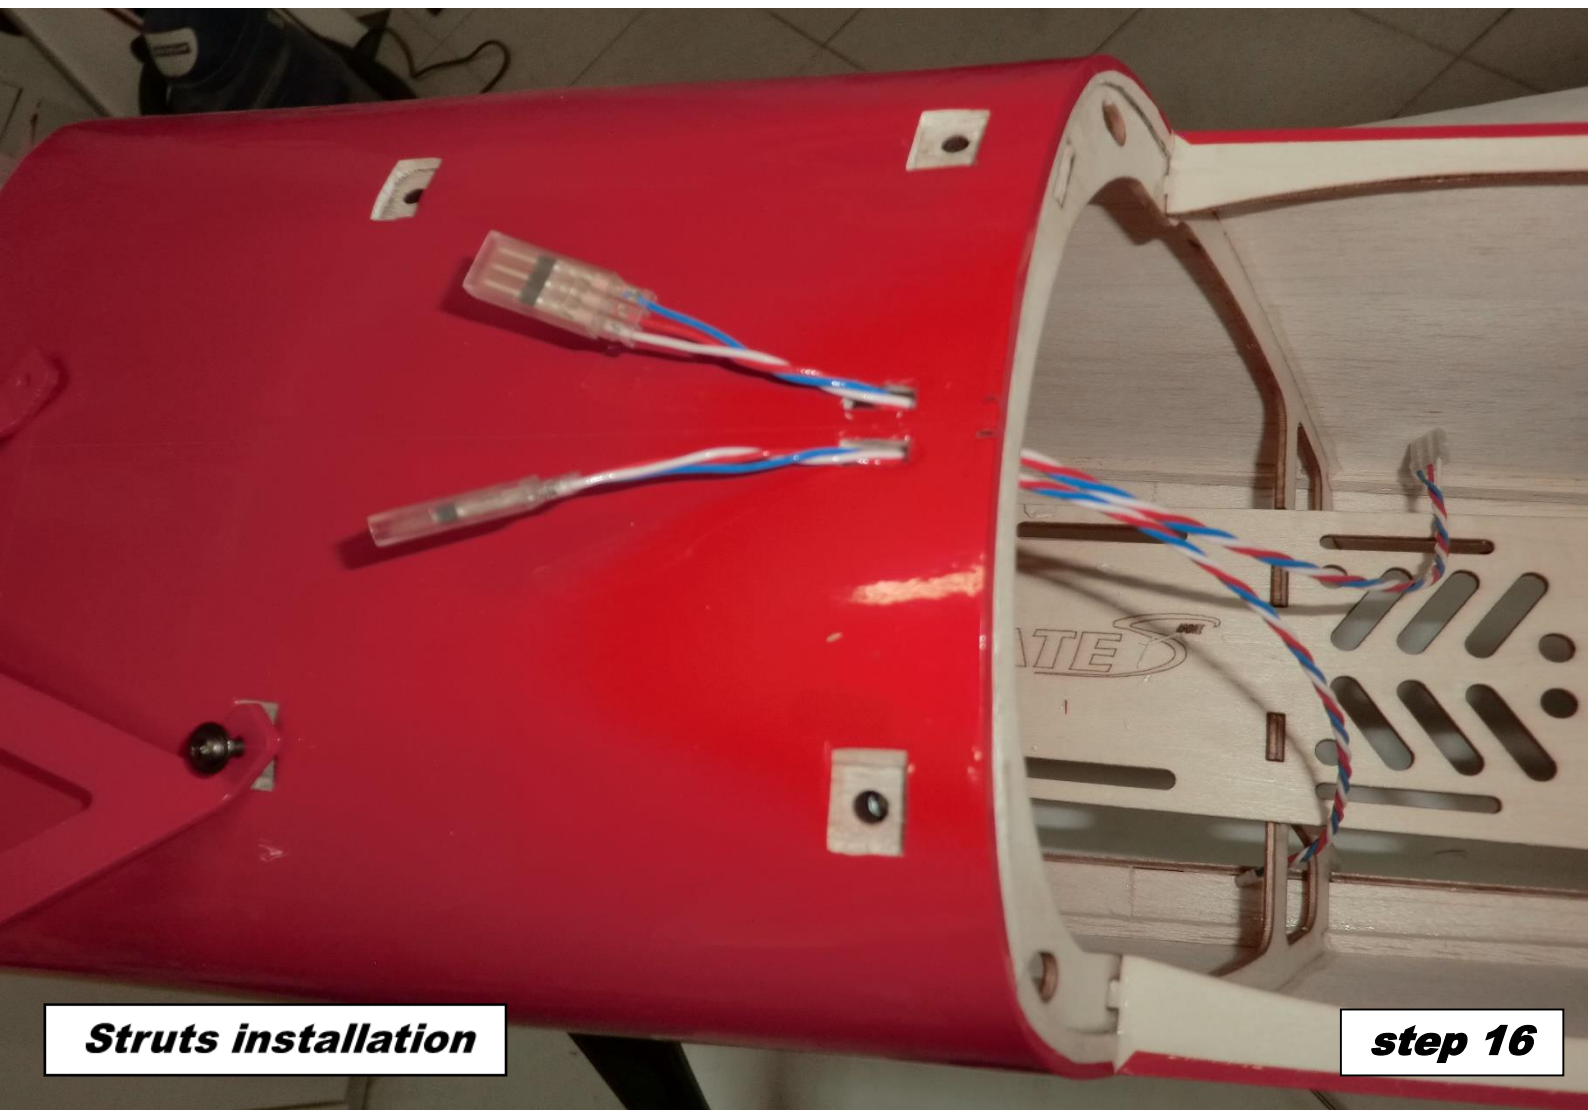


Struts installation

step 16



Struts installation


step 17

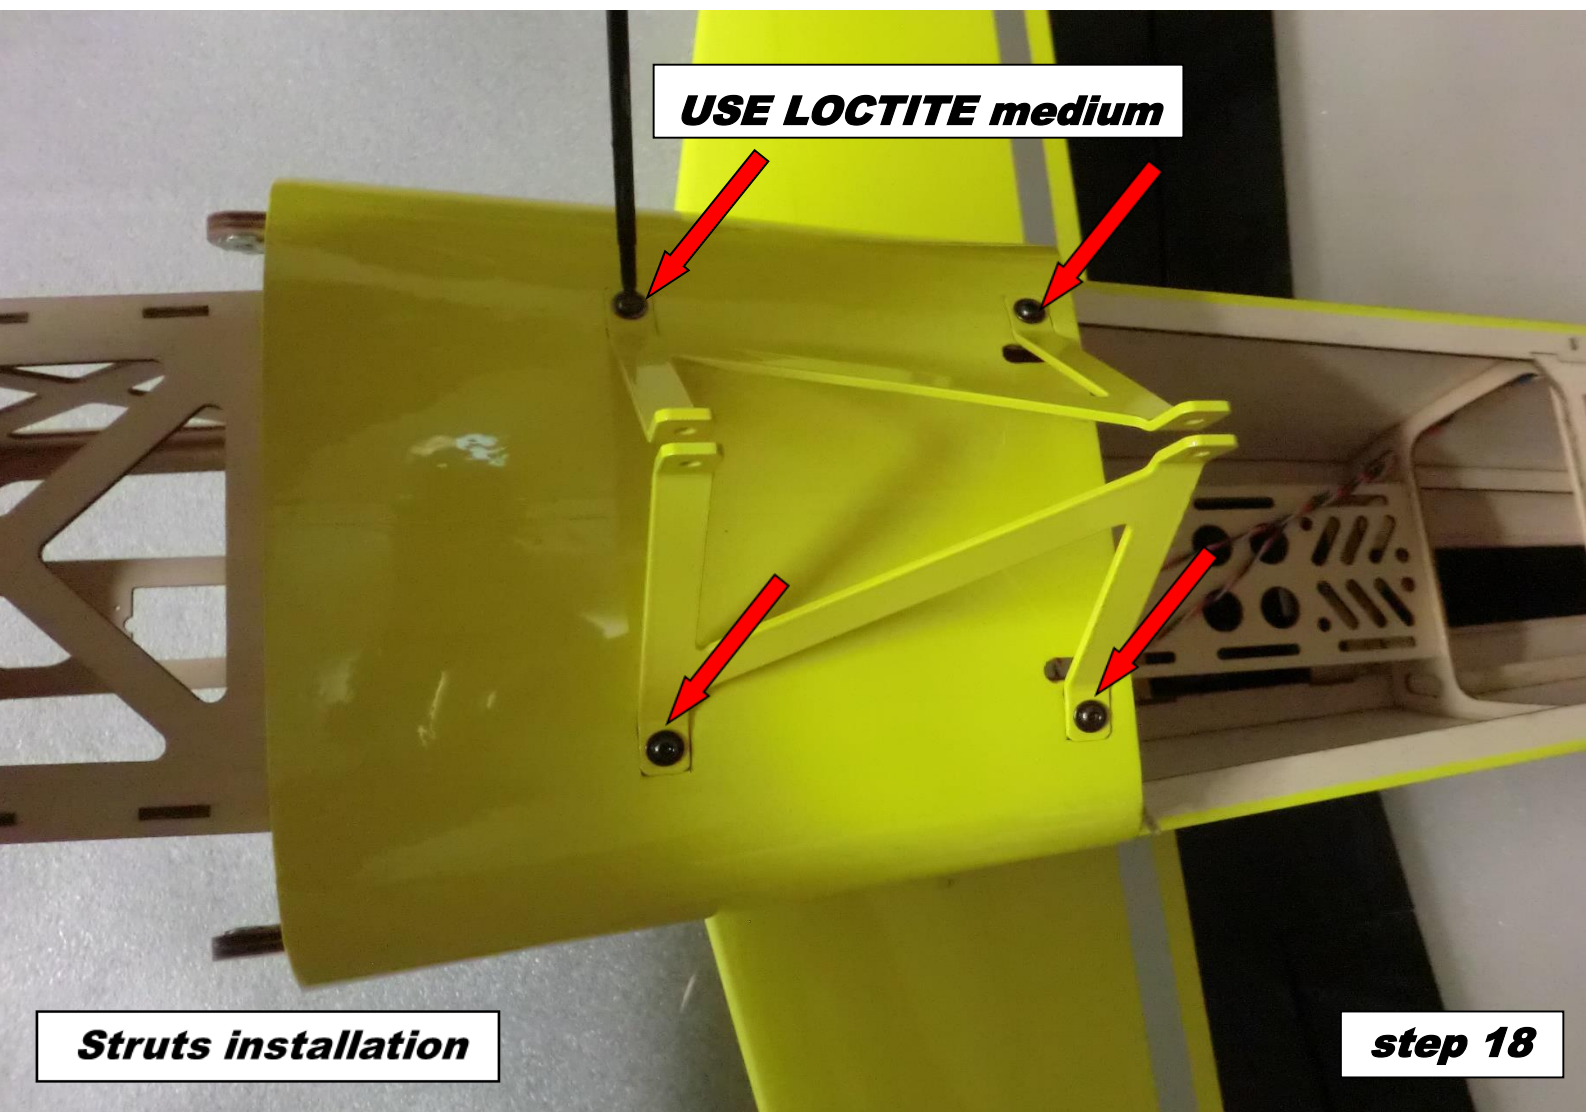

USE LOCTITE medium


Struts installation

step 18

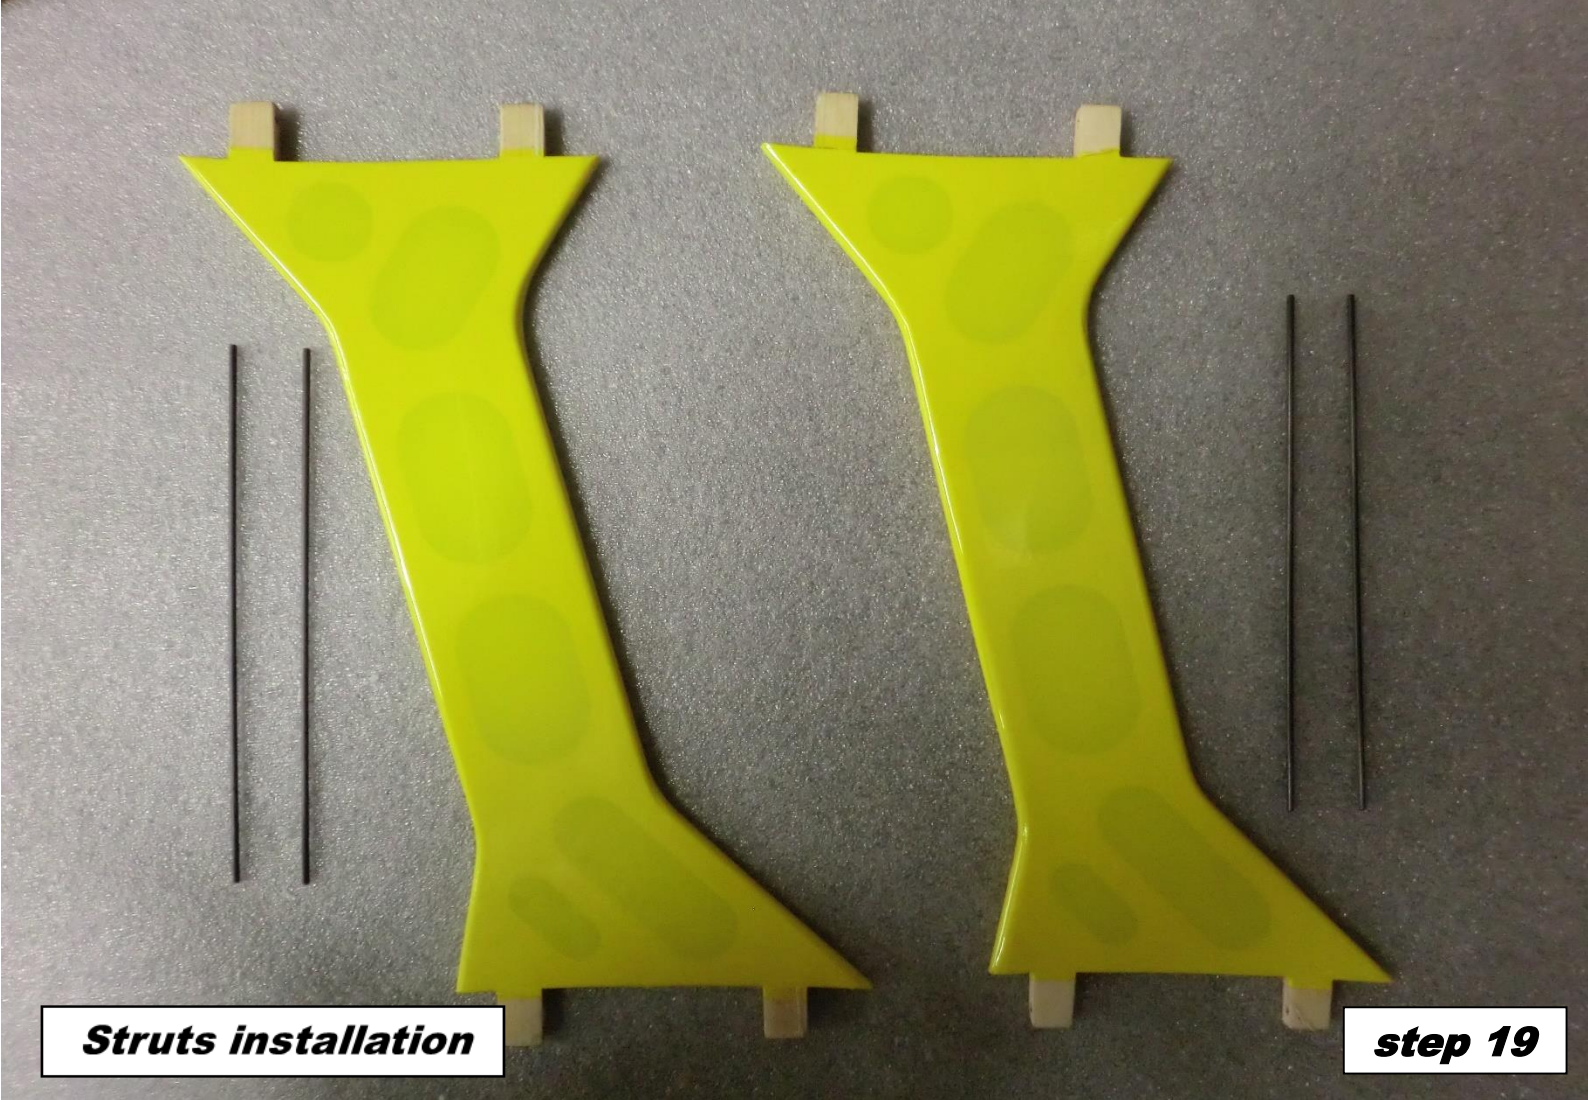

Struts installation

step 19

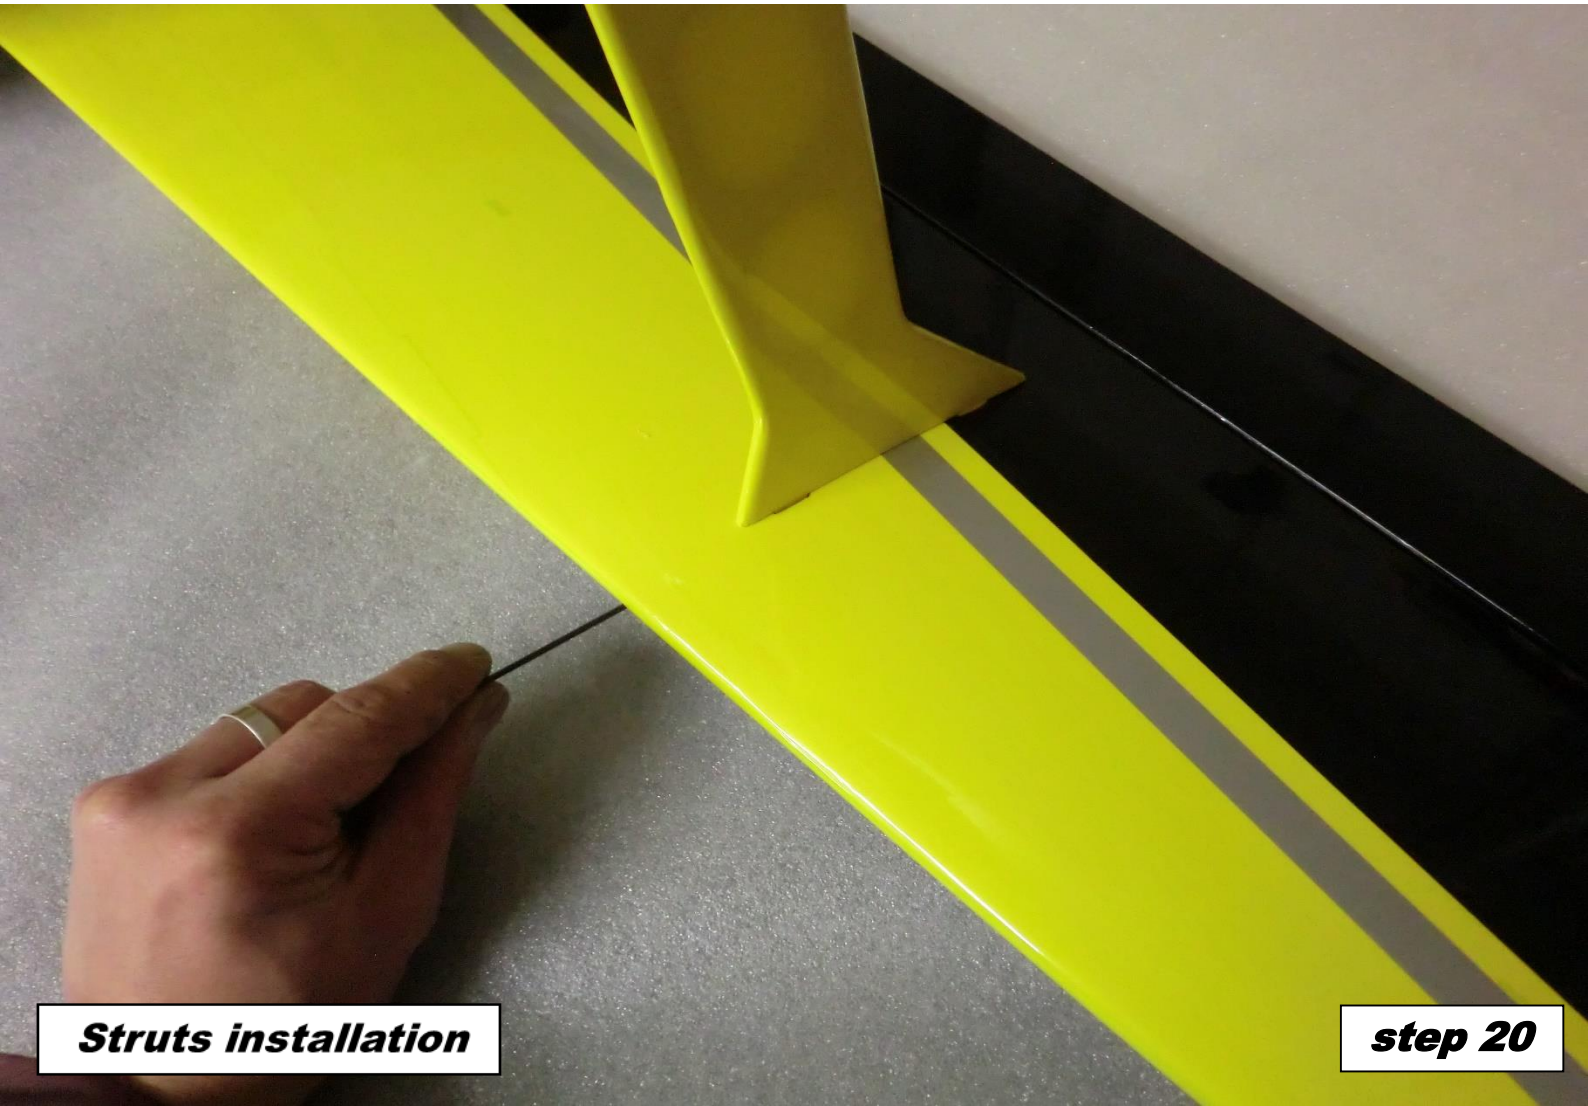


Struts installation

step 20



Struts installation

step 21

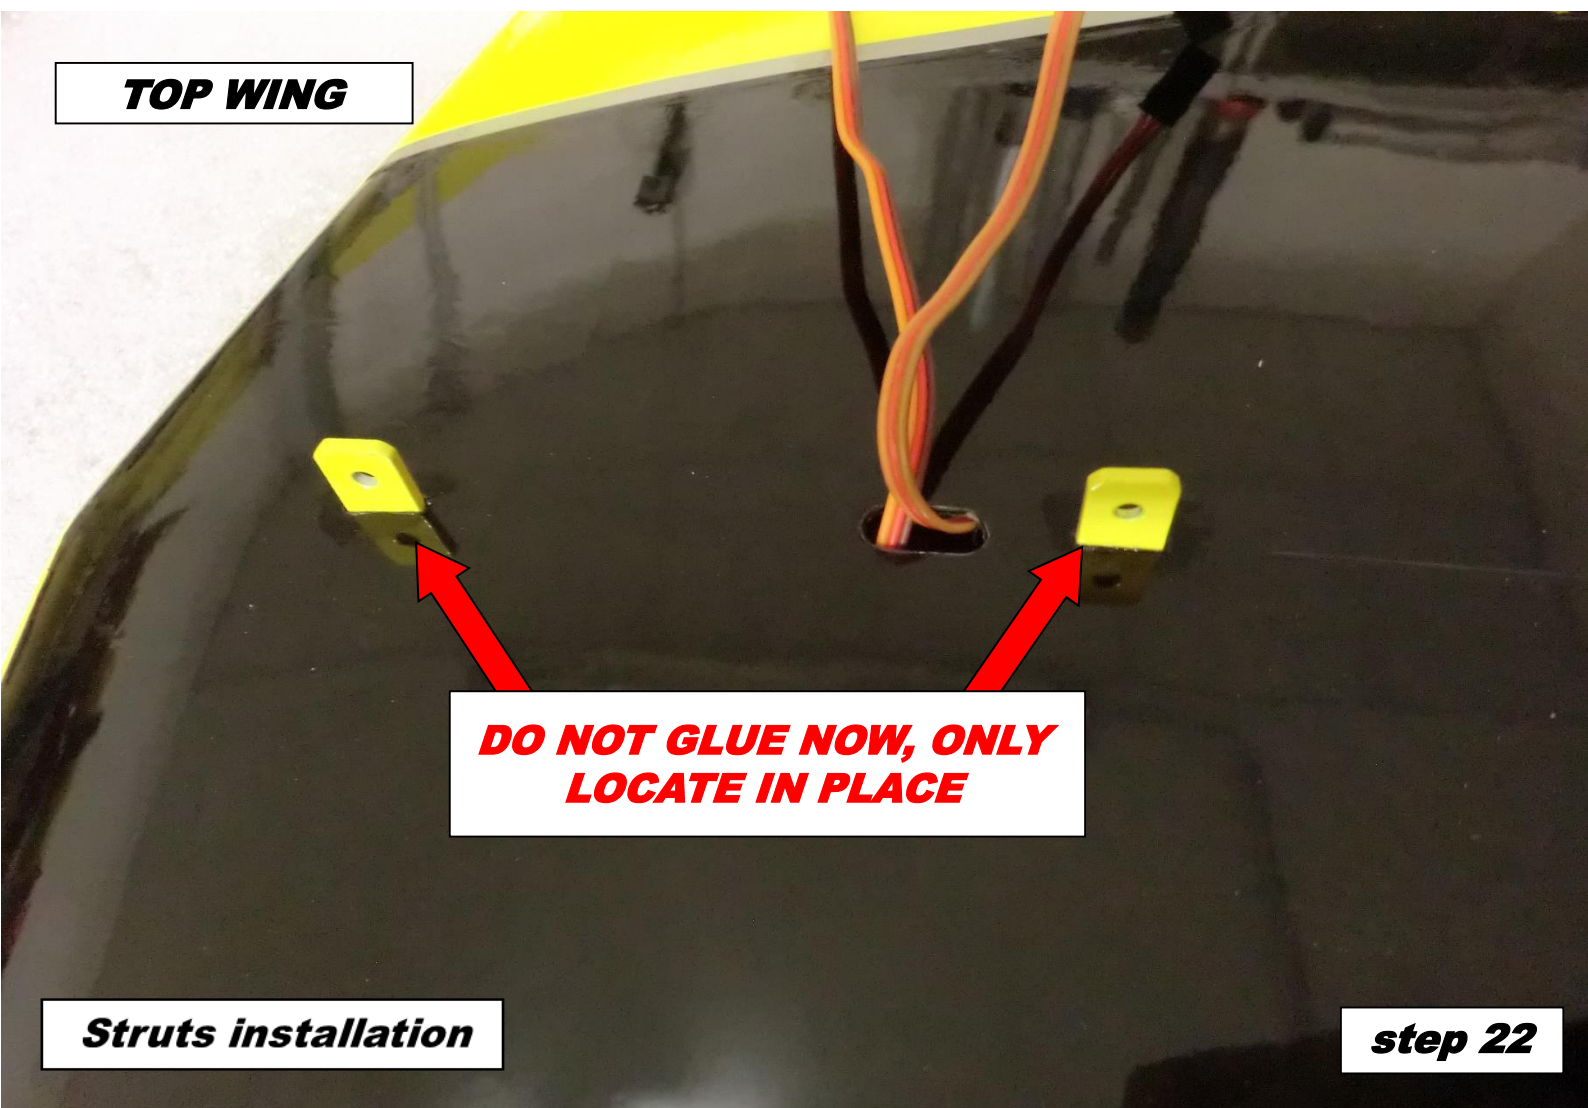

TOP WING

***DO NOT GLUE NOW, ONLY
LOCATE IN PLACE***

Struts installation

step 22

INSTALL TOP WING

Struts installation

step 23

MARK ONLY

Struts installation

step 24

REMOVE TOP WING


Struts installation

step 25

REMOVE PAINT SANDING

Struts installation

step 26

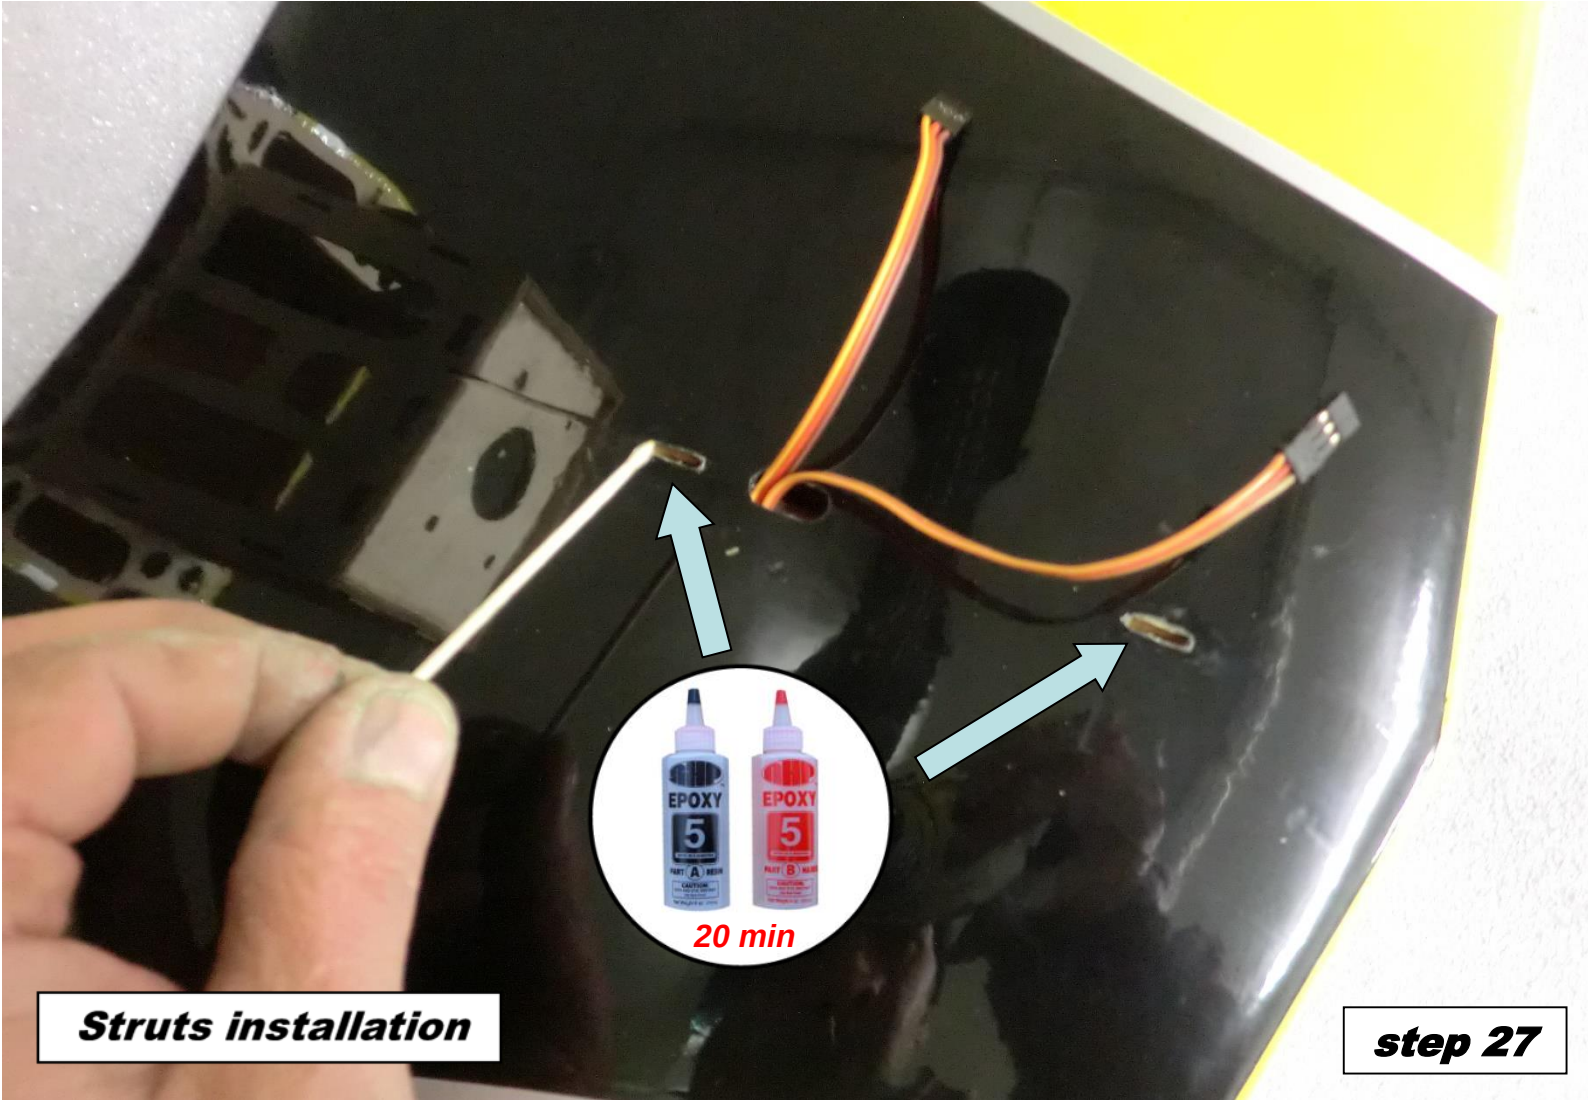

Struts installation


step 27



REINSTALL TOP WING

Struts installation

step 28

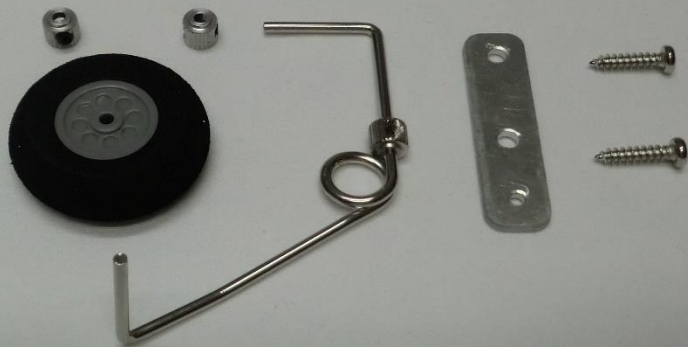

Rudder installation

step 29




Rudder installation

step 30



Rudder installation

step 31

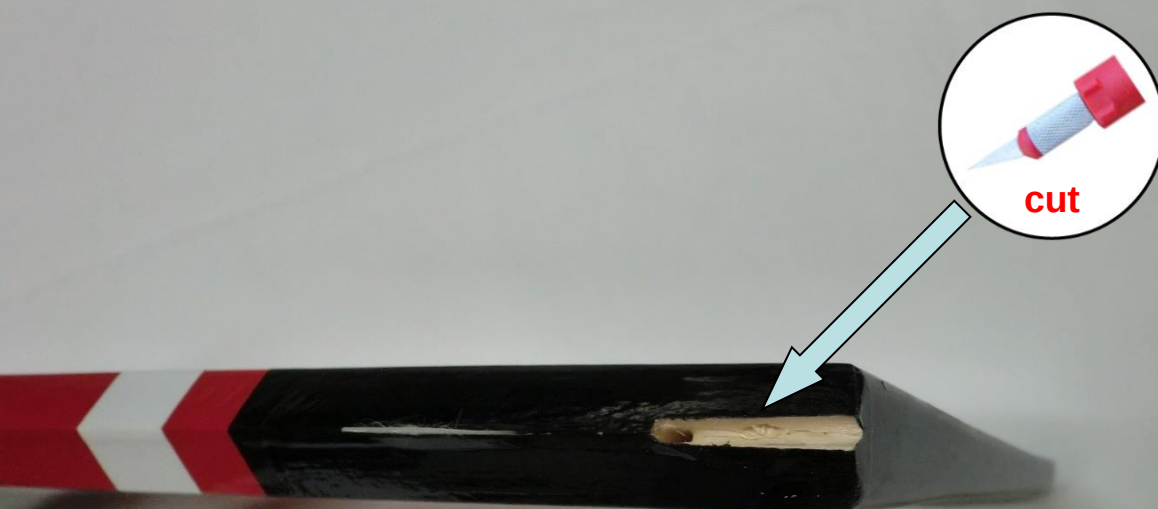


Rudder installation

step 32




Rudder installation

step 33

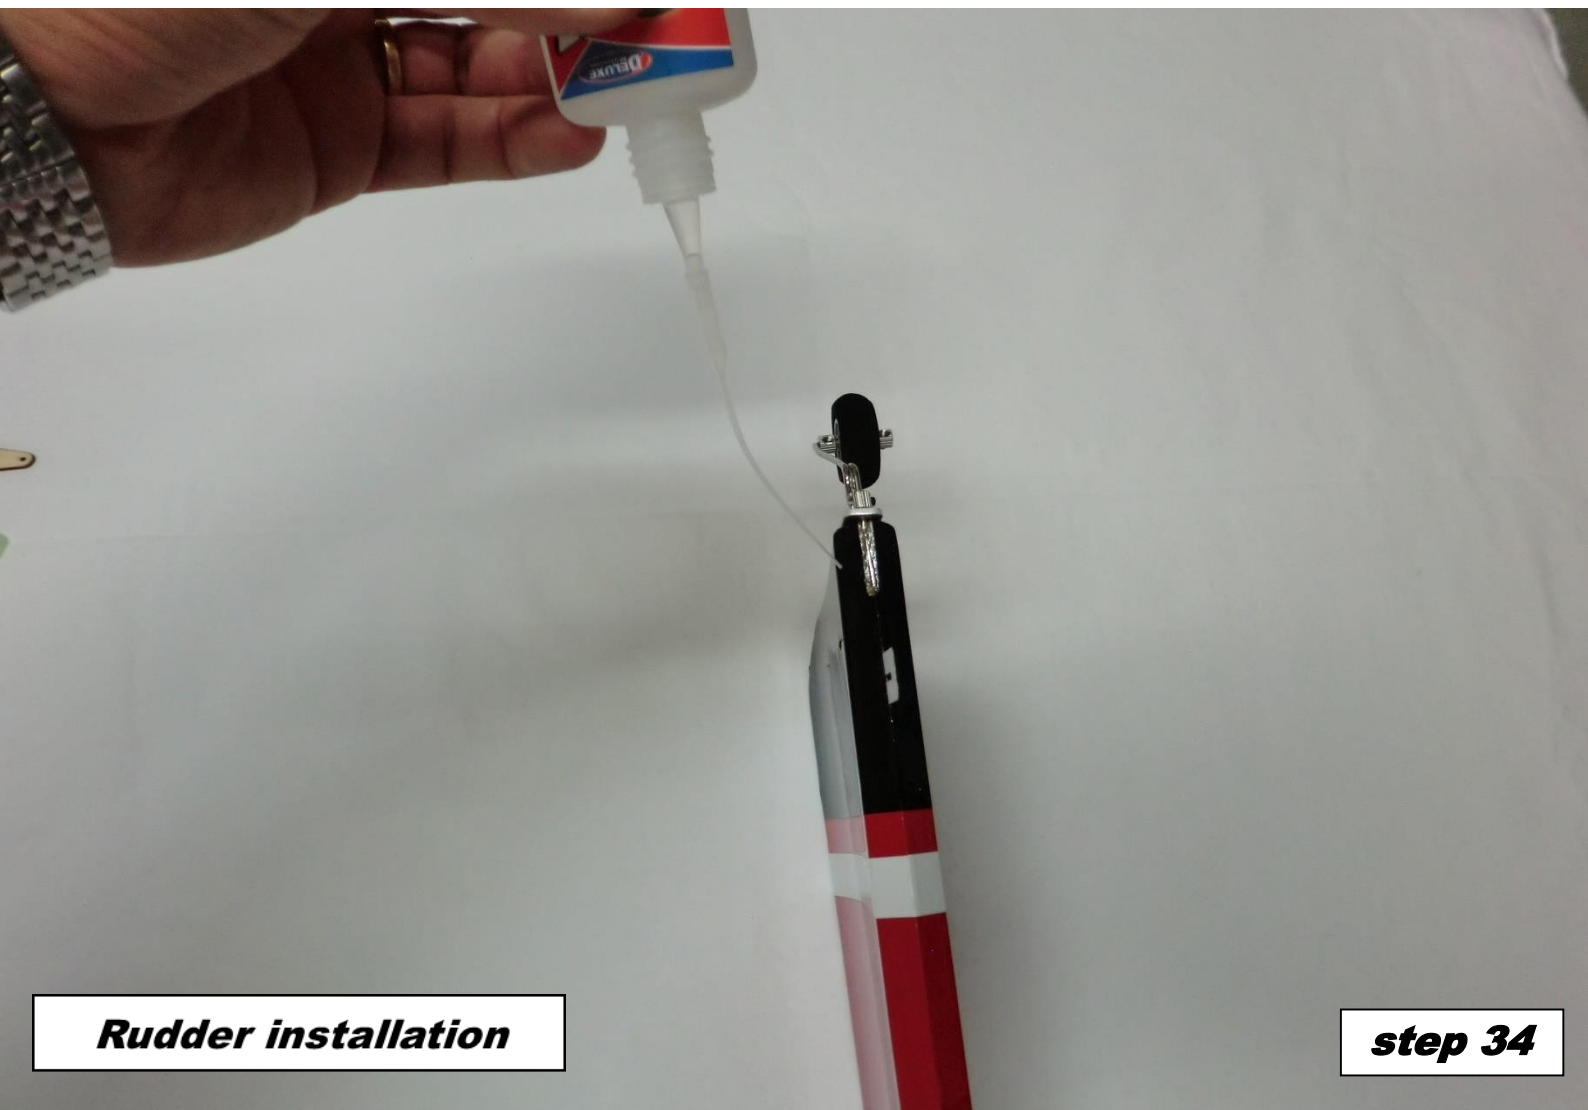

Rudder installation

step 34

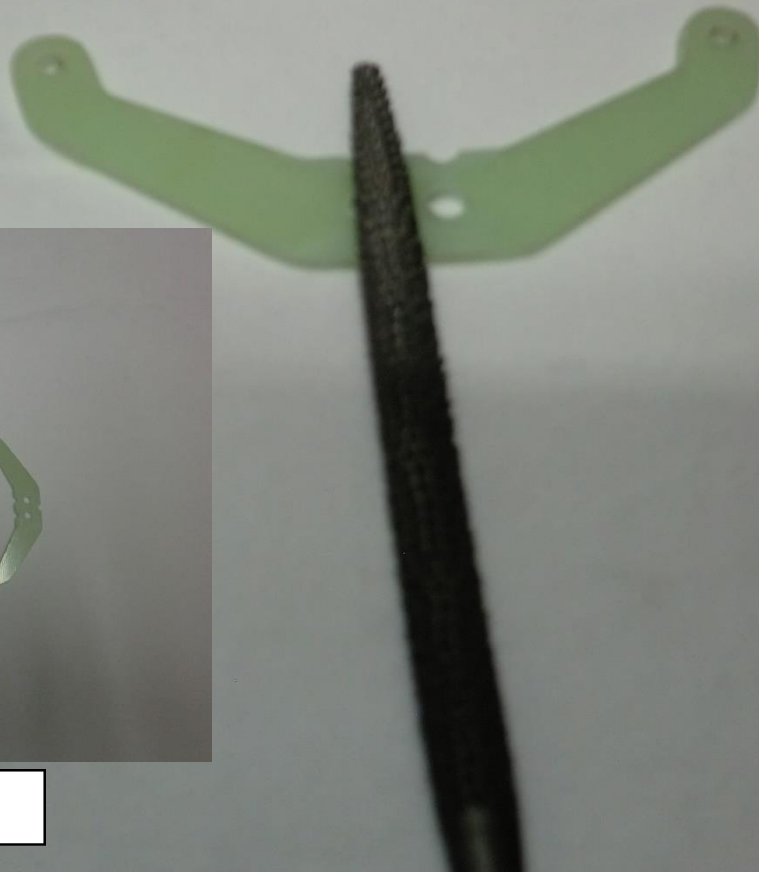

Rudder installation

step 35



Rudder installation


step 36





Rudder installation

step 37

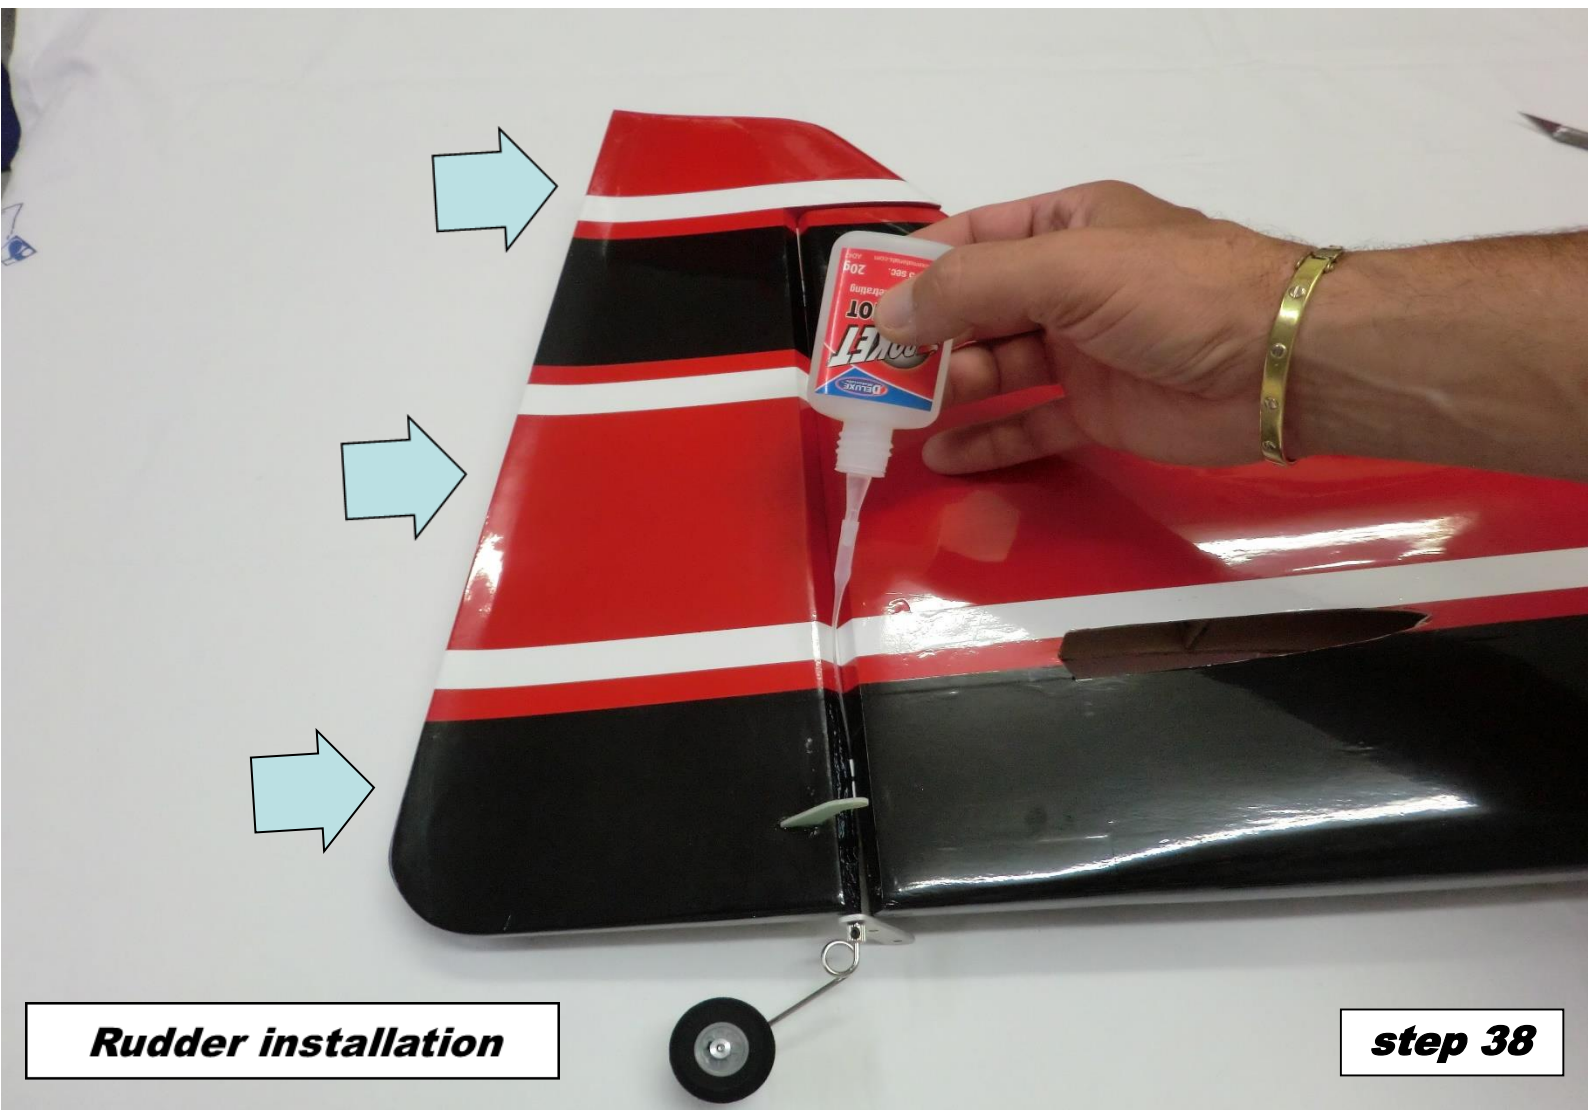

Rudder installation

step 38



Rudder installation

step 39




Rudder installation

step 40




Rudder installation

step 42

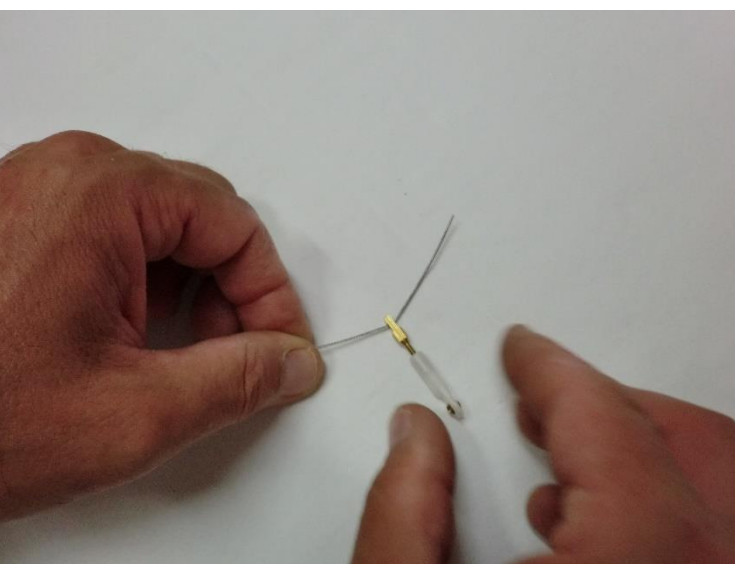

Rudder installation

step 43

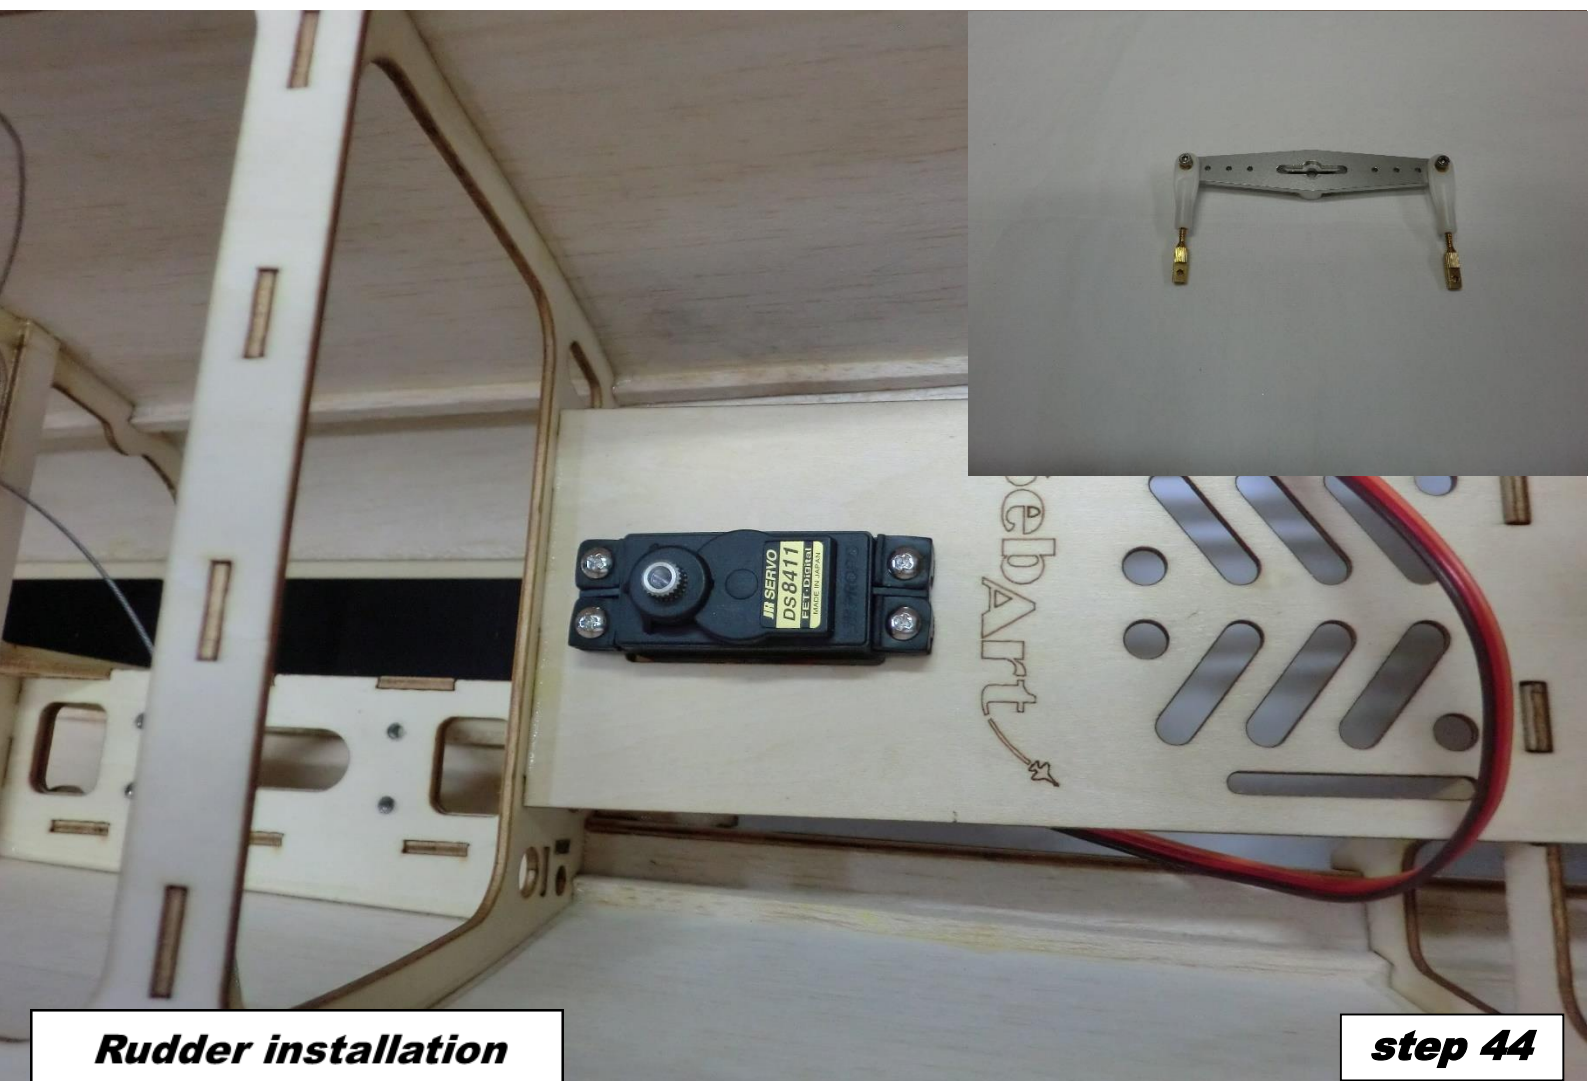



Rudder installation

step 45



Rudder installation

step 46



Elevator installation

step 47



Elevator installation

step 48




Elevator installation


step 49



Elevator installation


step 50

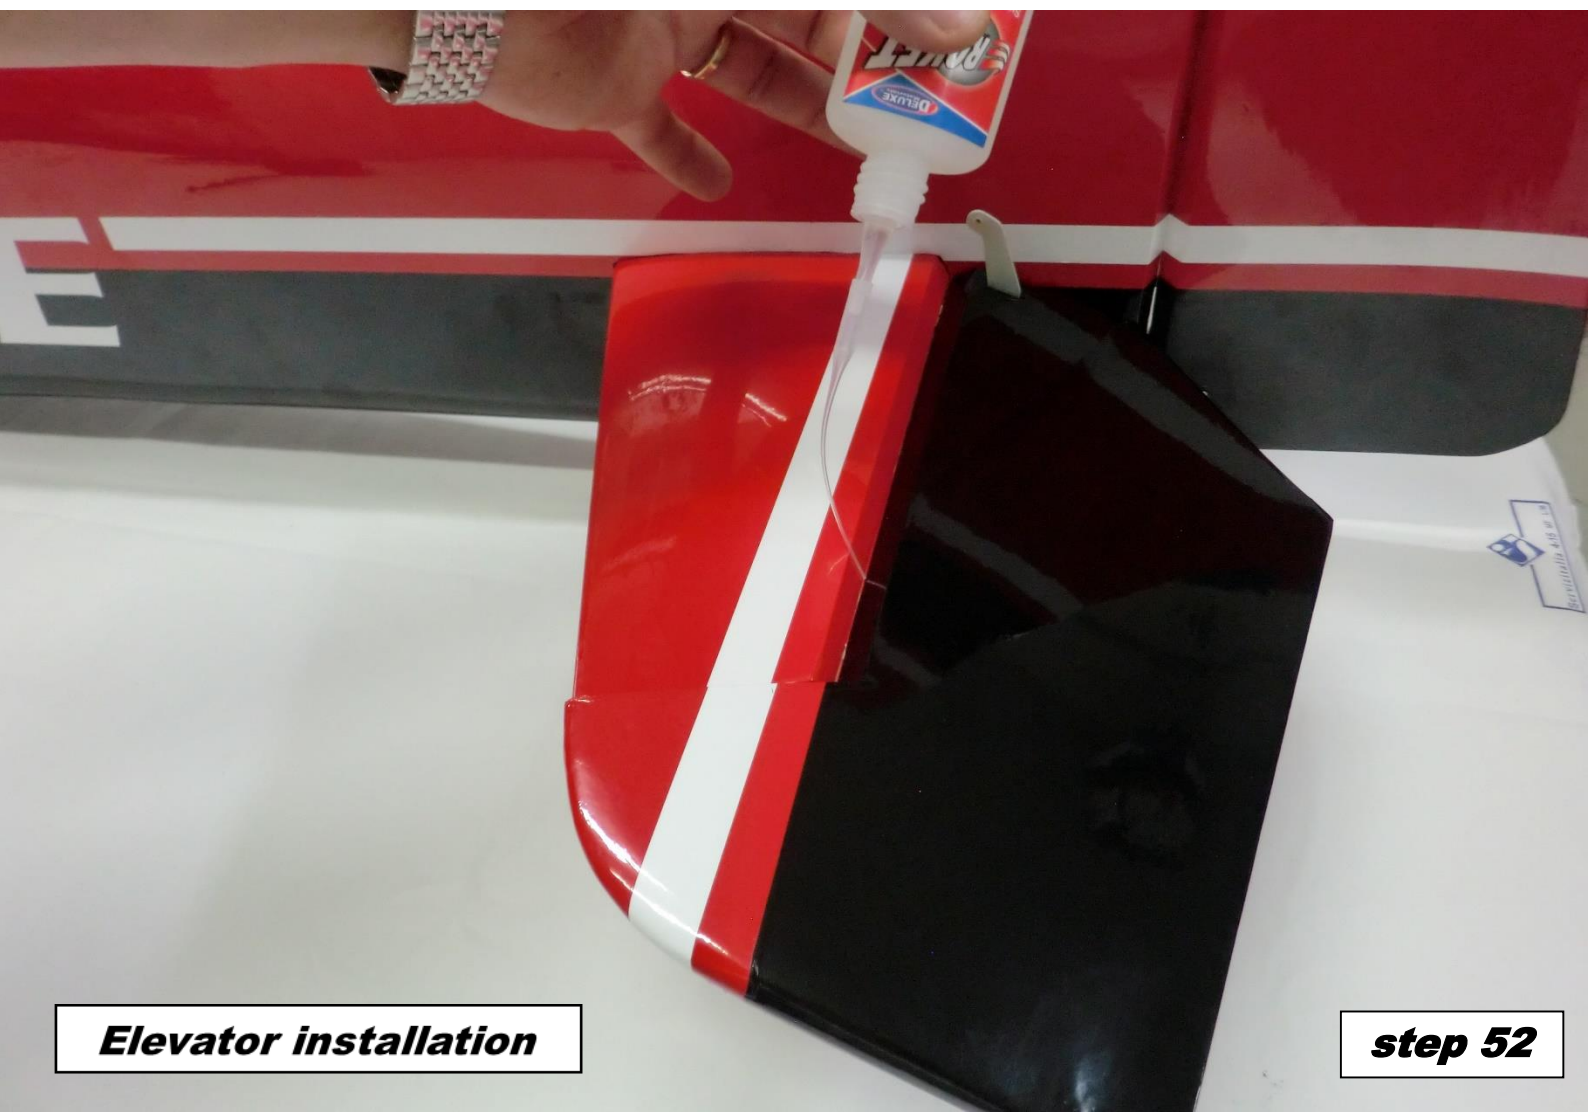

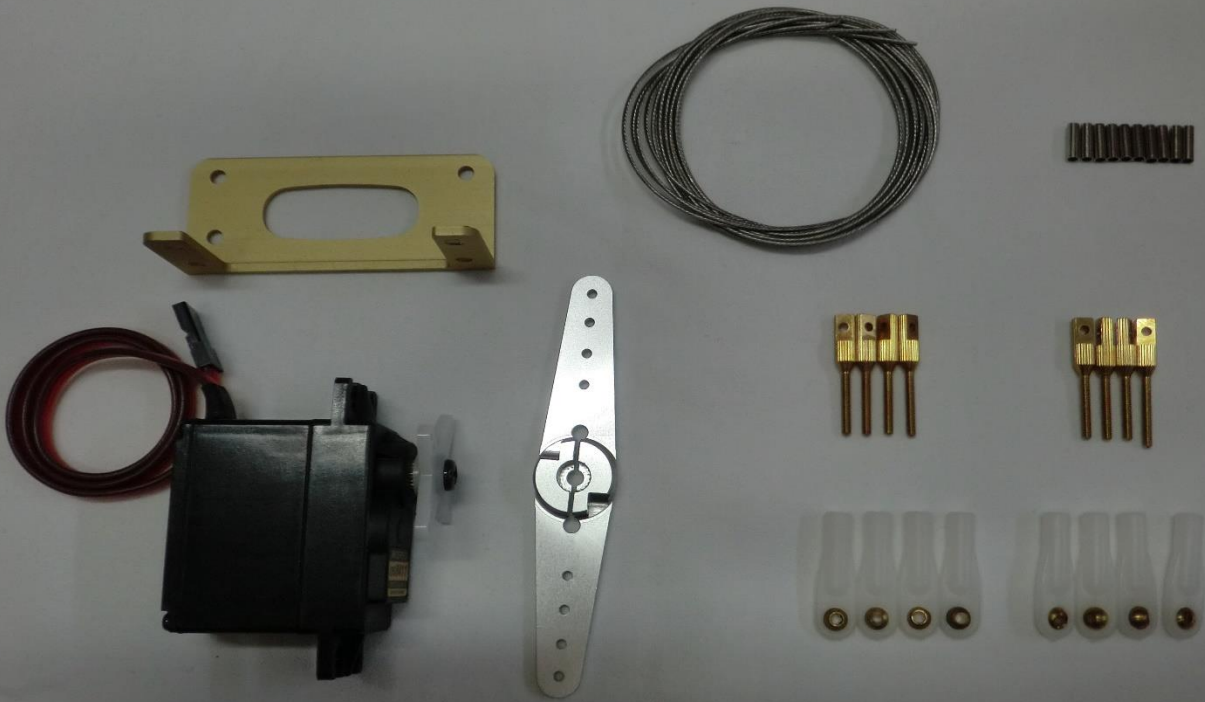

Elevator installation

step 53

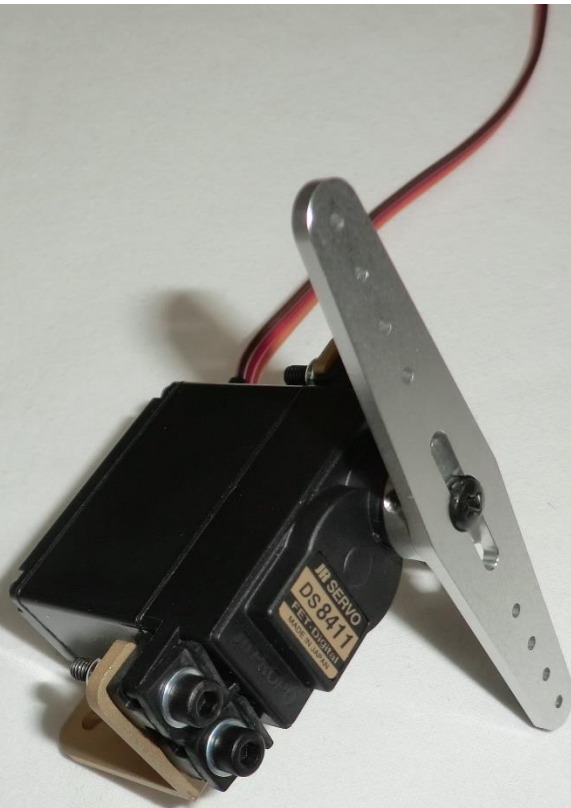

Elevator installation

step 54



Elevator installation

step 55



Elevator installation

step 56




Elevator installation

step 57




Elevator installation

step 58

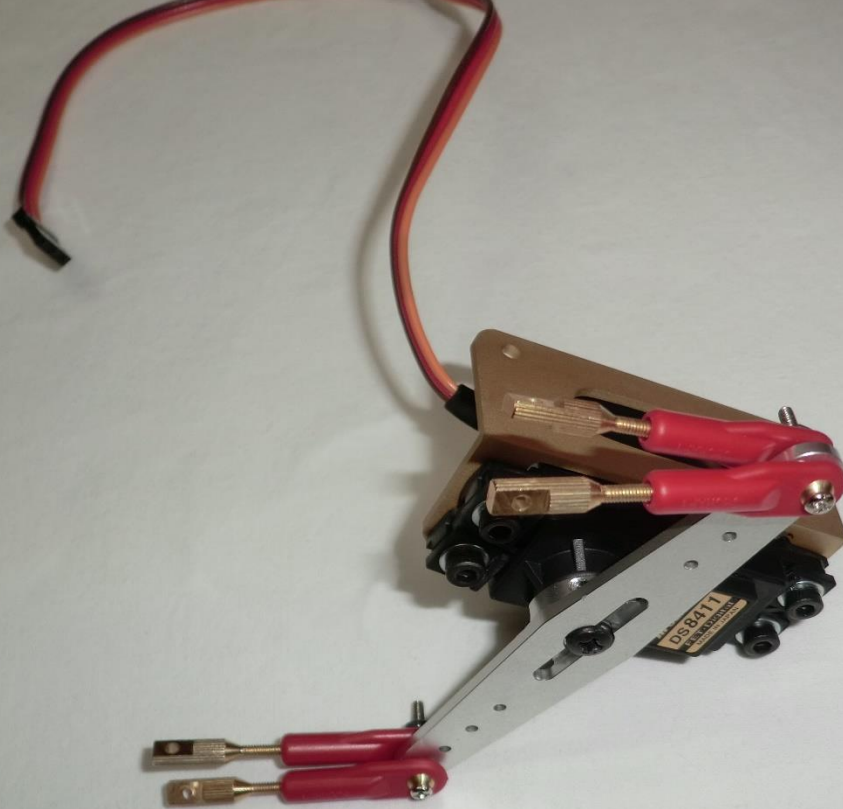


Elevator installation

step 59

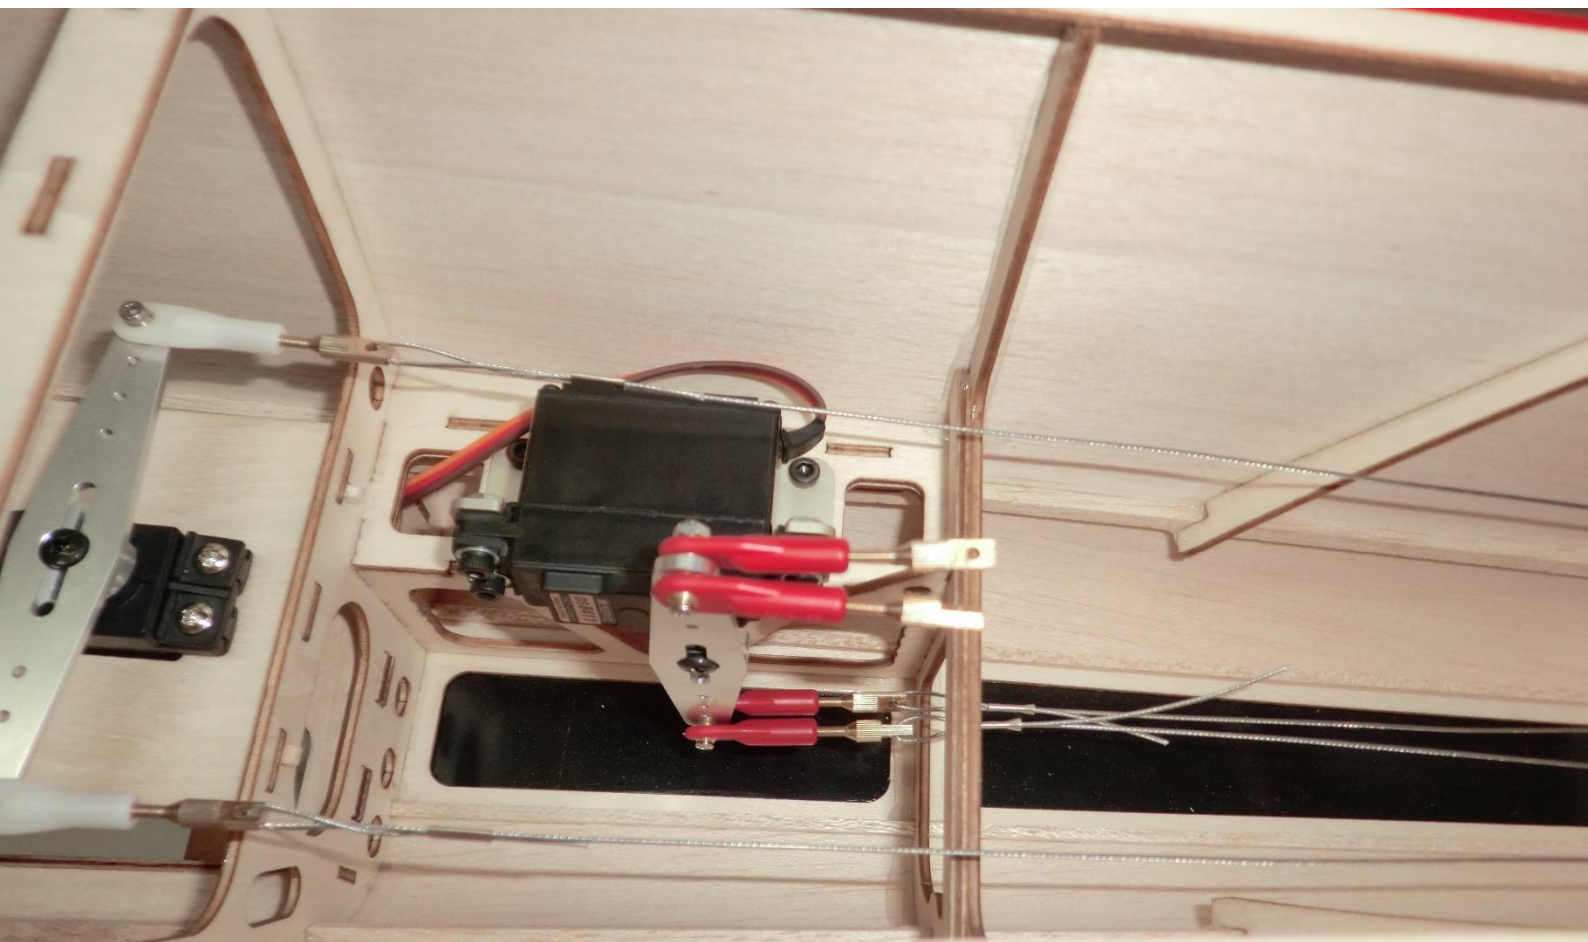


Elevator installation

step 60

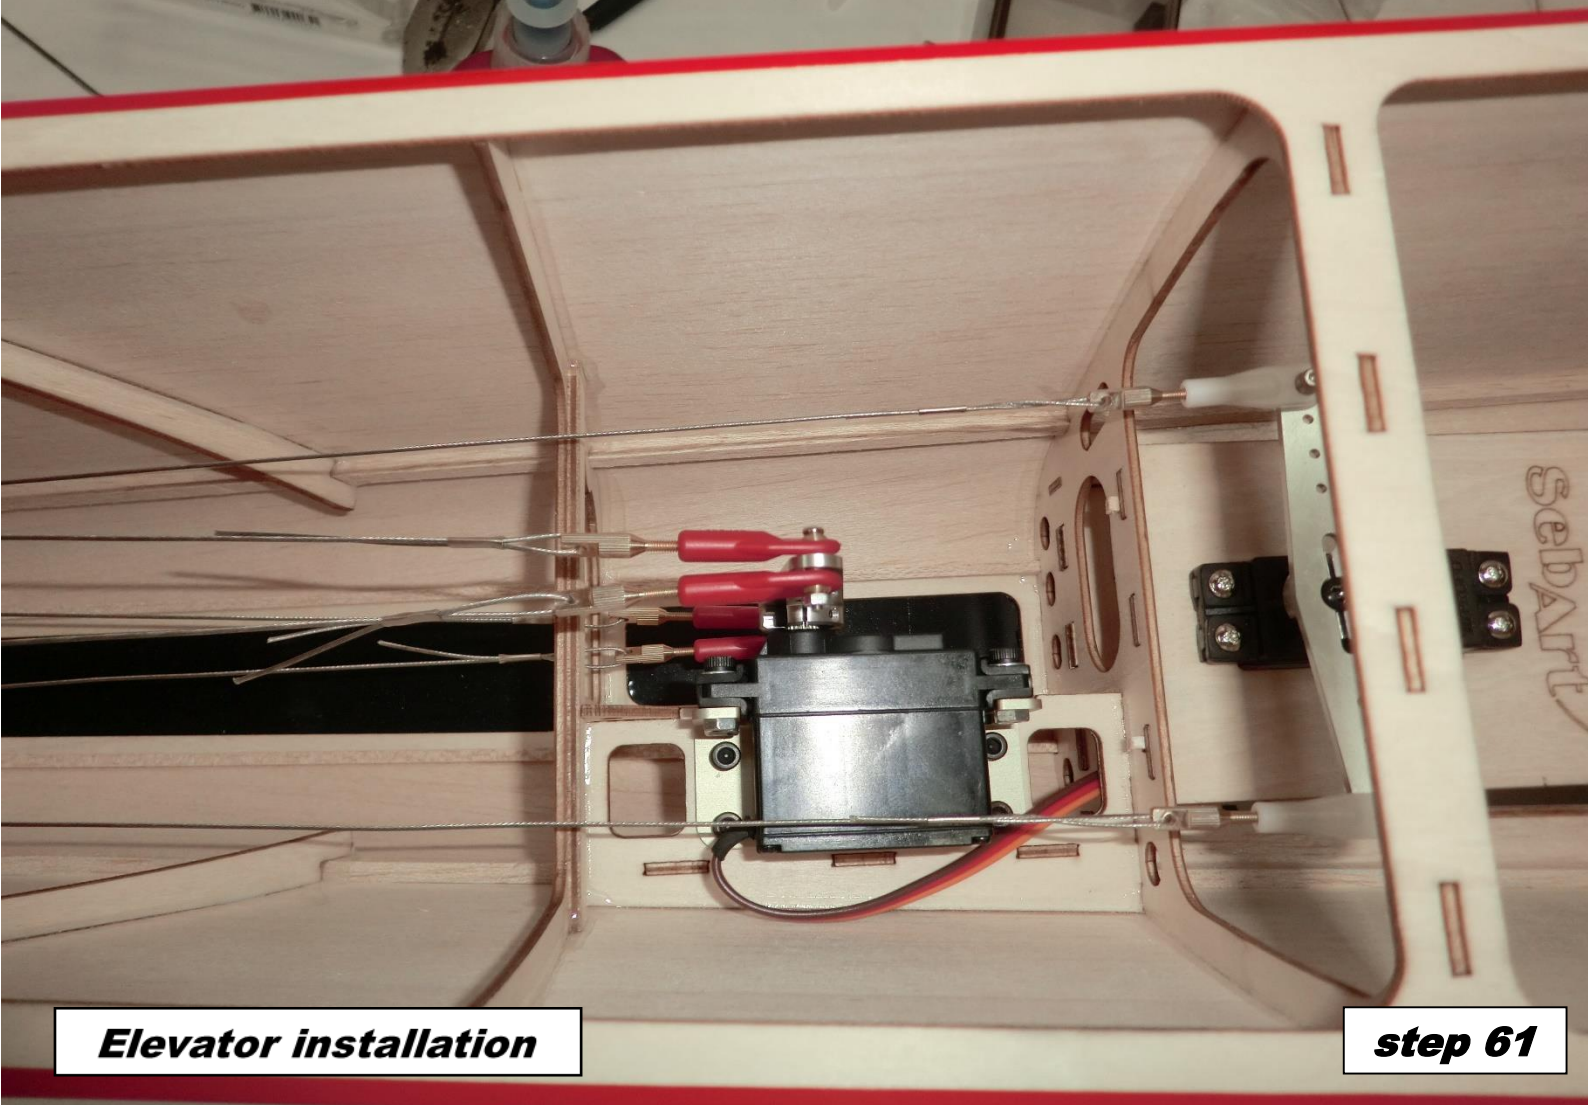

Elevator installation

step 61

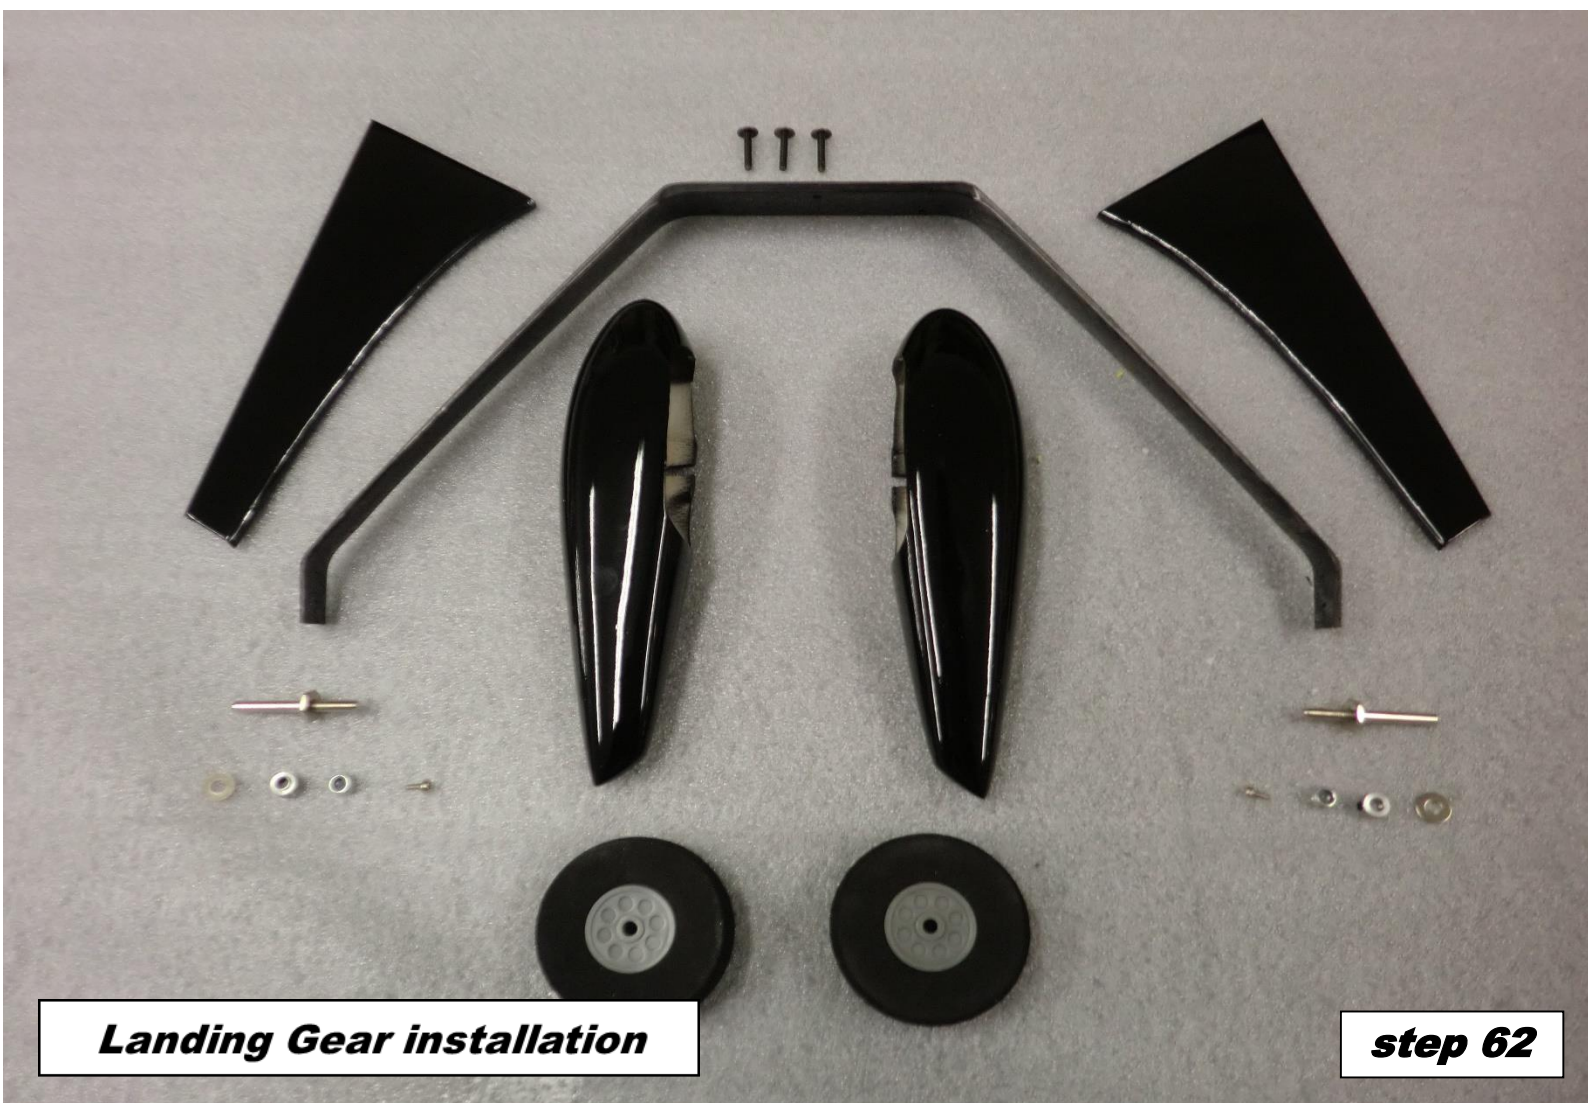

Landing Gear installation

step 62





Landing Gear installation

step 65




Landing Gear installation

step 66



Landing Gear installation

step 67

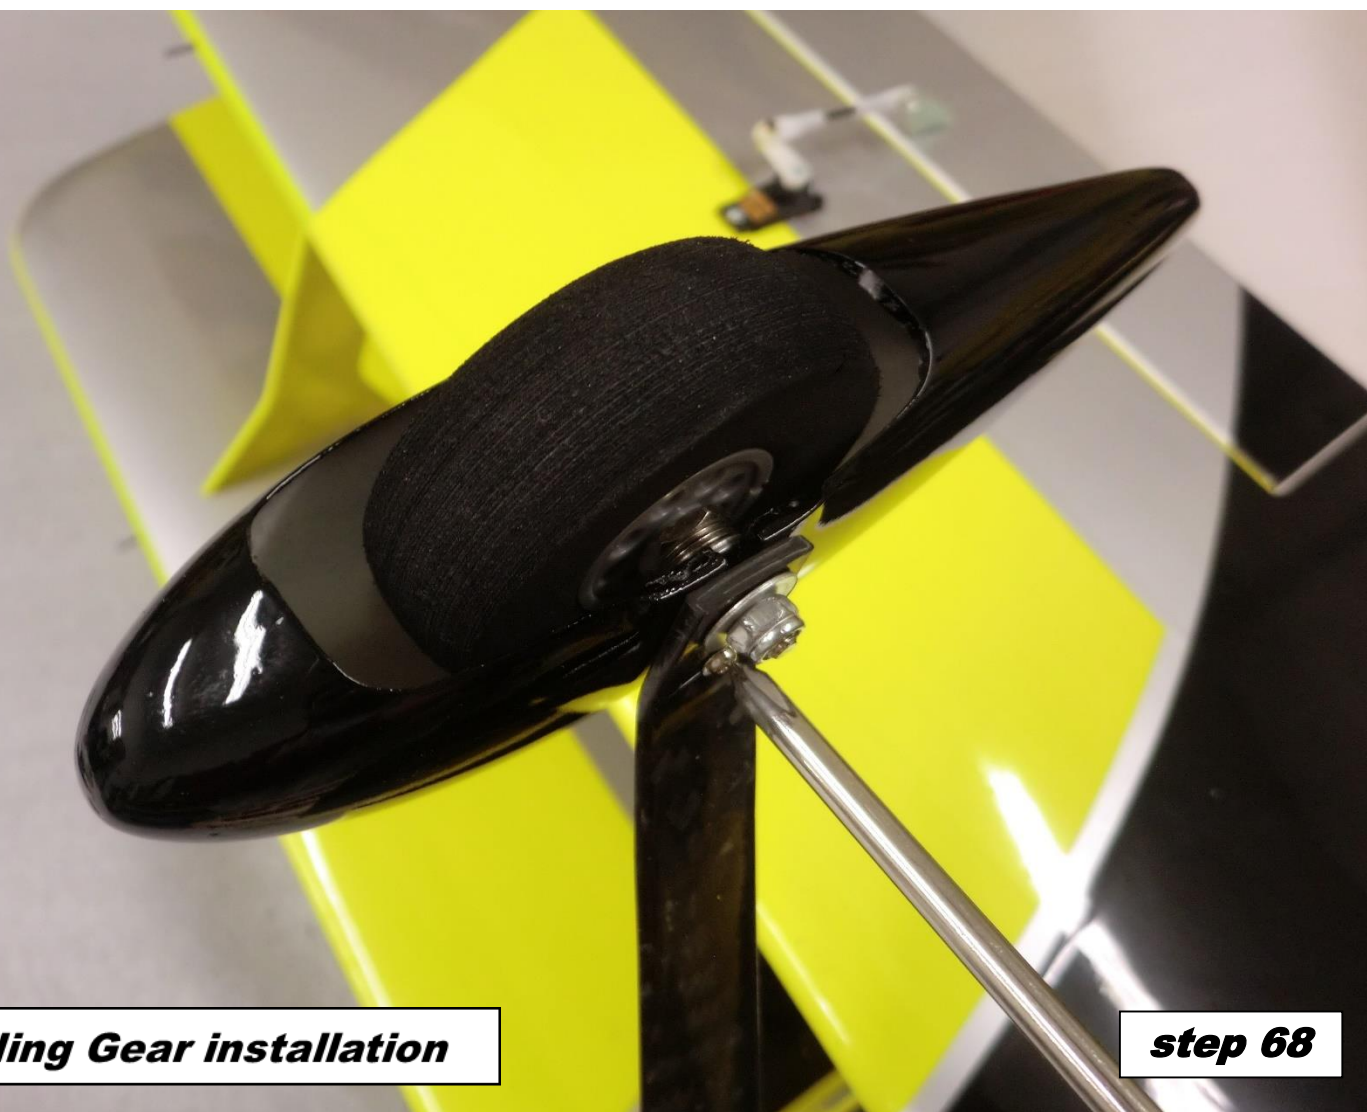

Landing Gear installation

step 68




Landing Gear installation

step 69




Landing Gear installation

step 70

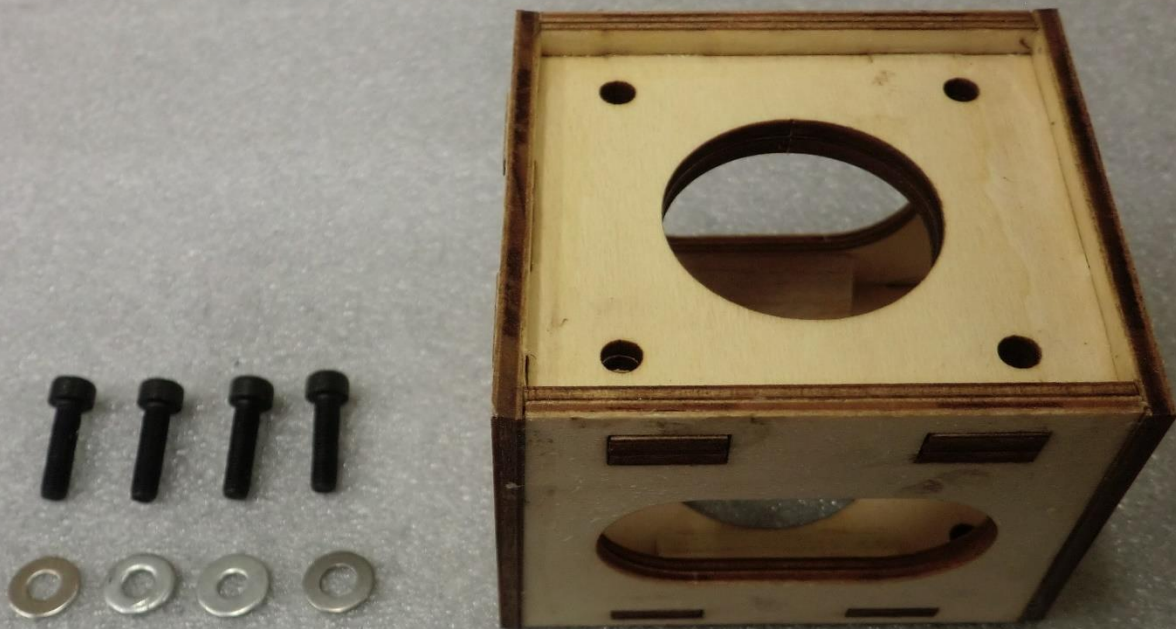

Electric motor version

step 71

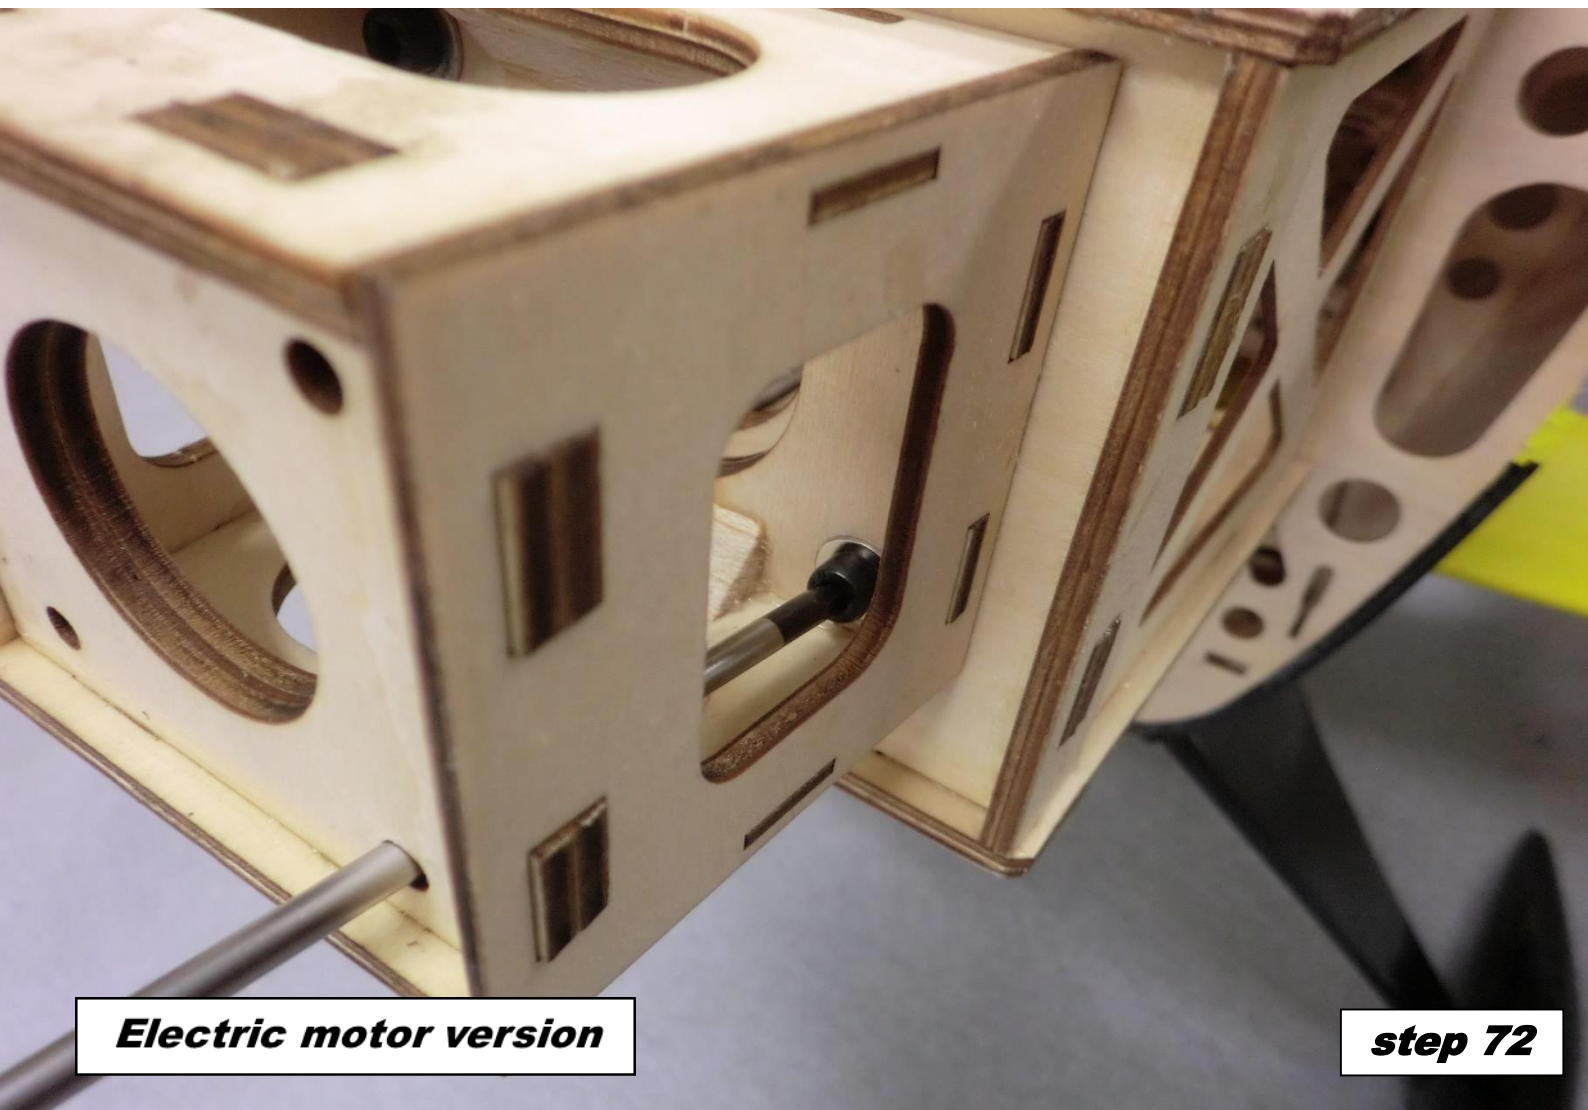


Electric motor version

step 72




Electric motor version

step 73

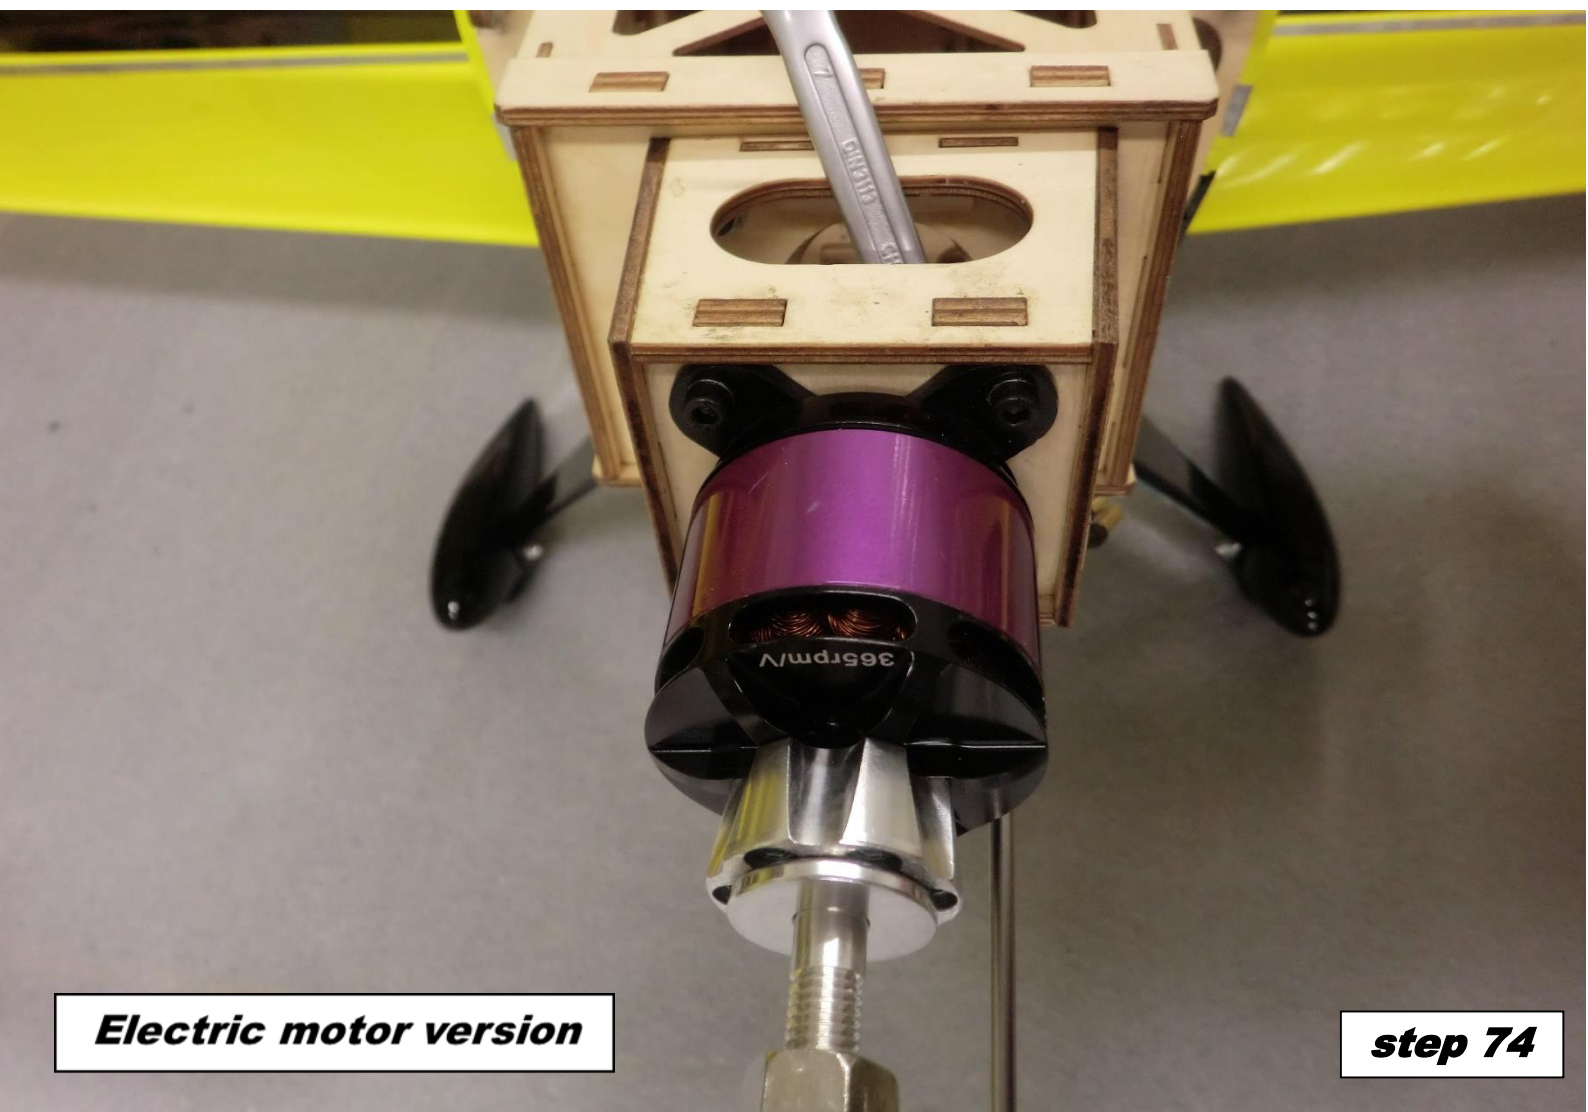

Electric motor version

step 74

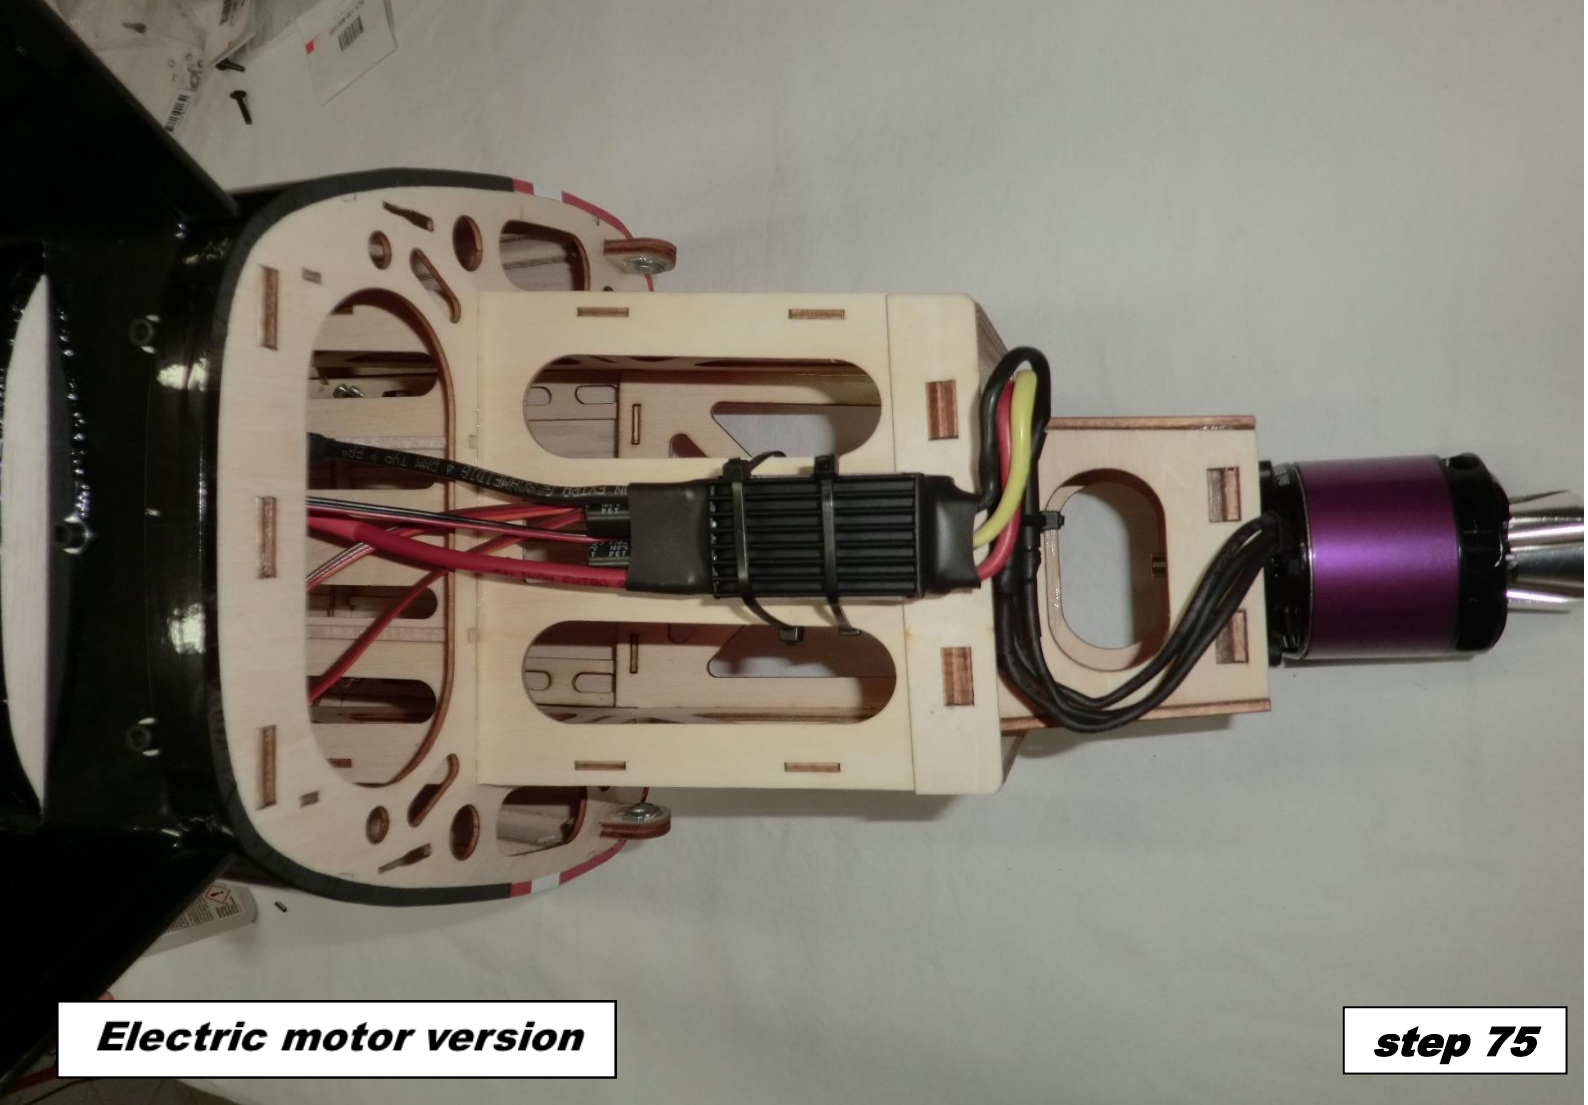


Electric motor version

step 75




Electric motor version

step 76

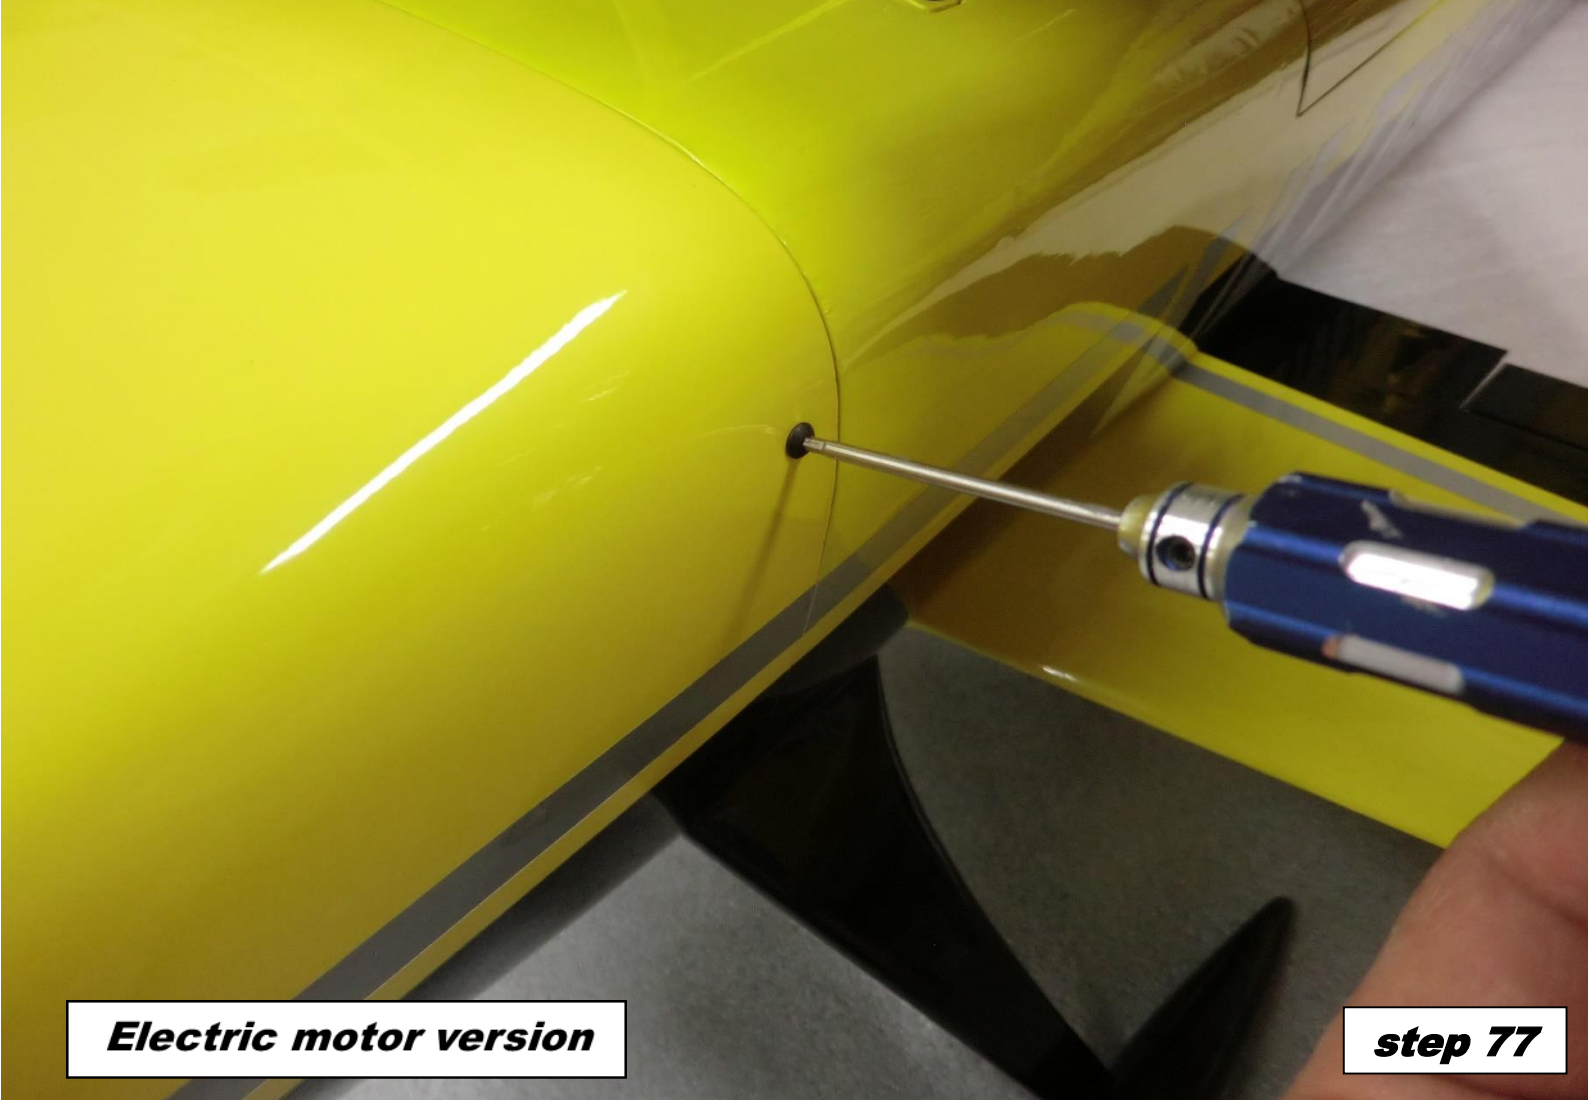


Electric motor version

step 77

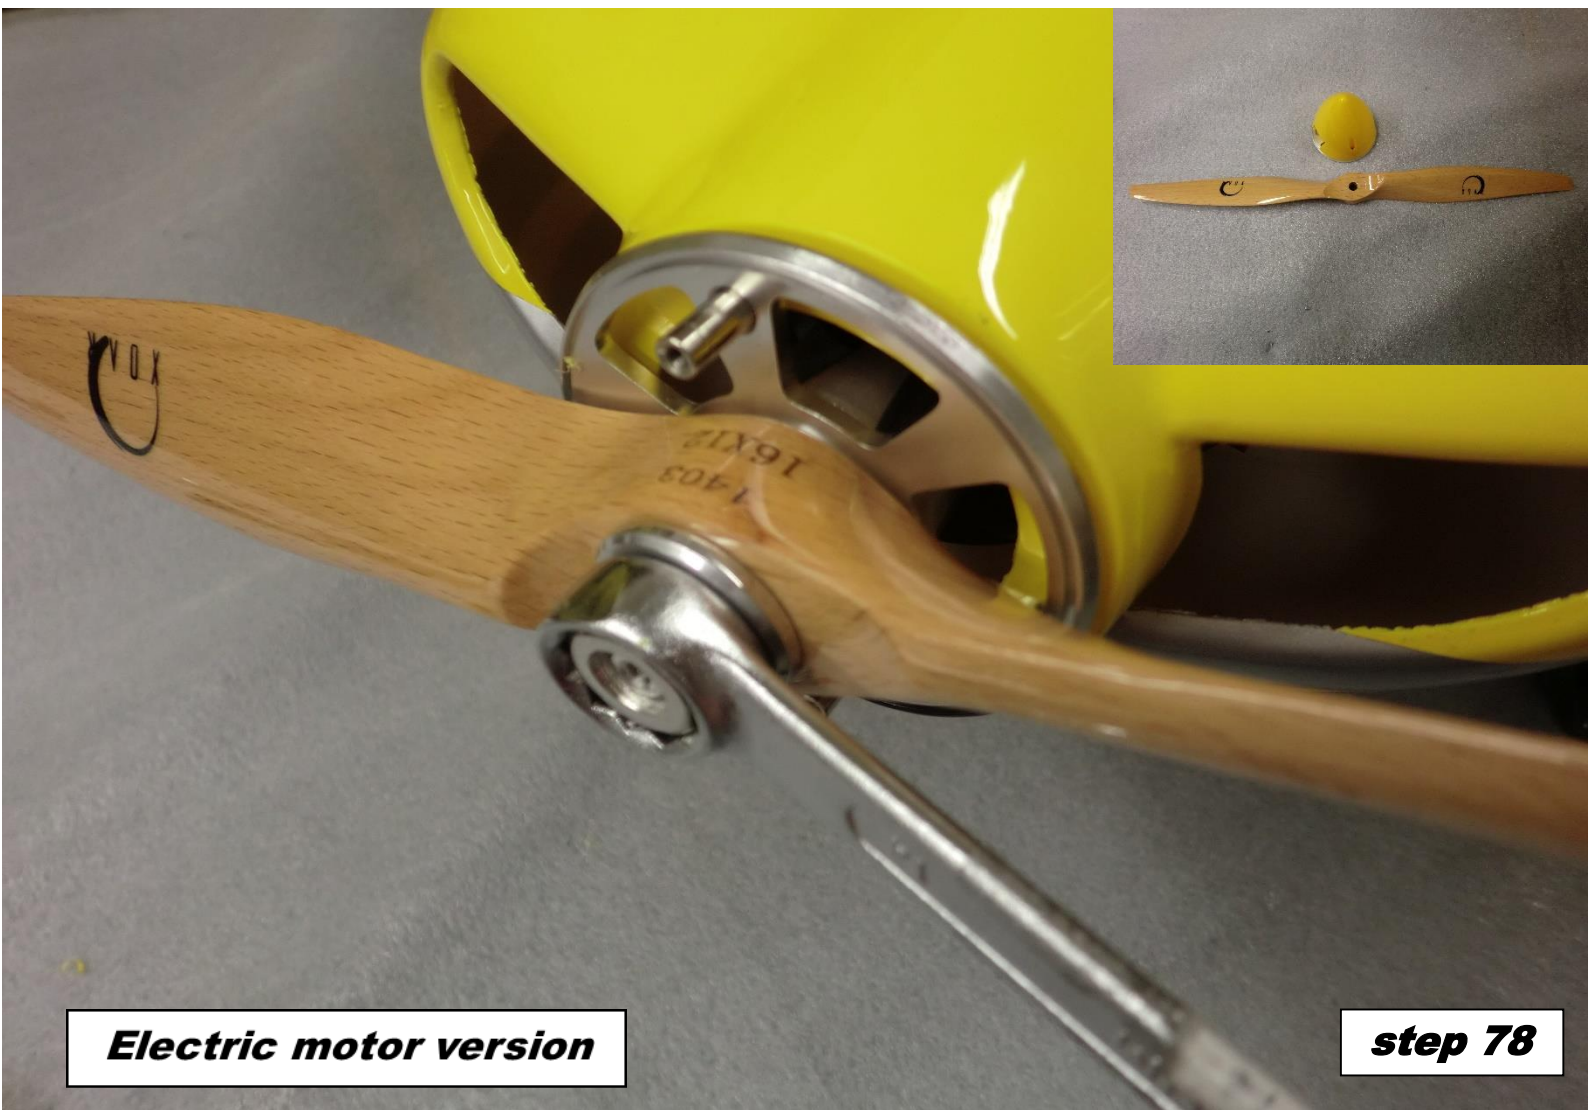


Electric motor version

step 78

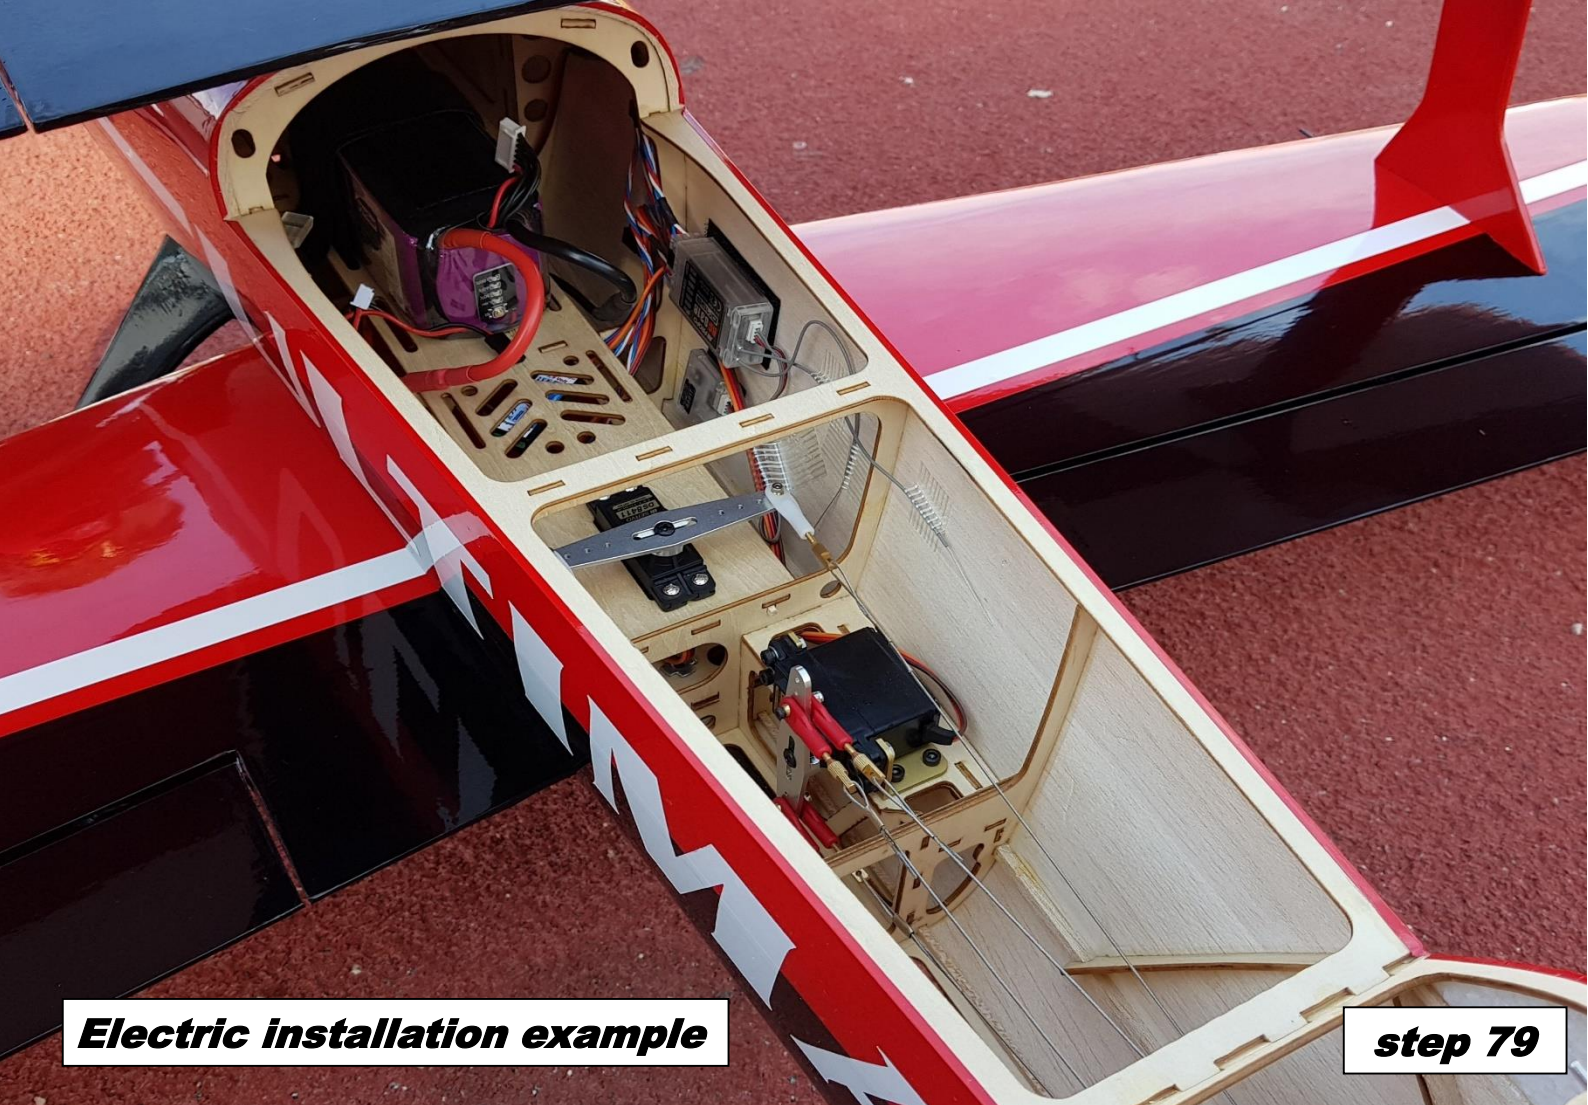

Electric installation example

step 79

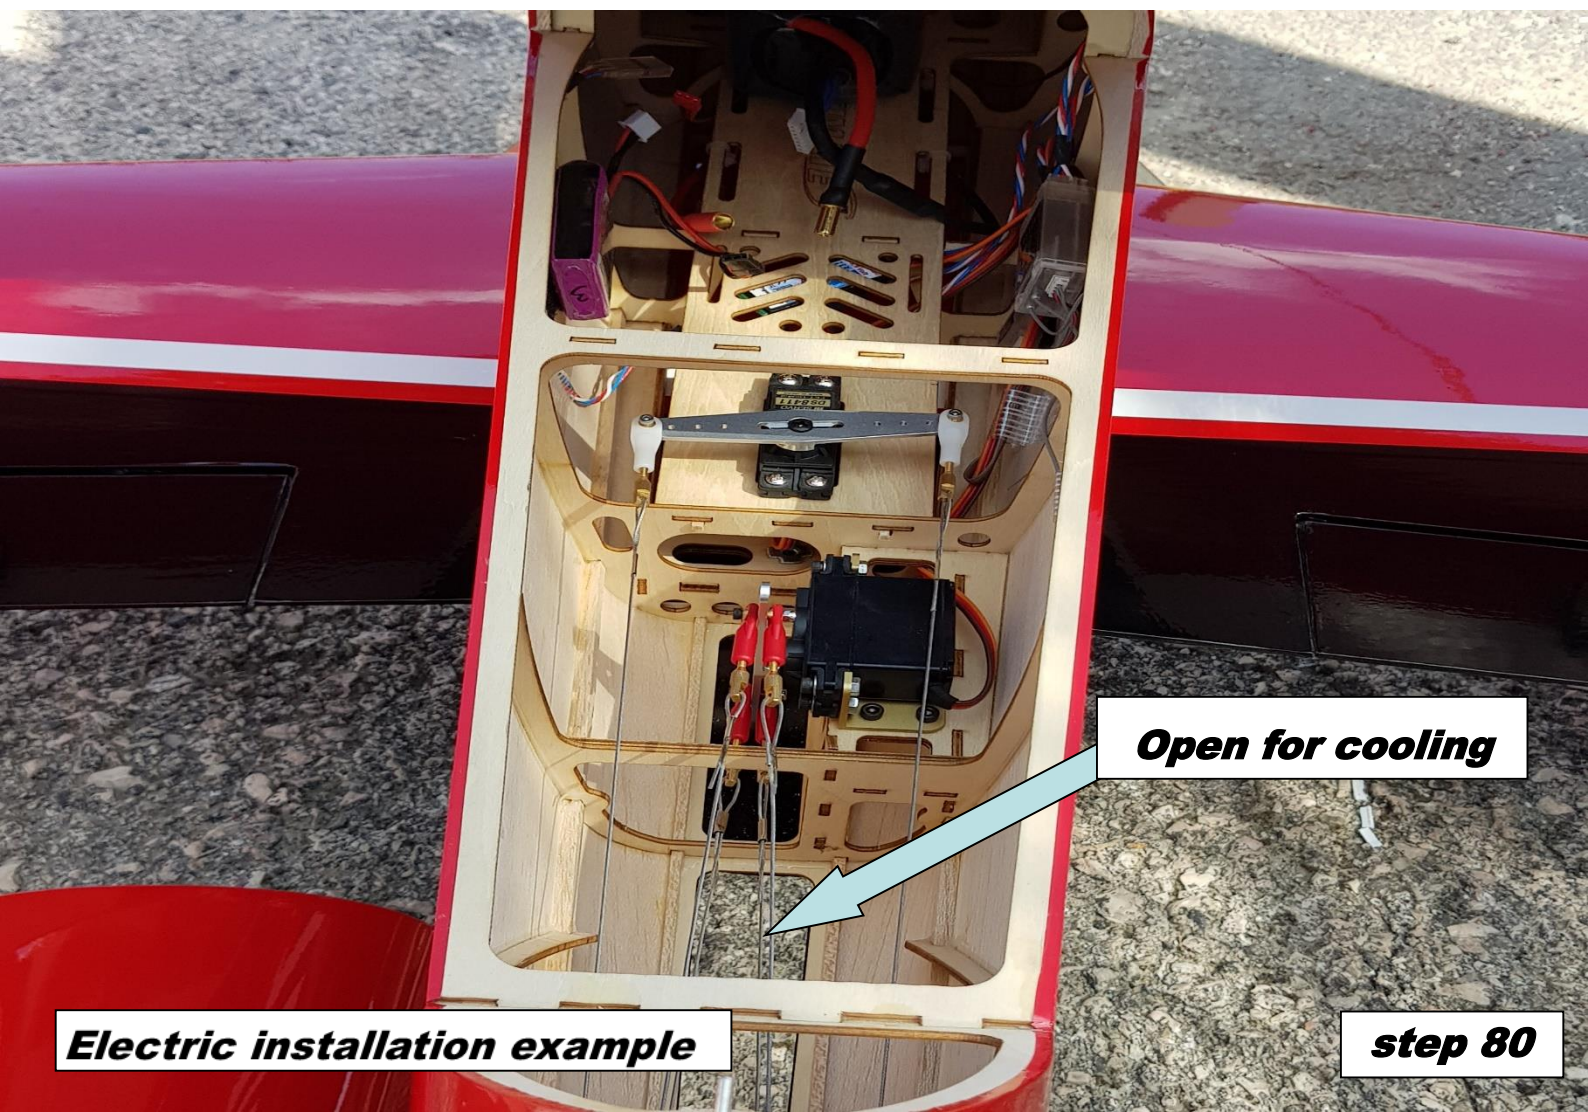

Open for cooling

Electric installation example

step 80



