


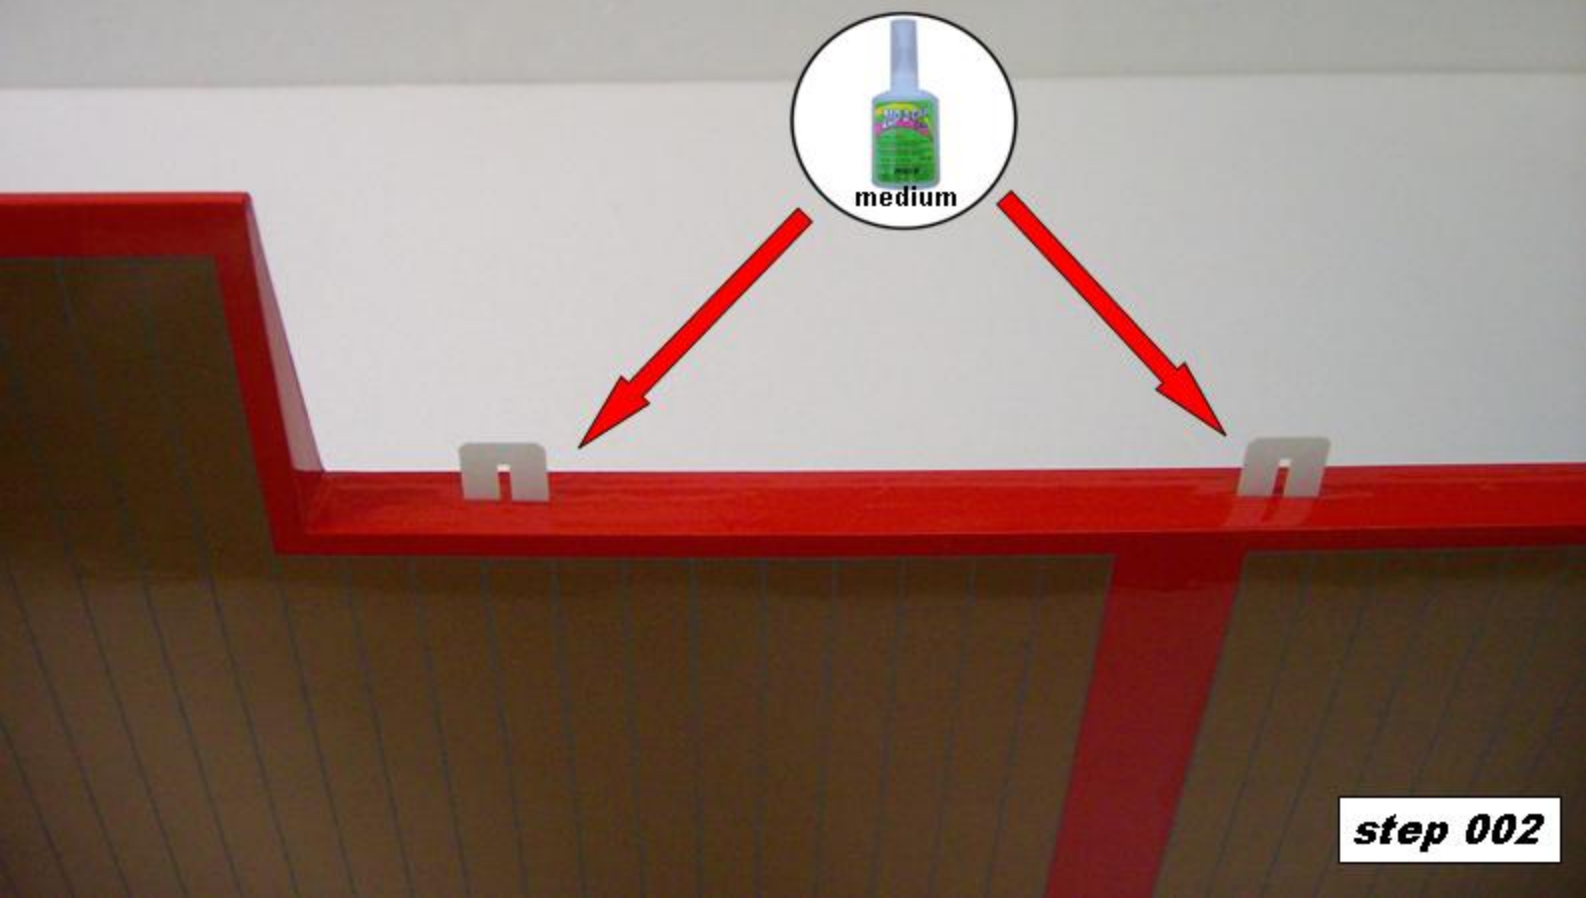
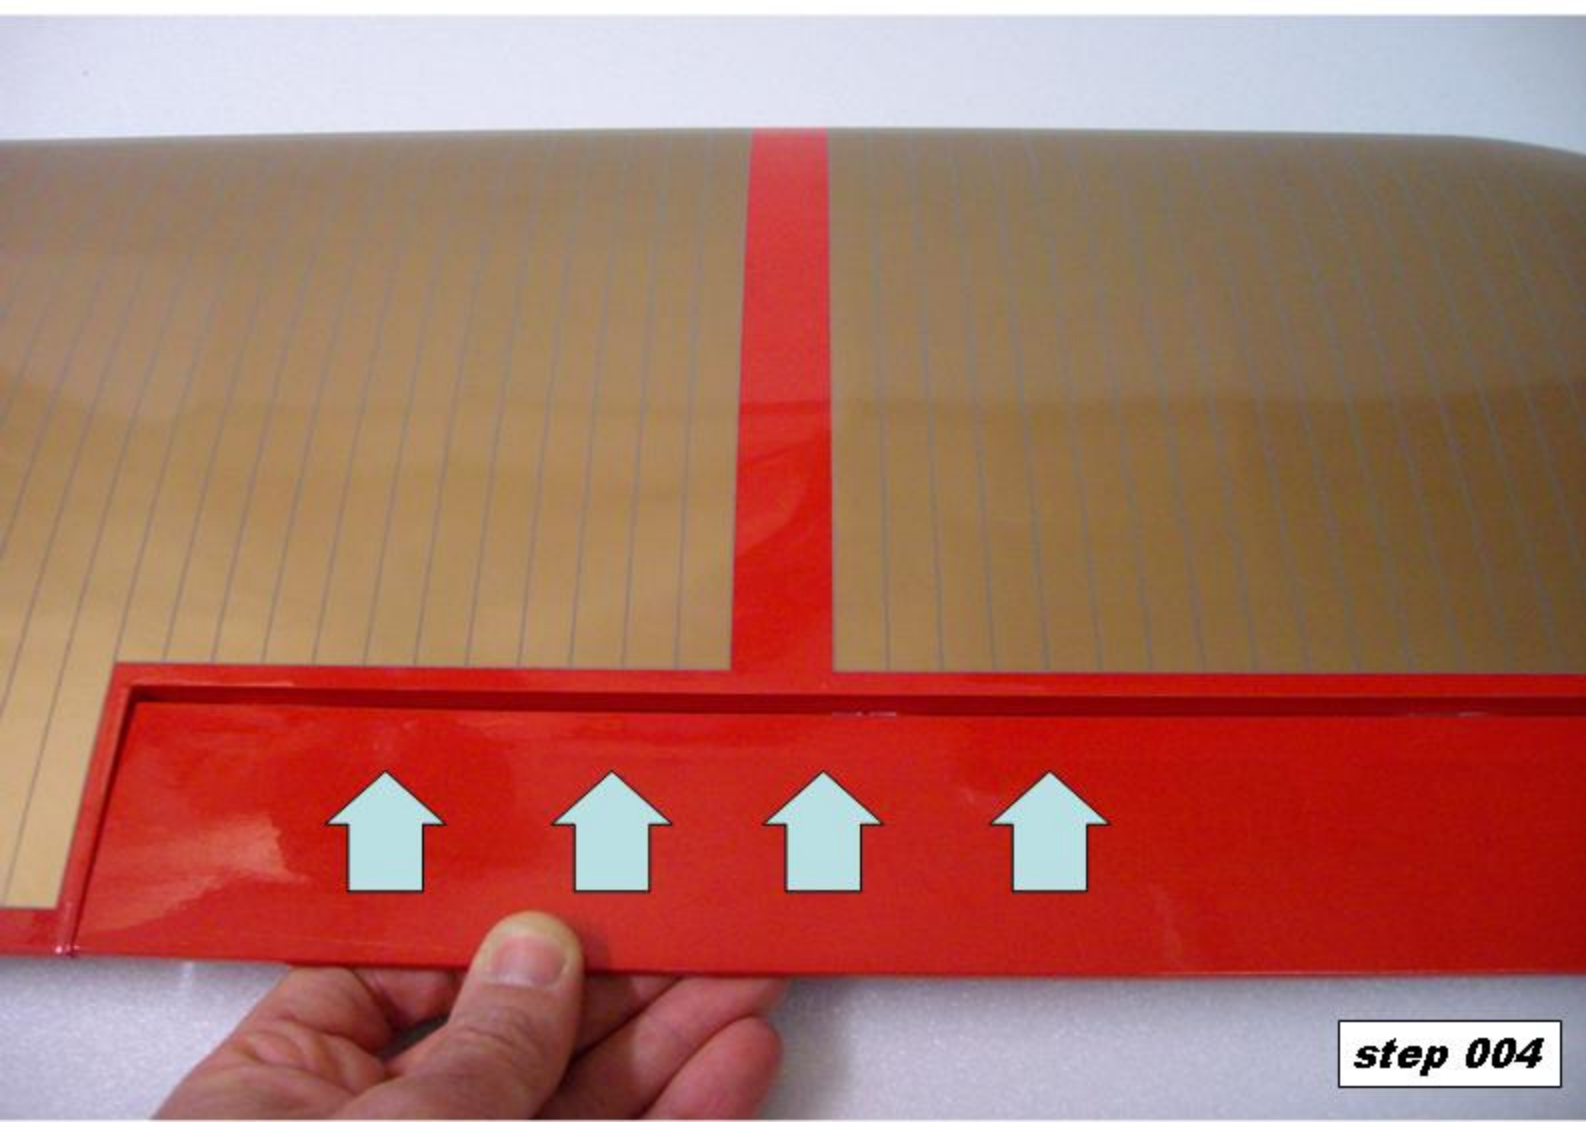



step 001

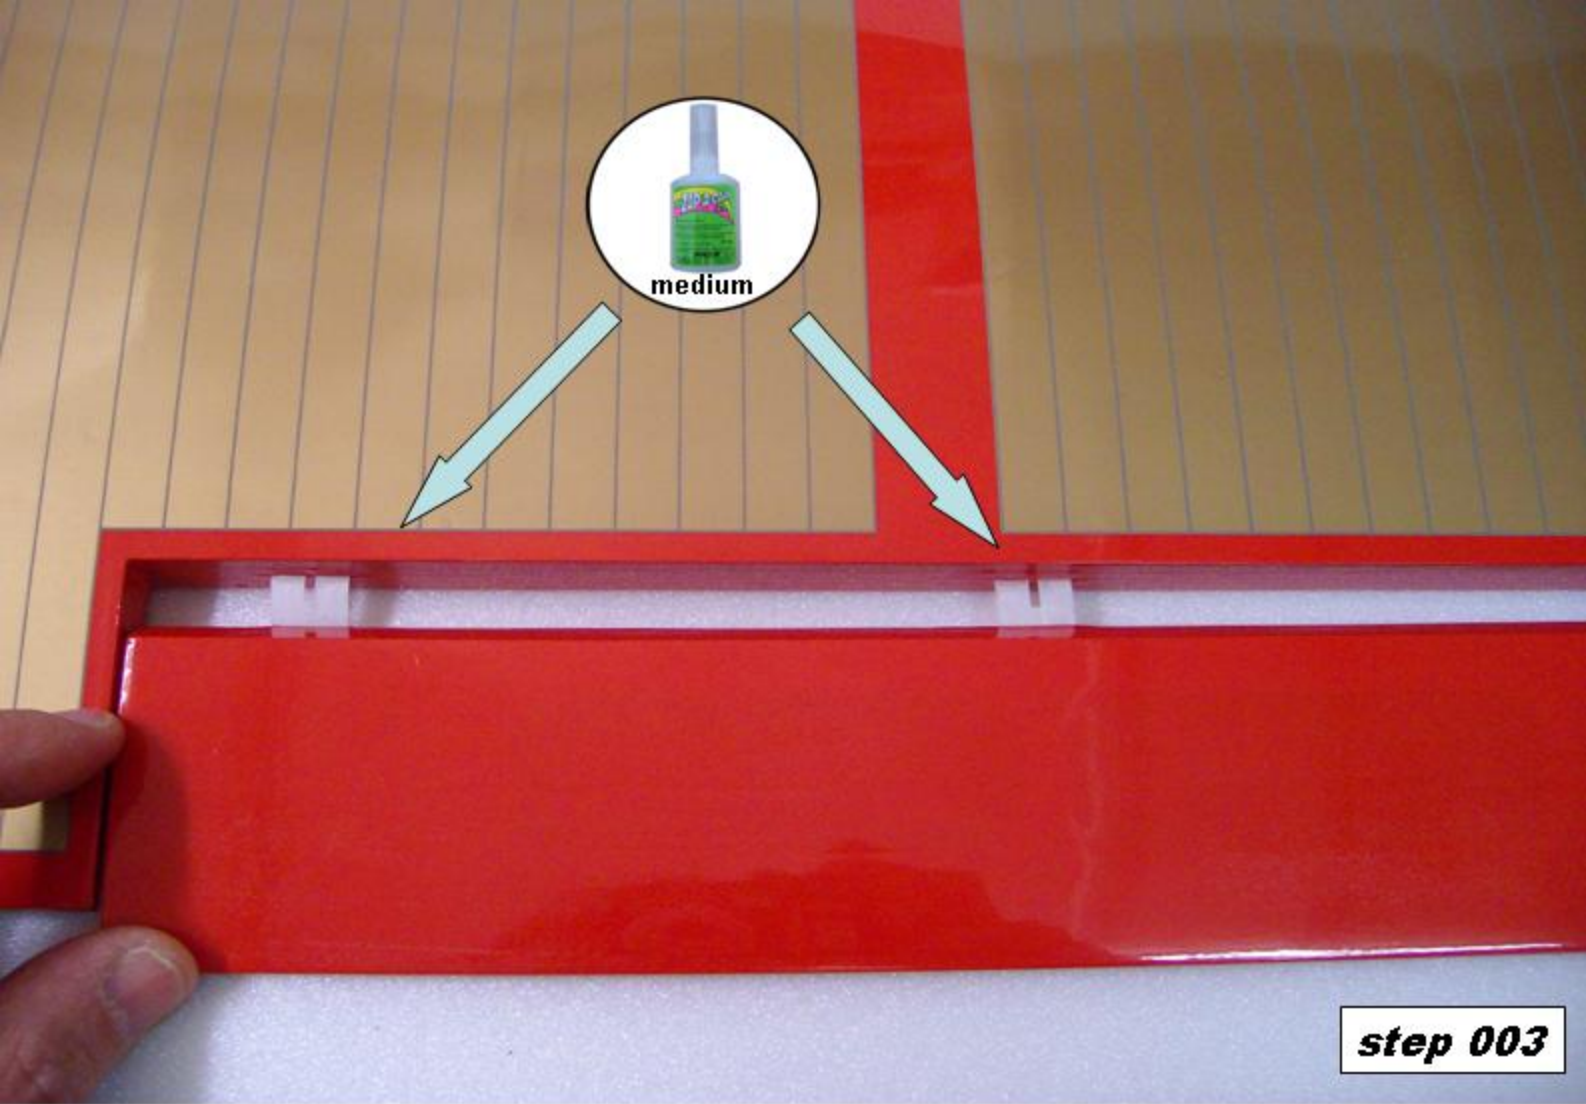


step 002

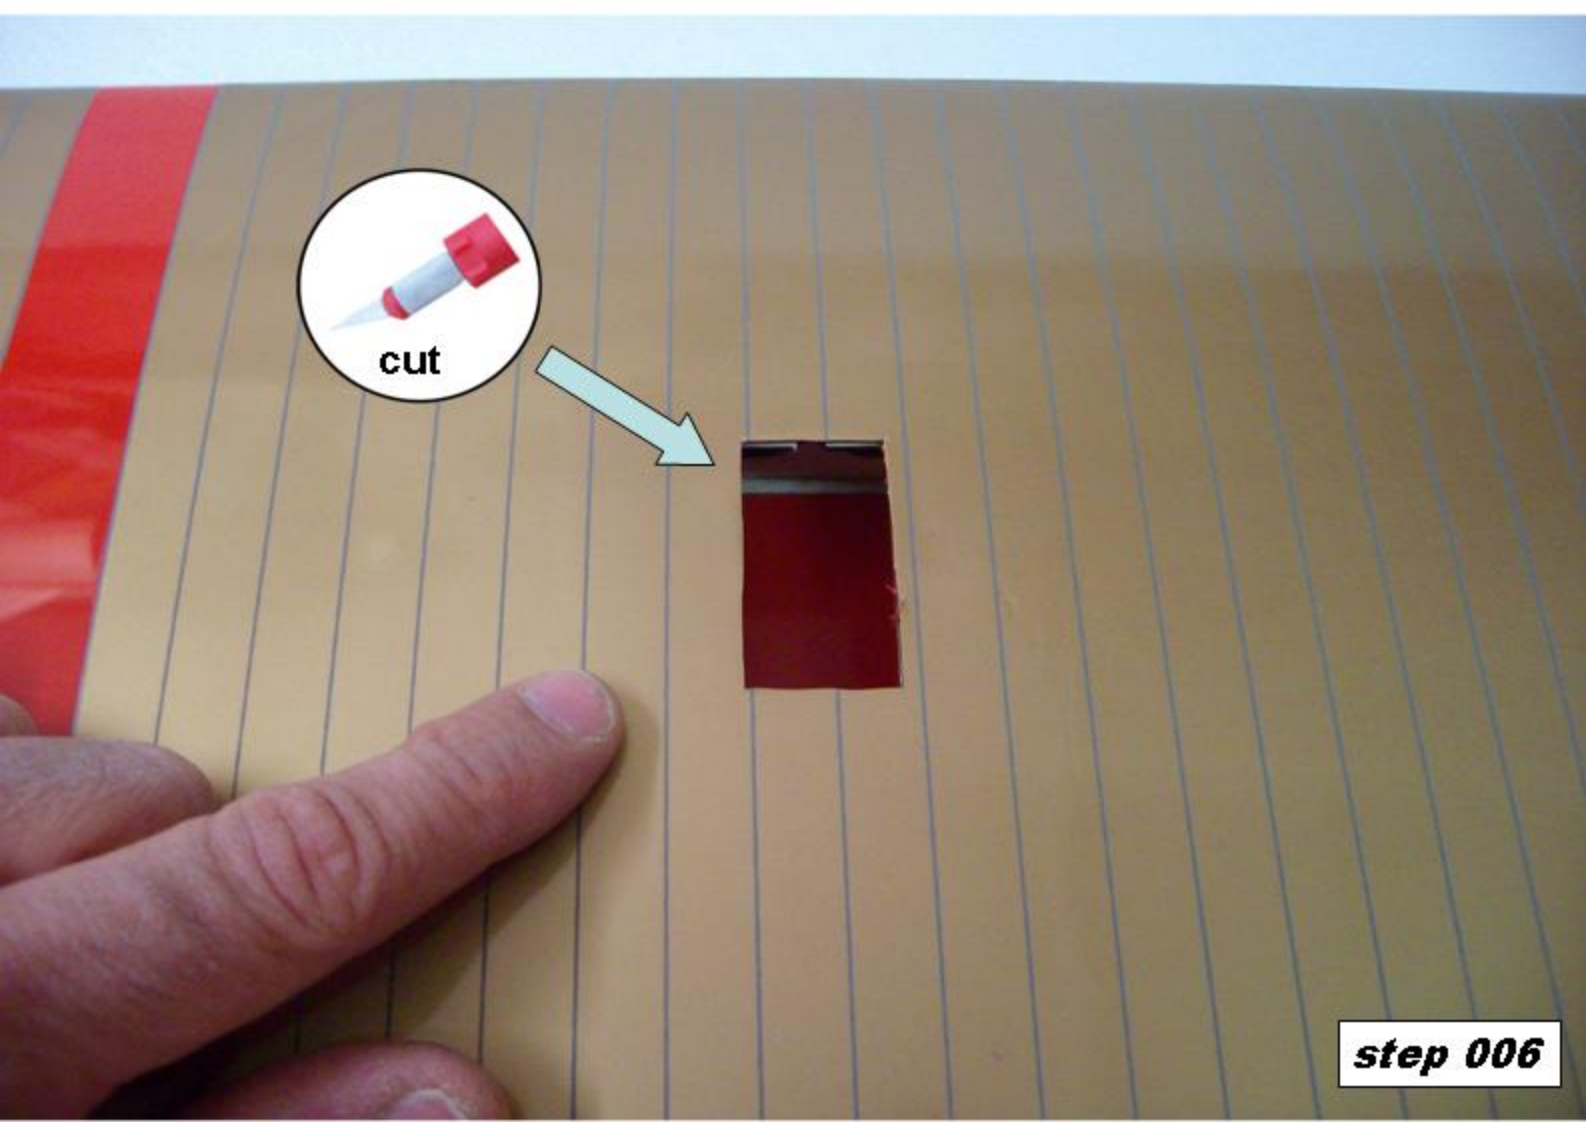


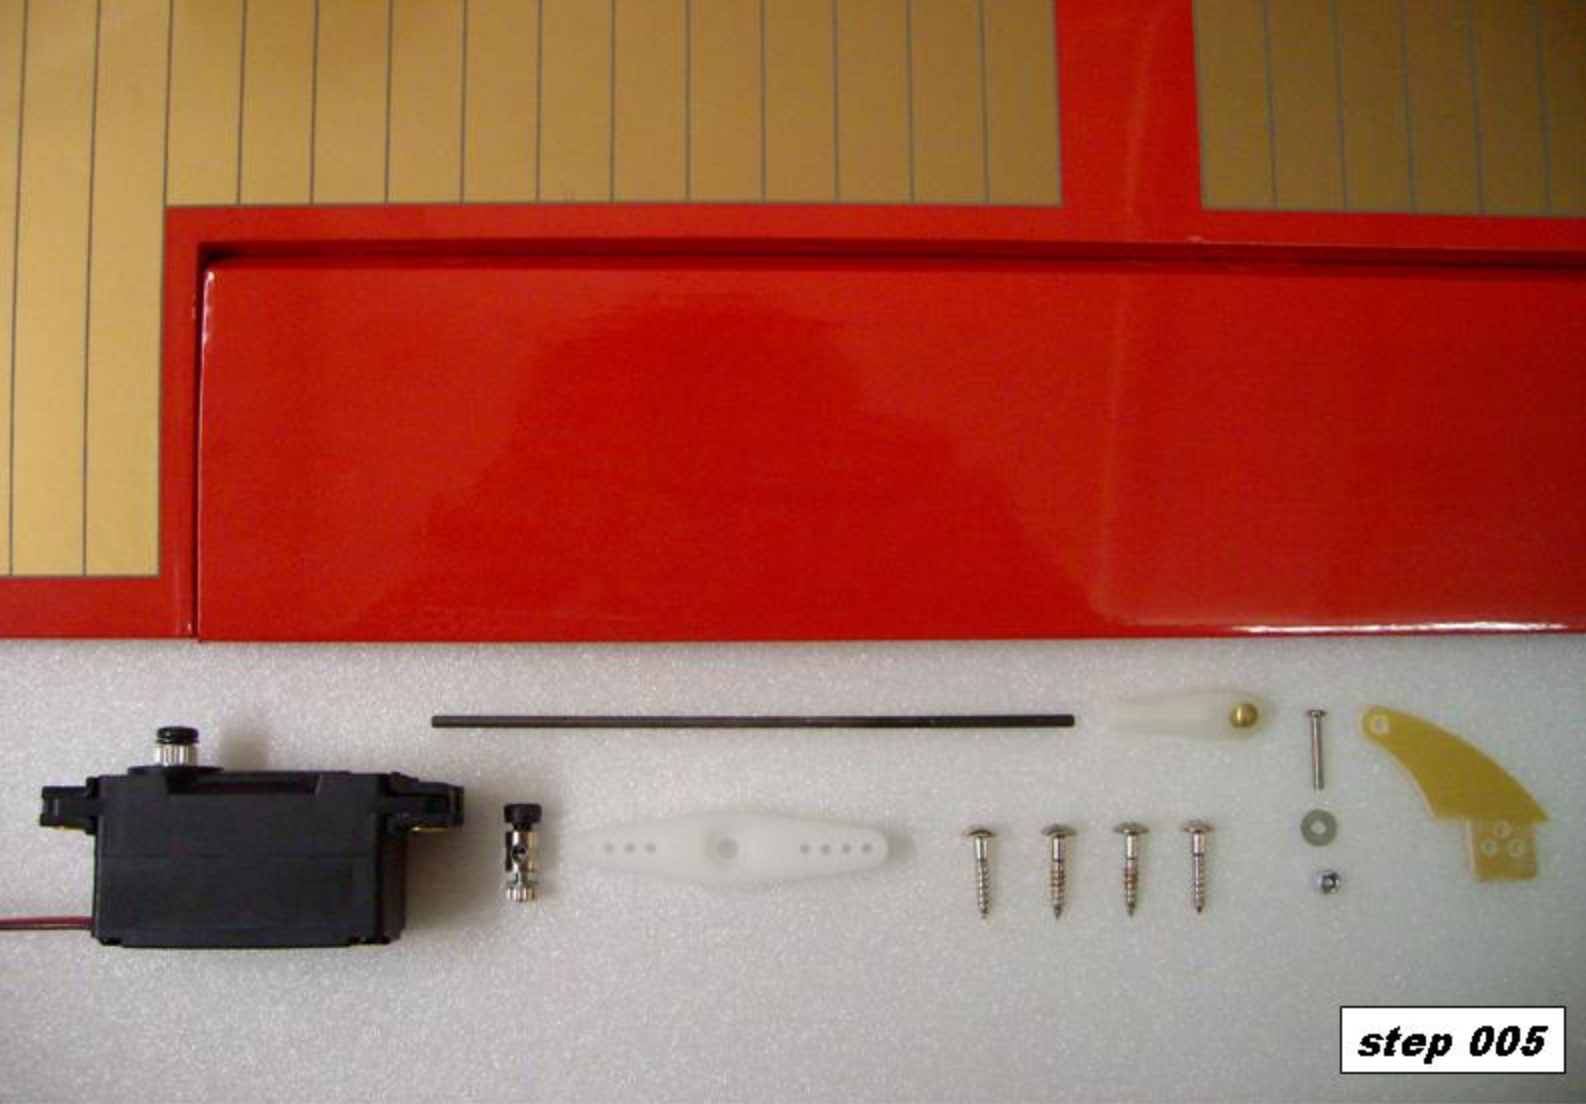



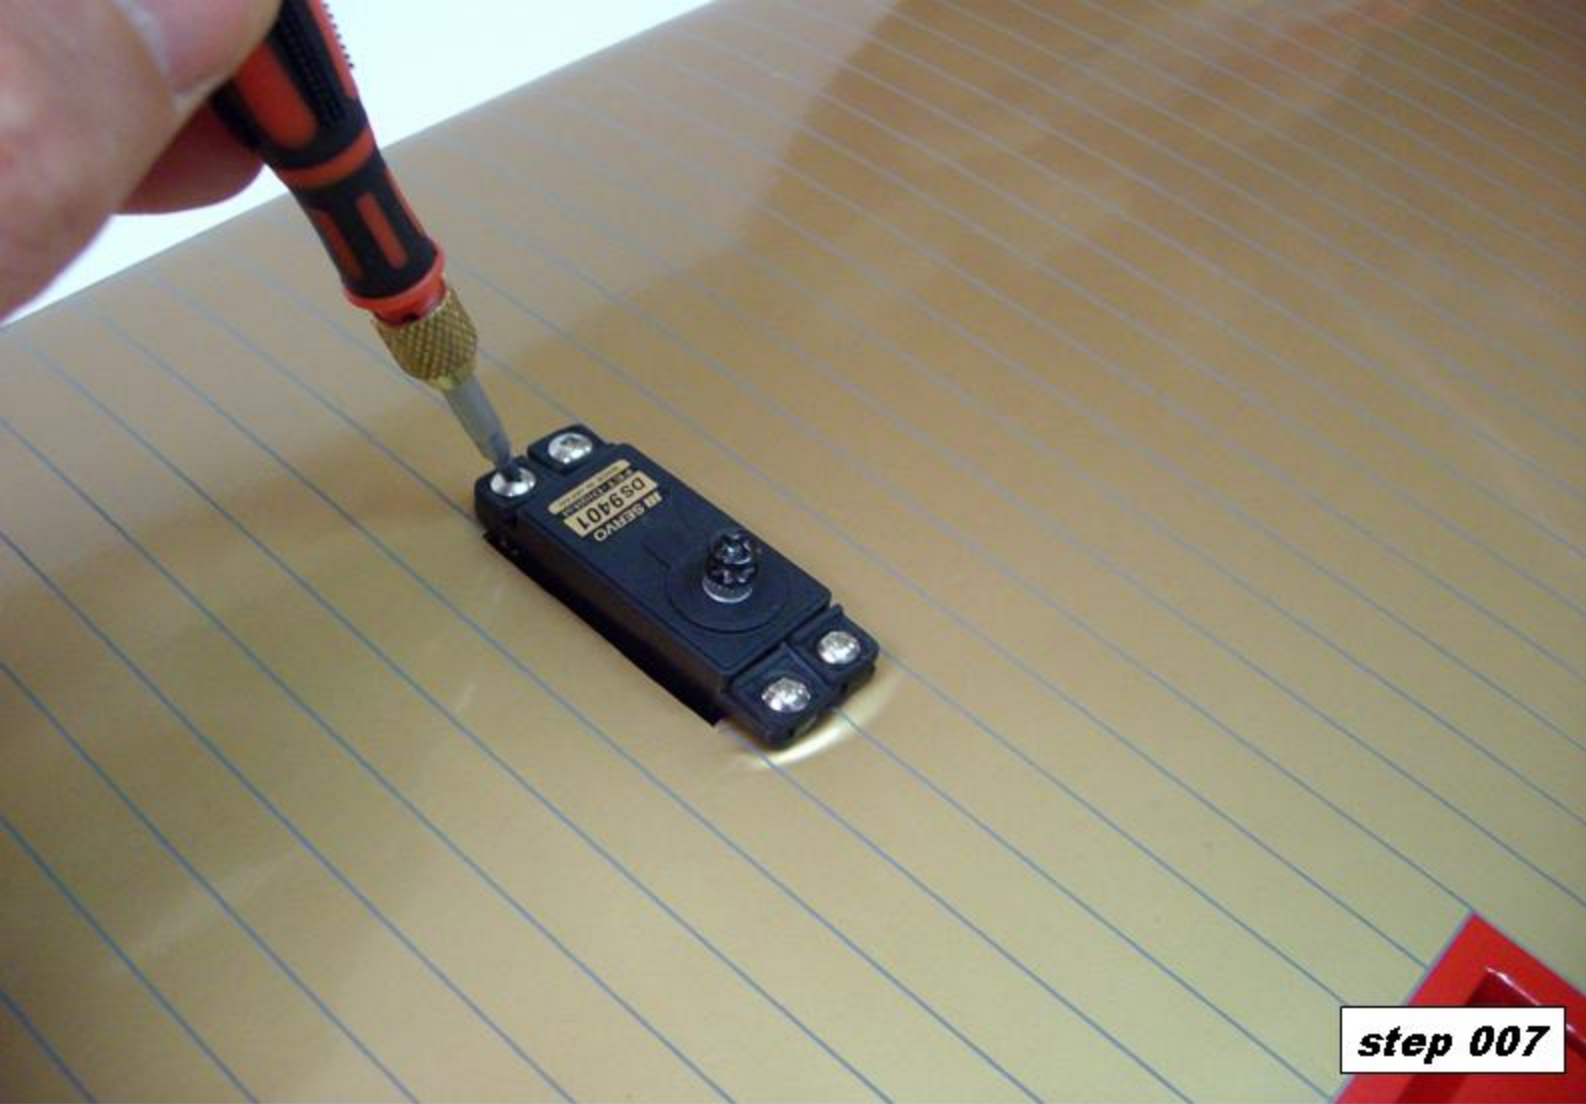



step 007

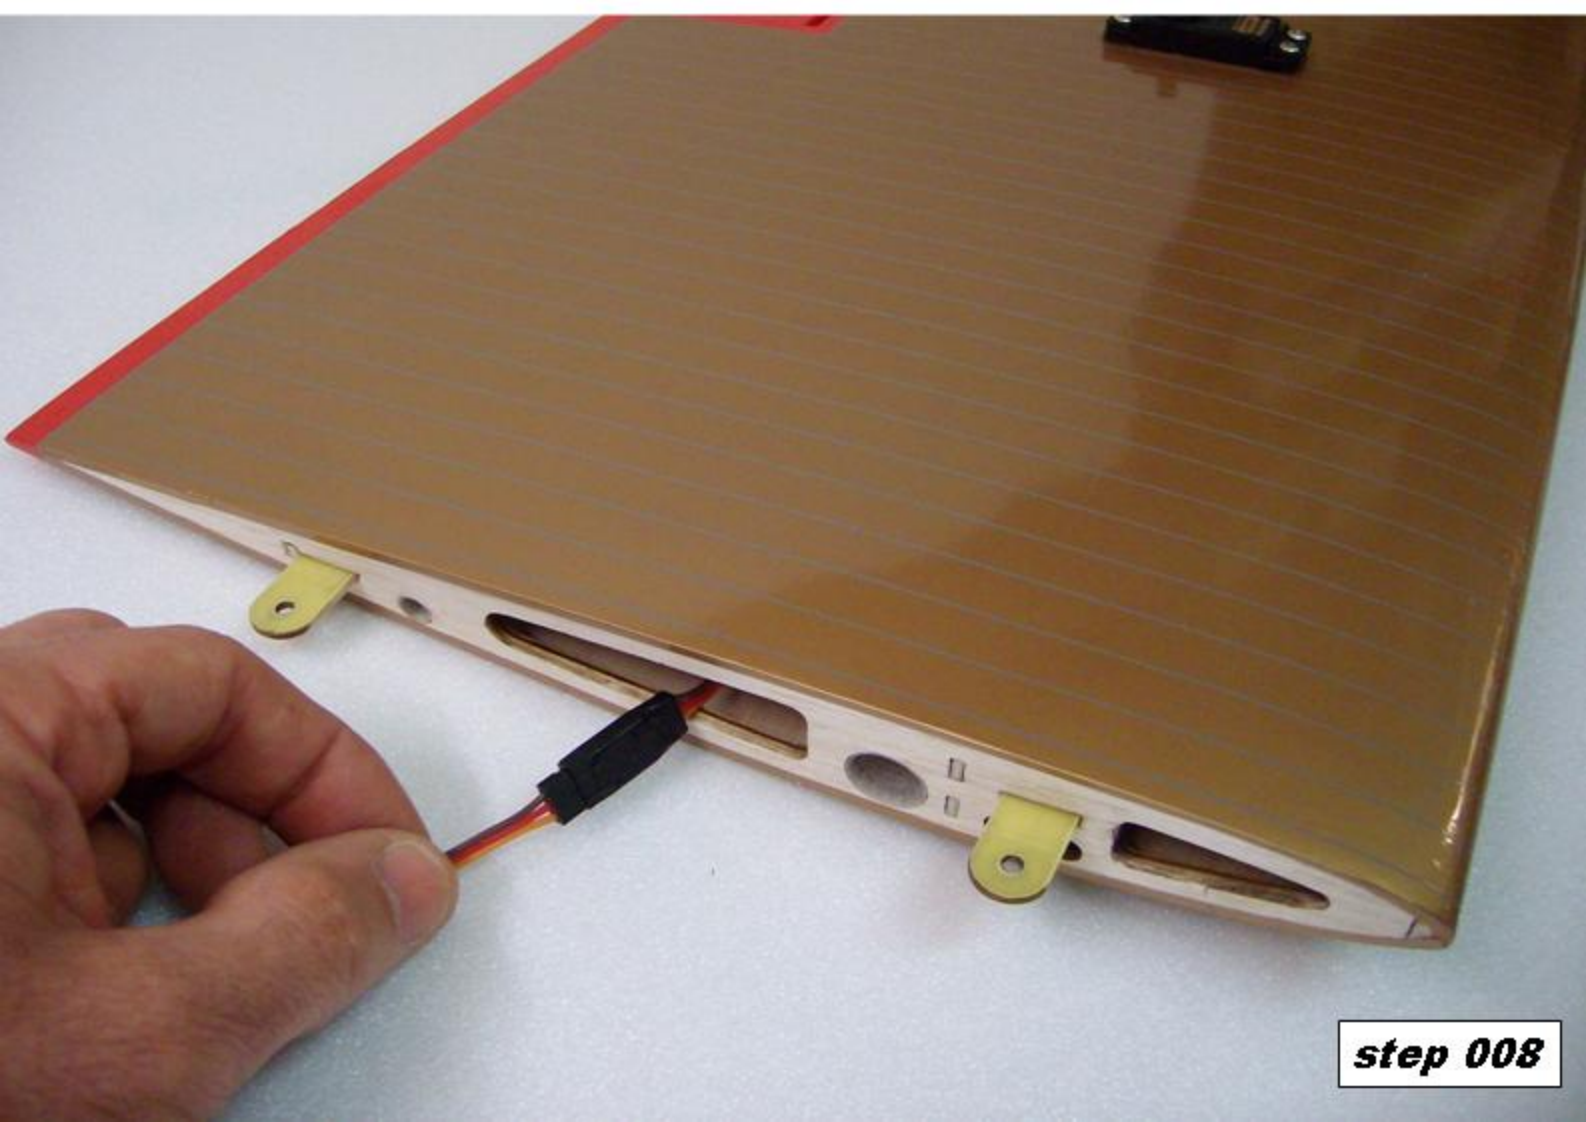

step 008

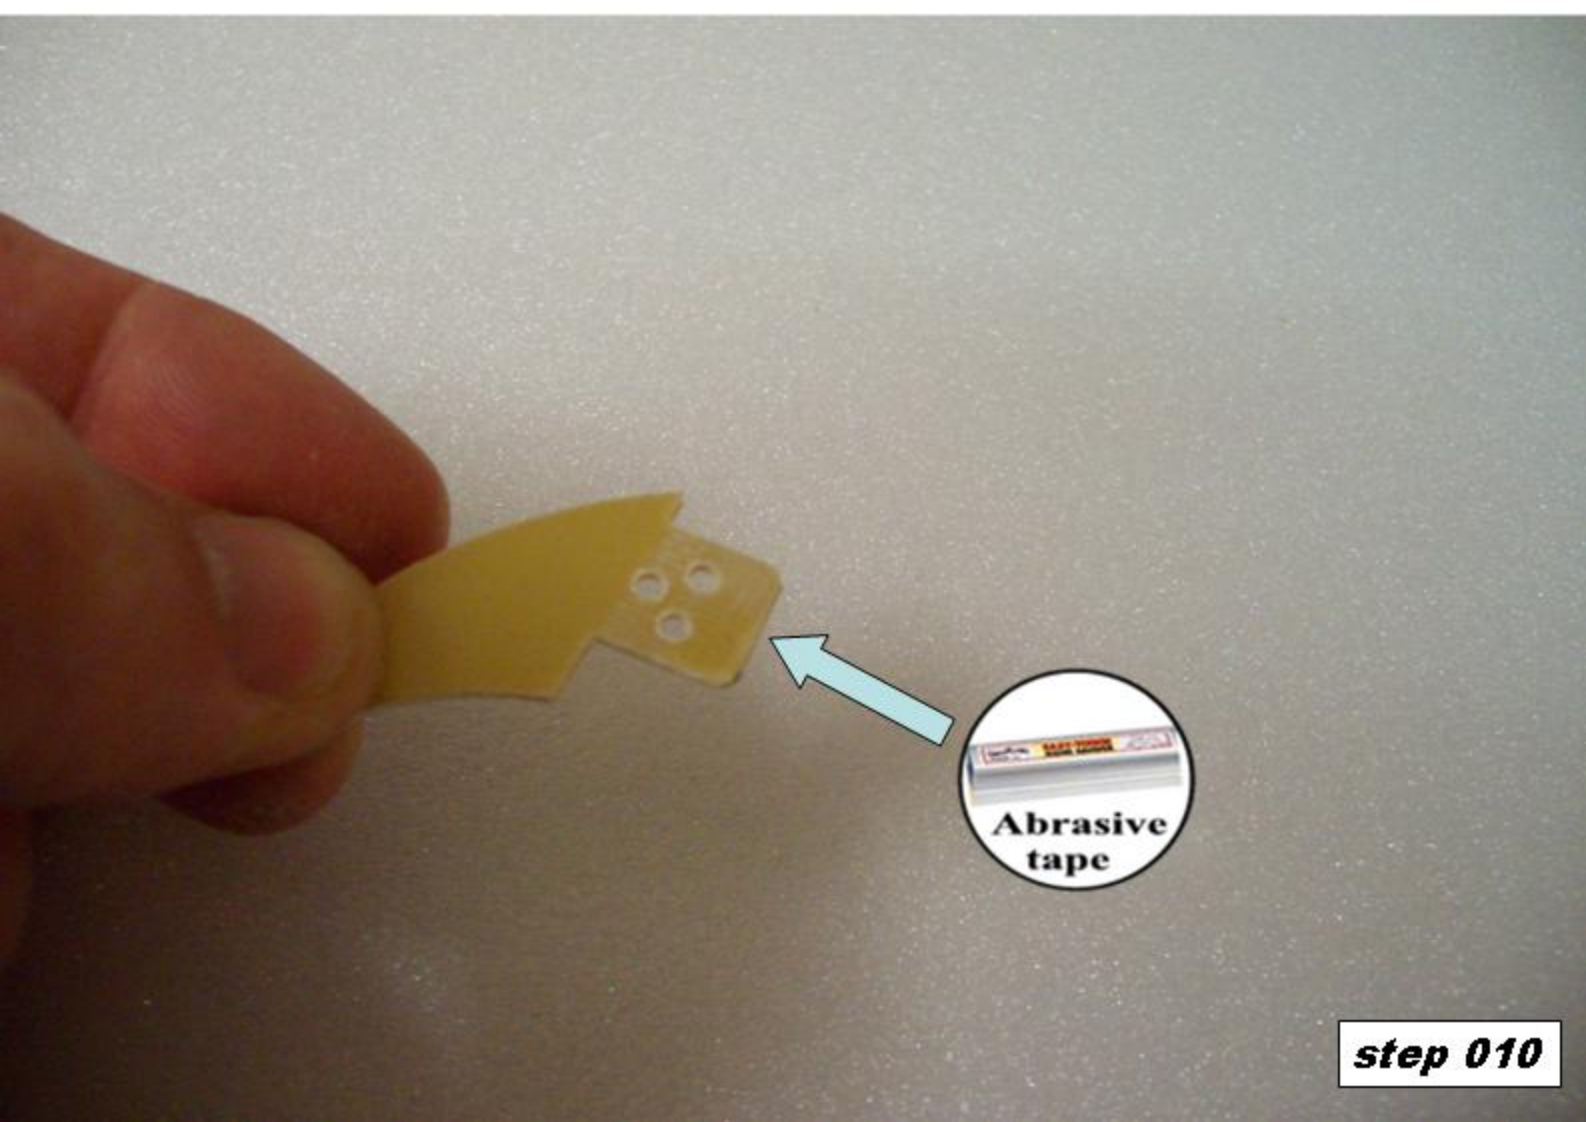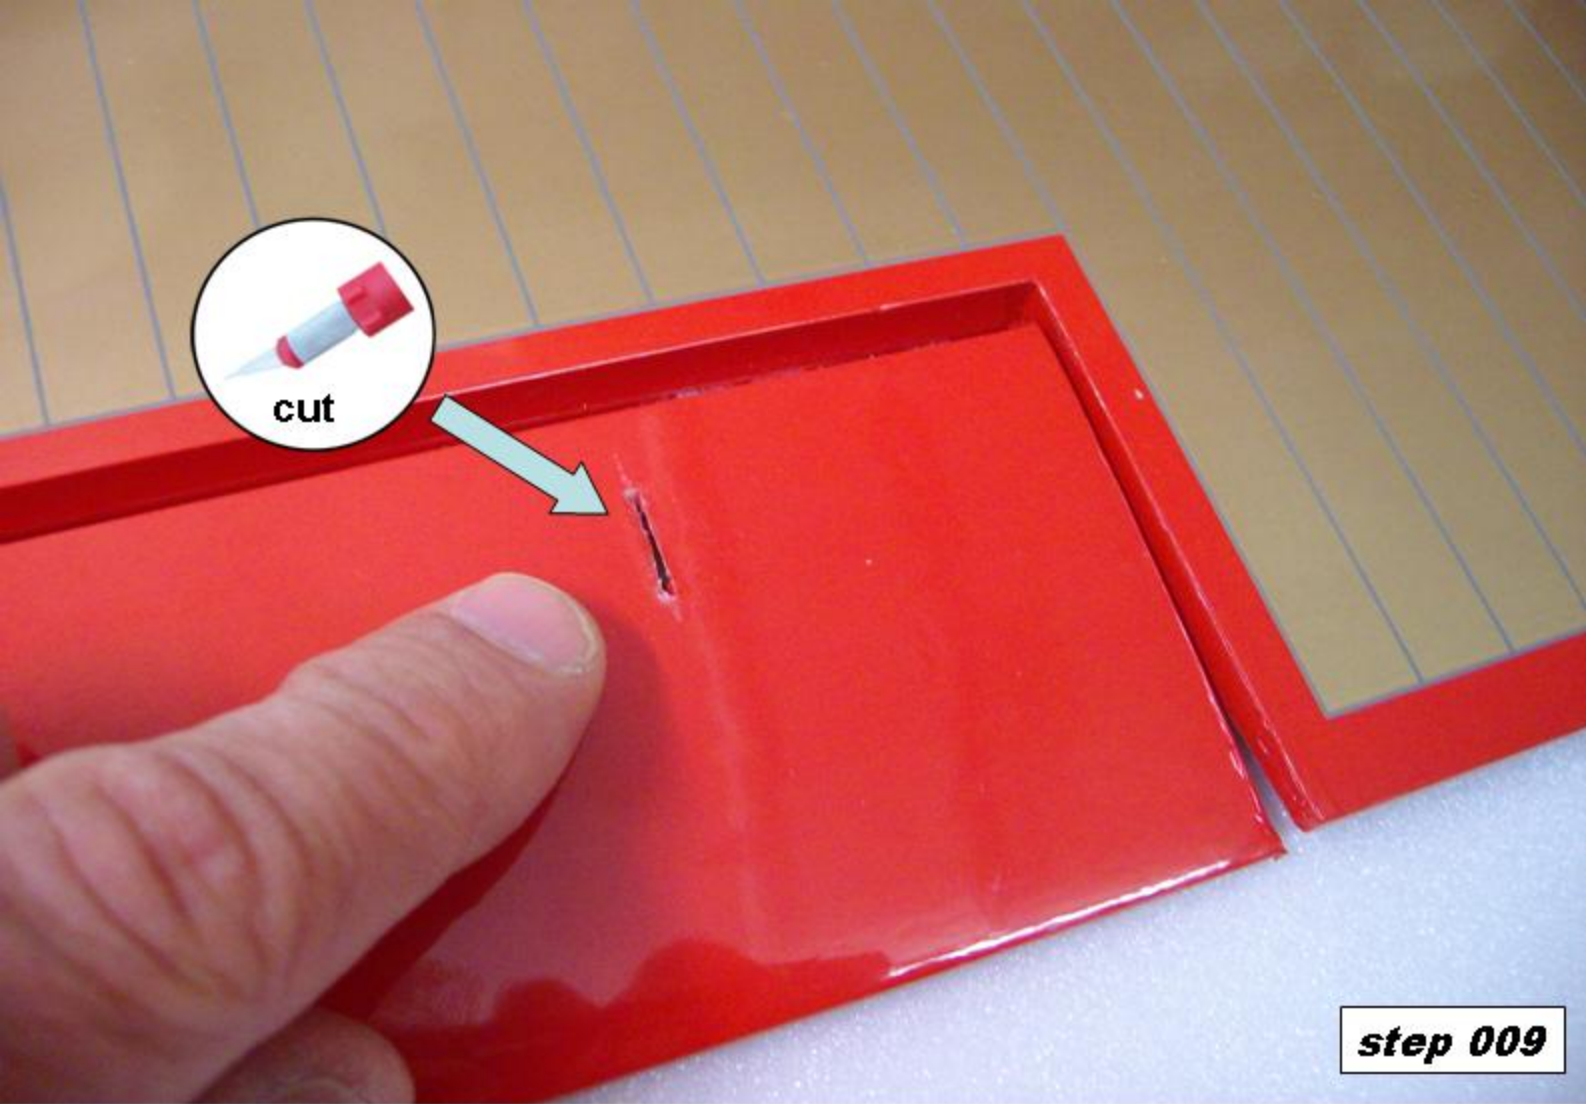


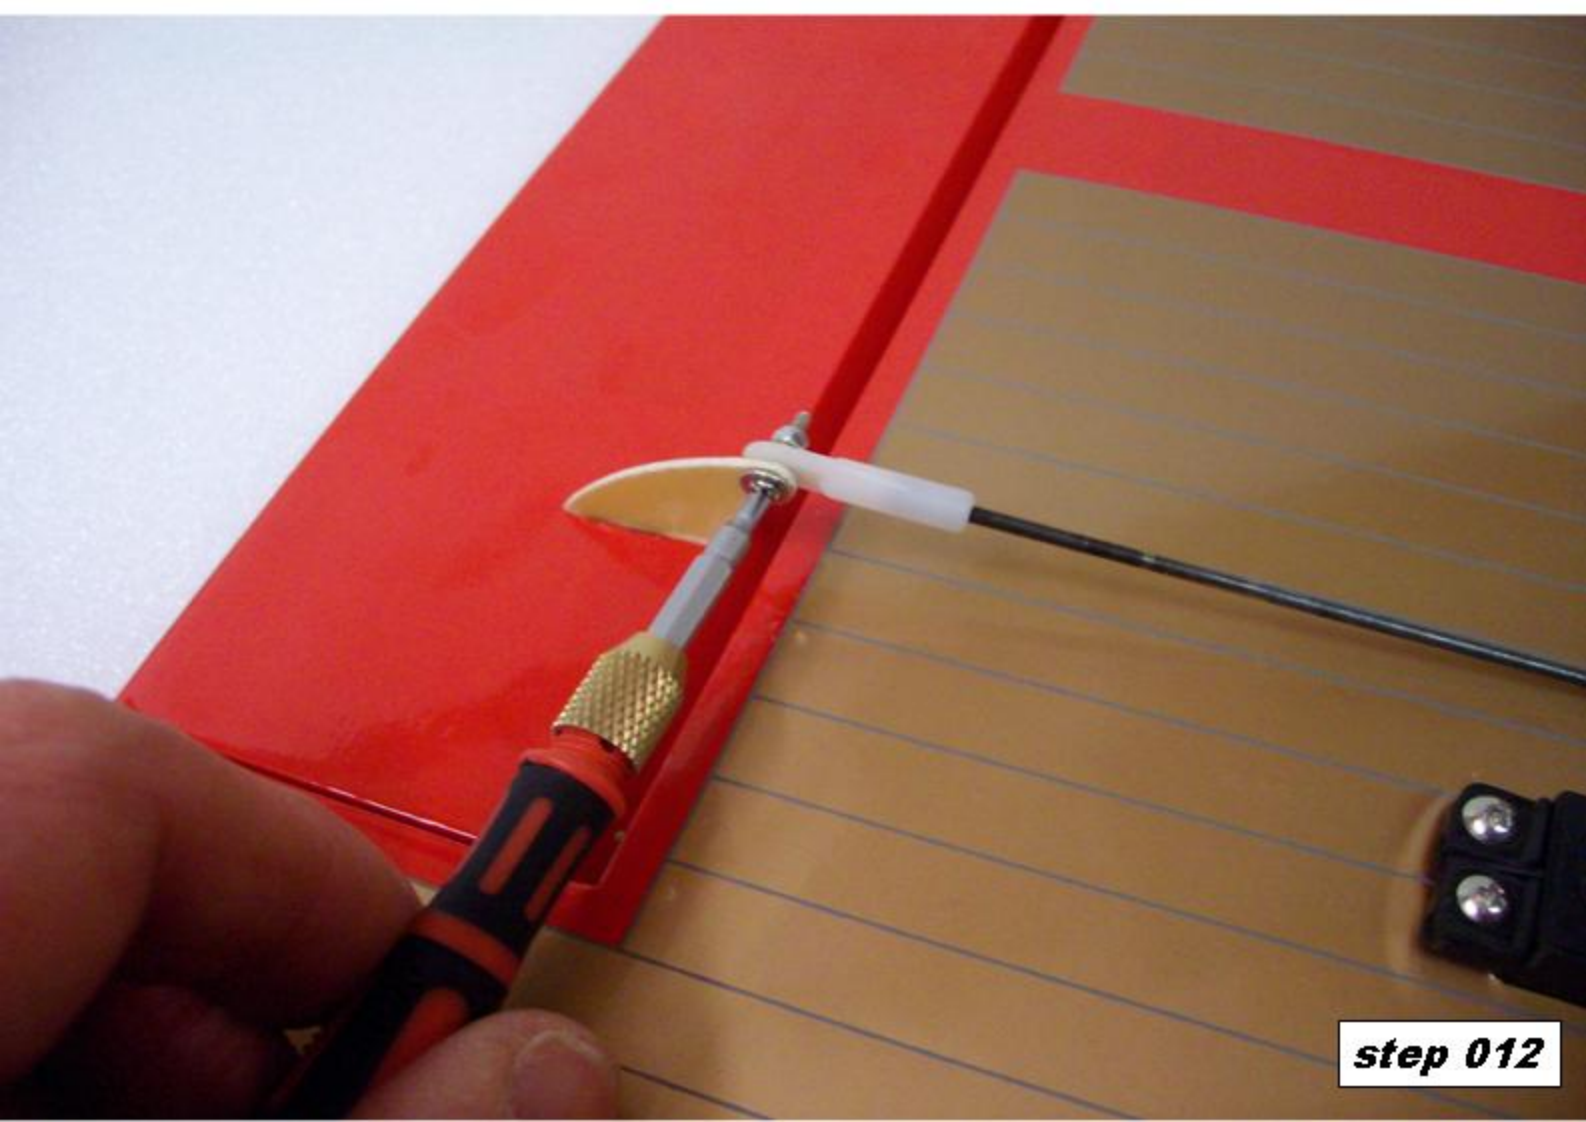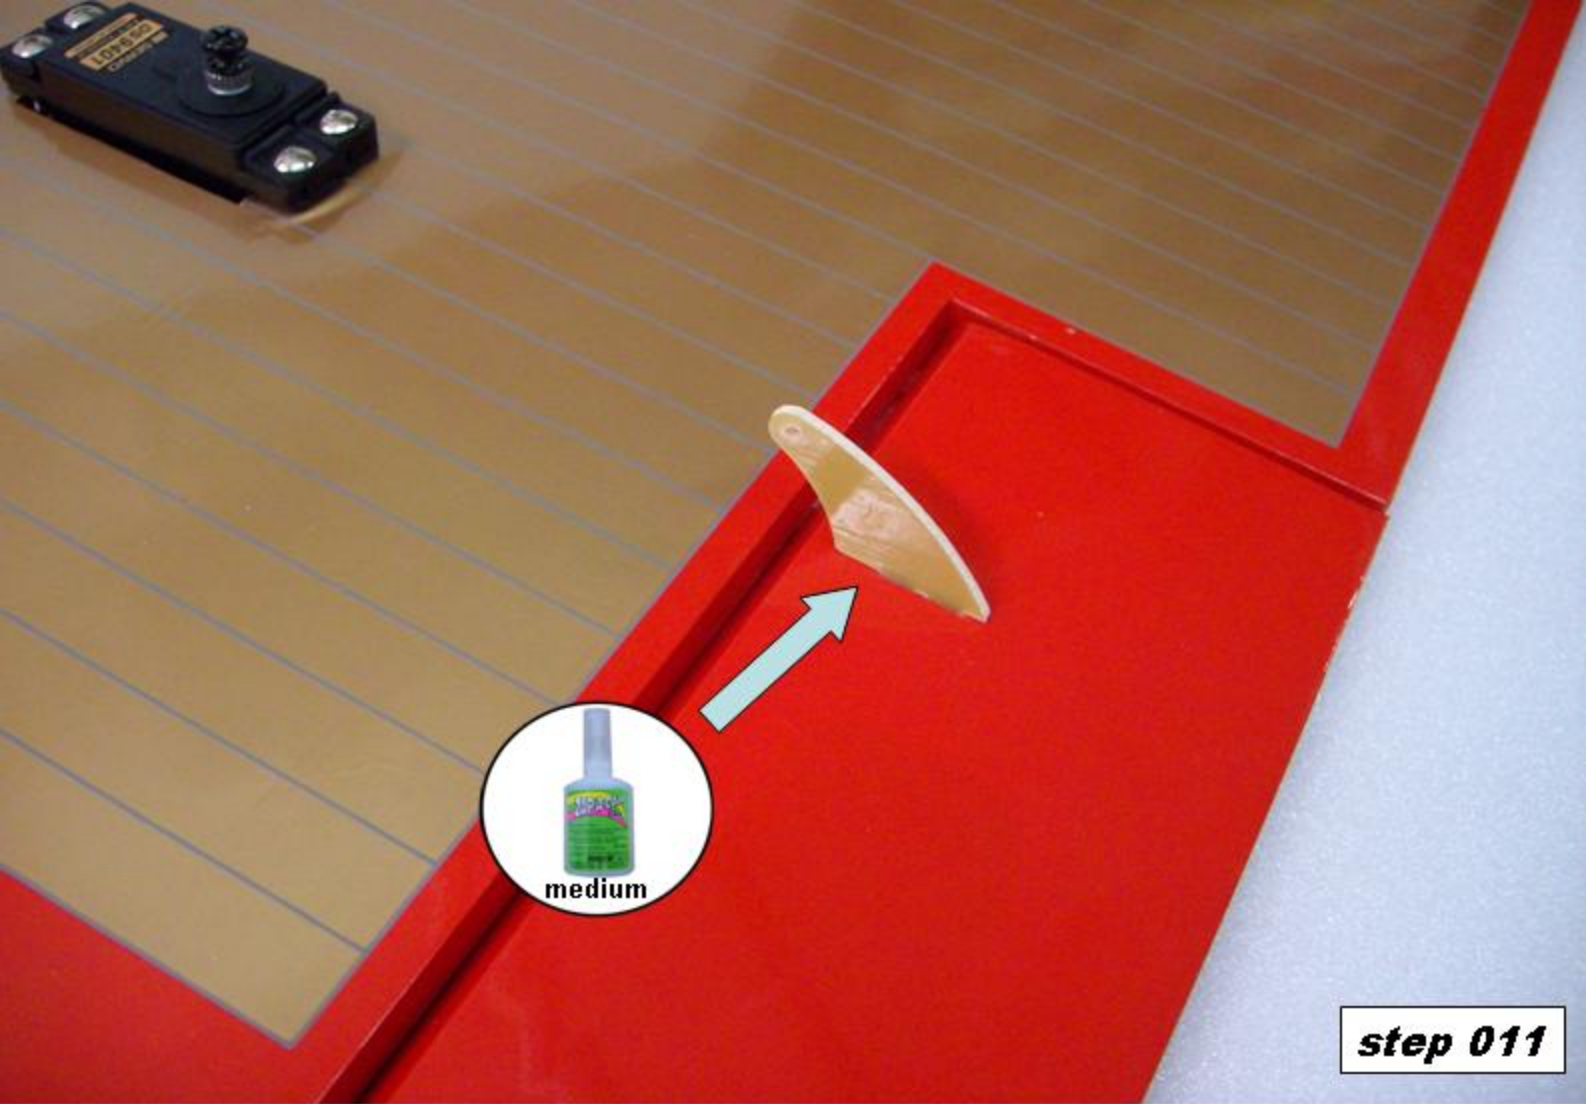

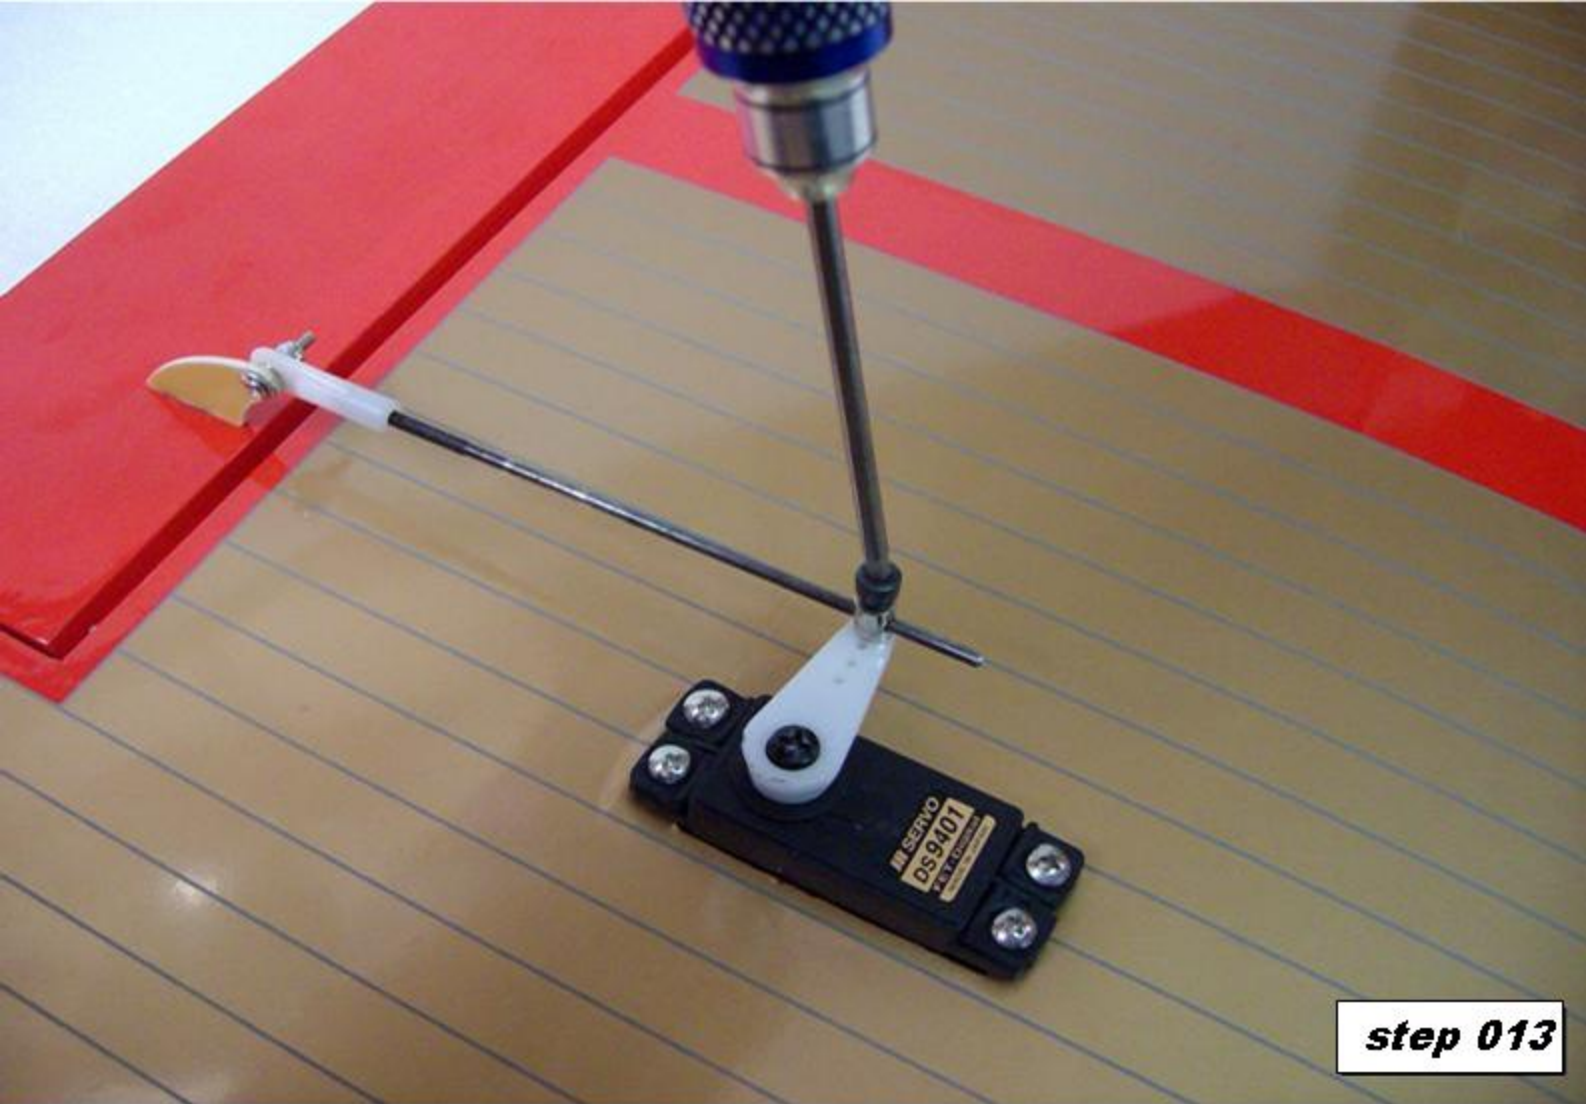


step 013


Very important:
Use silicone to seal

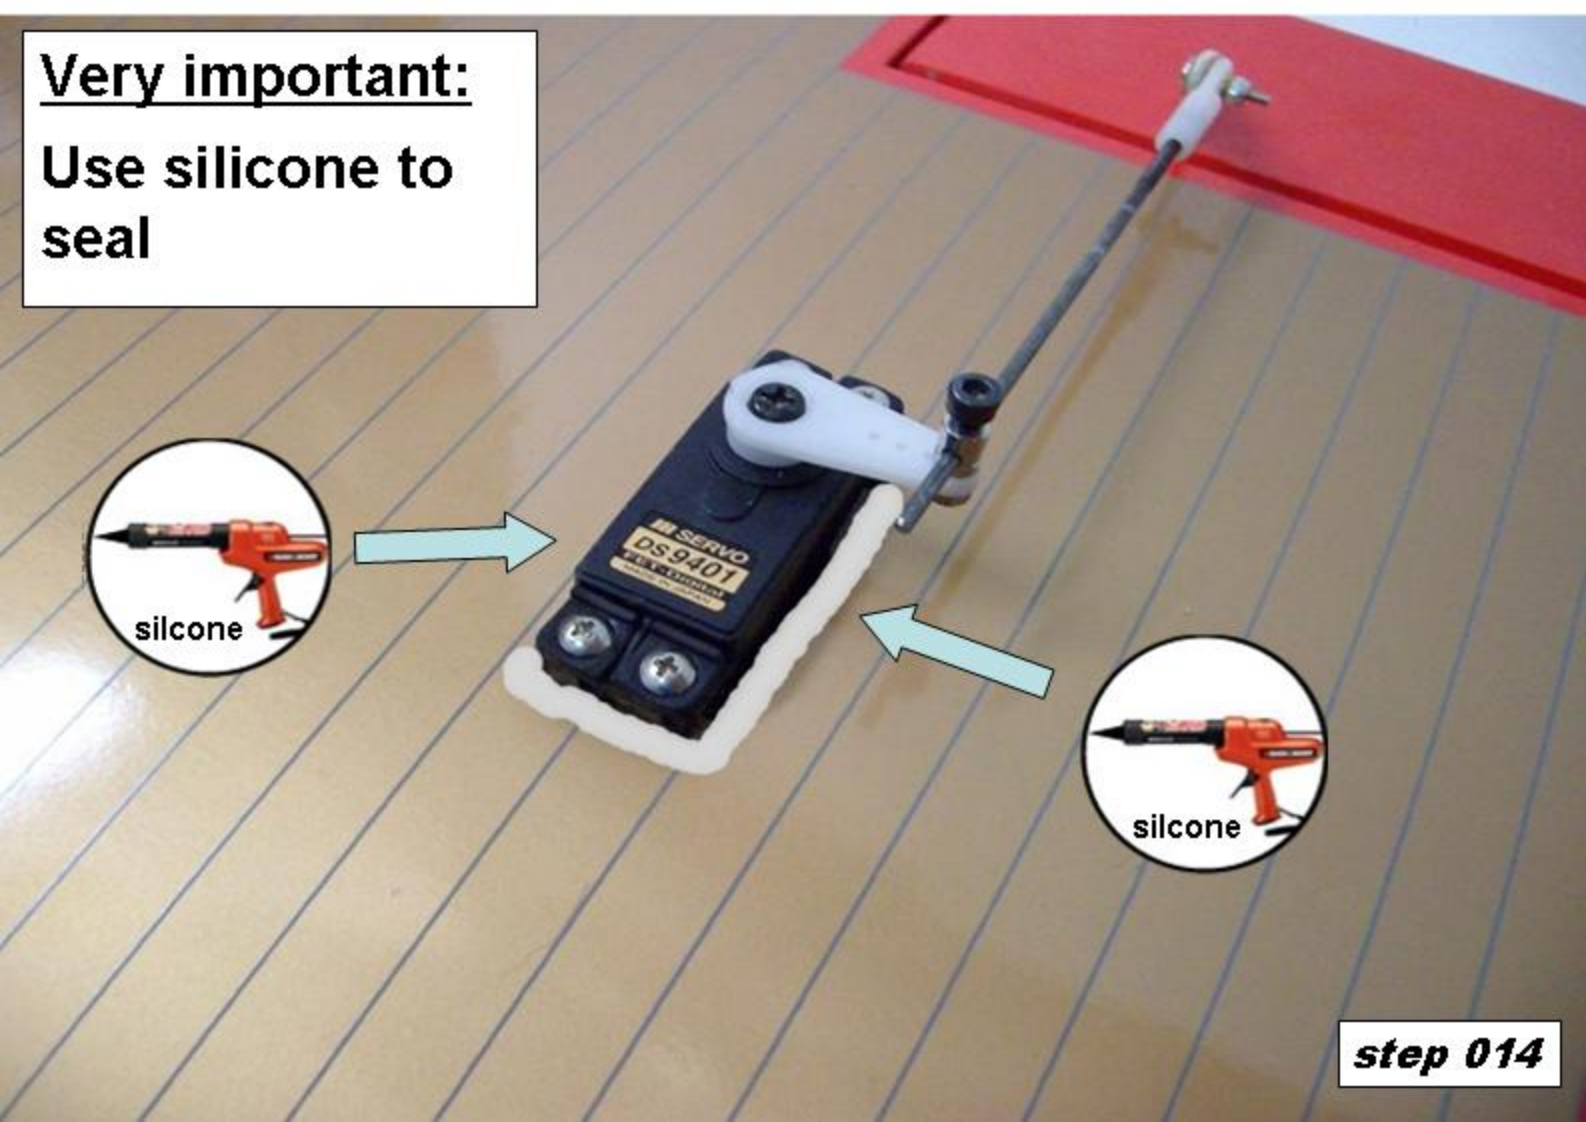



step 014

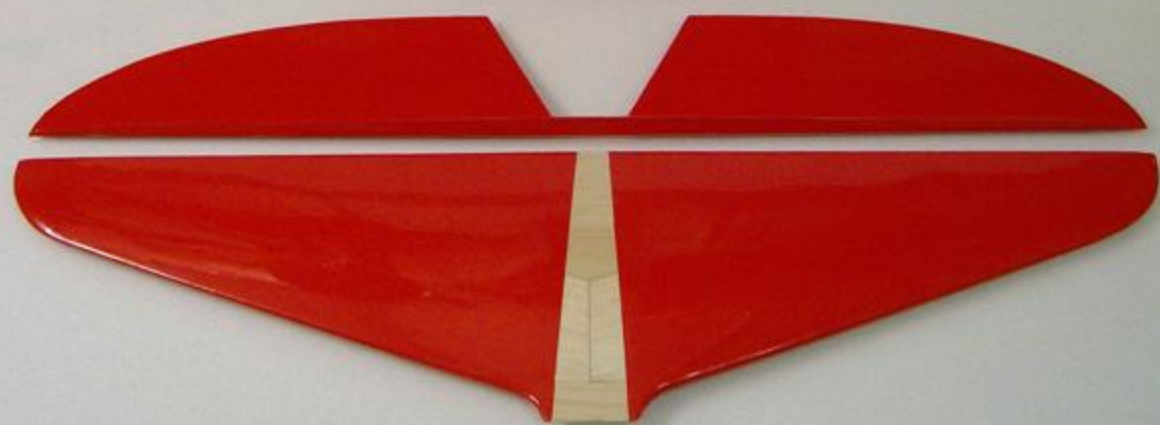



step 015


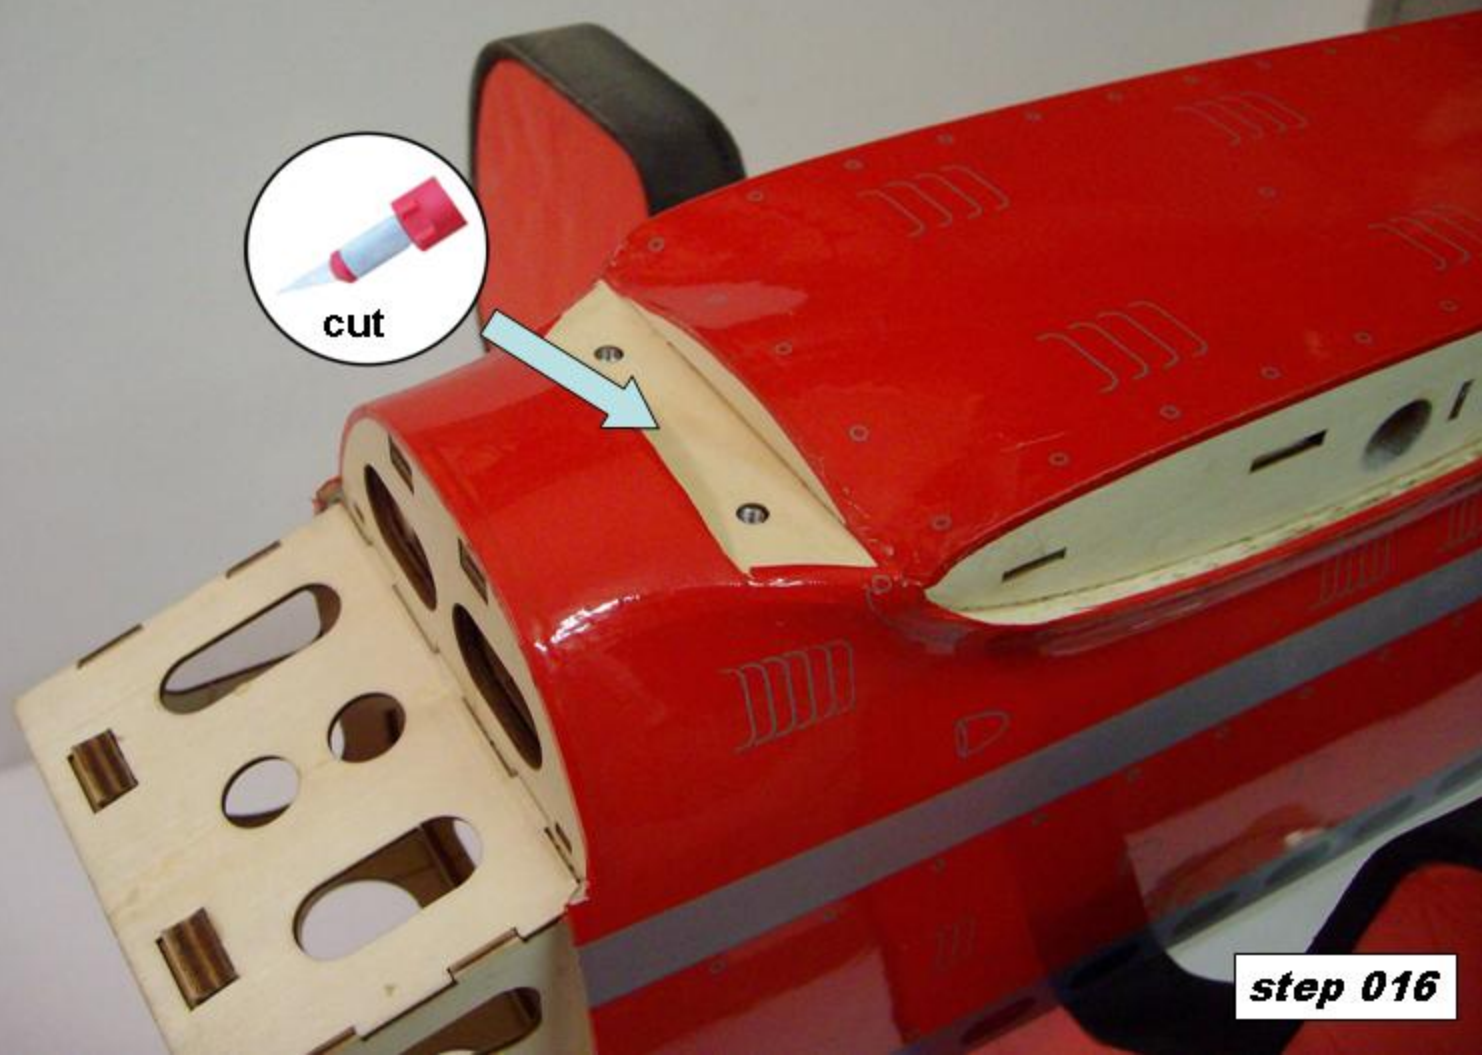




step 016

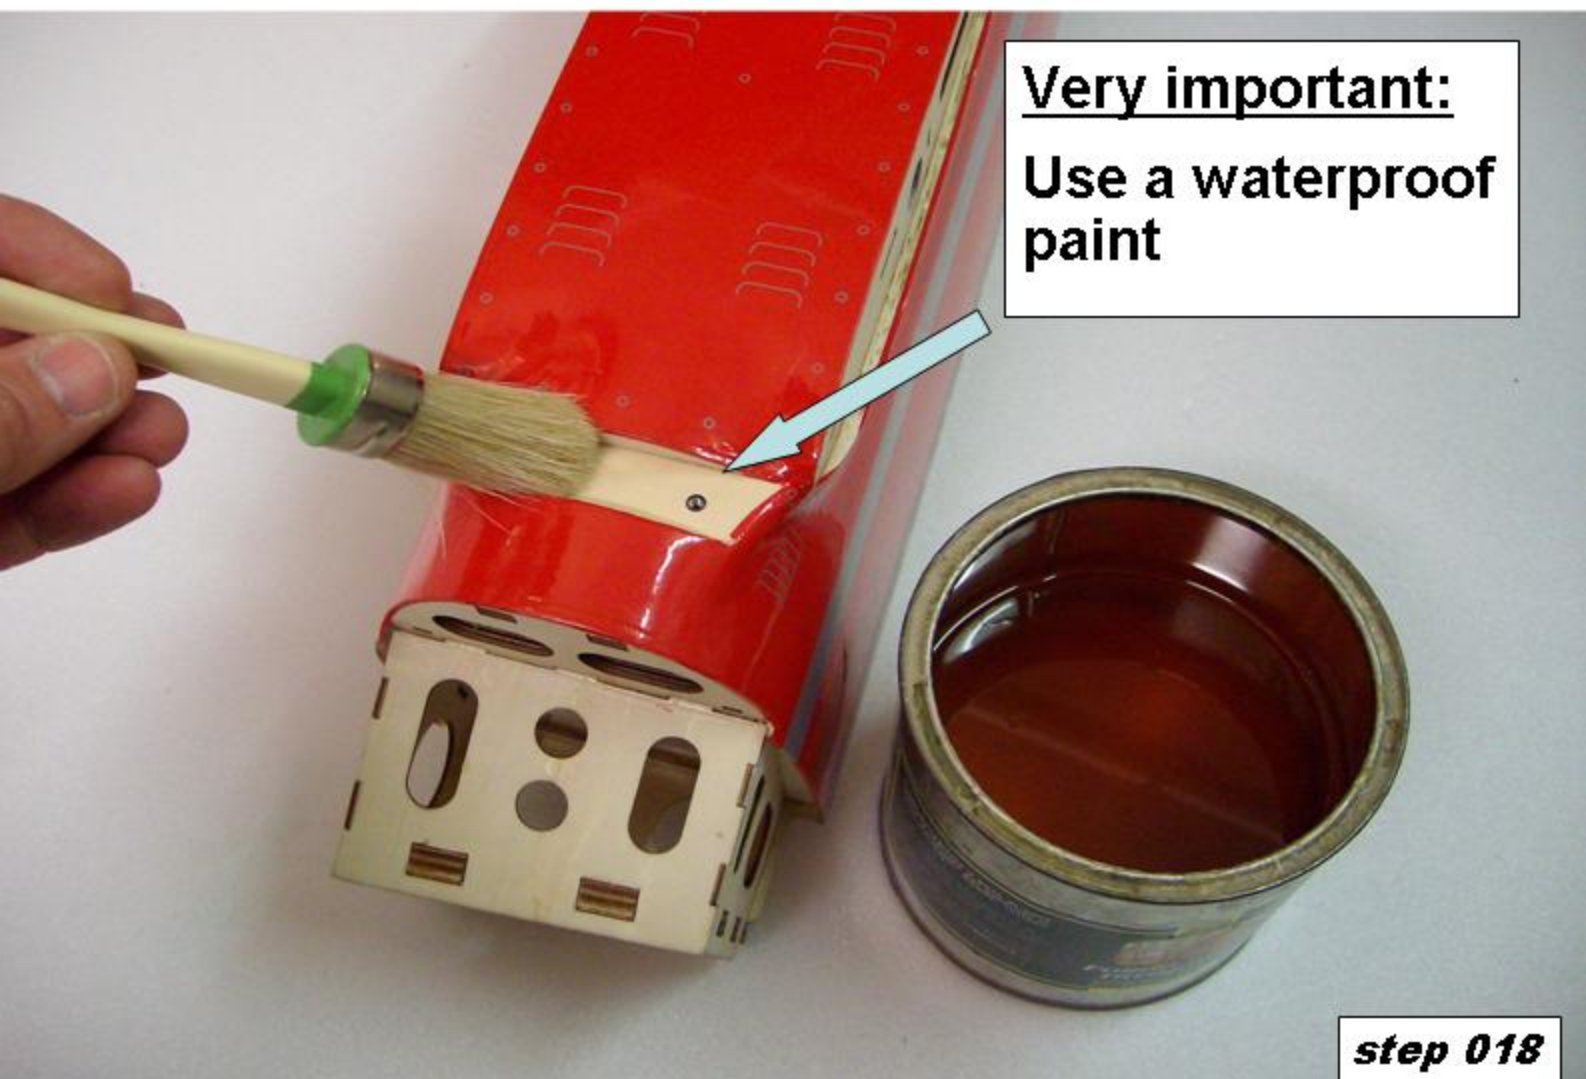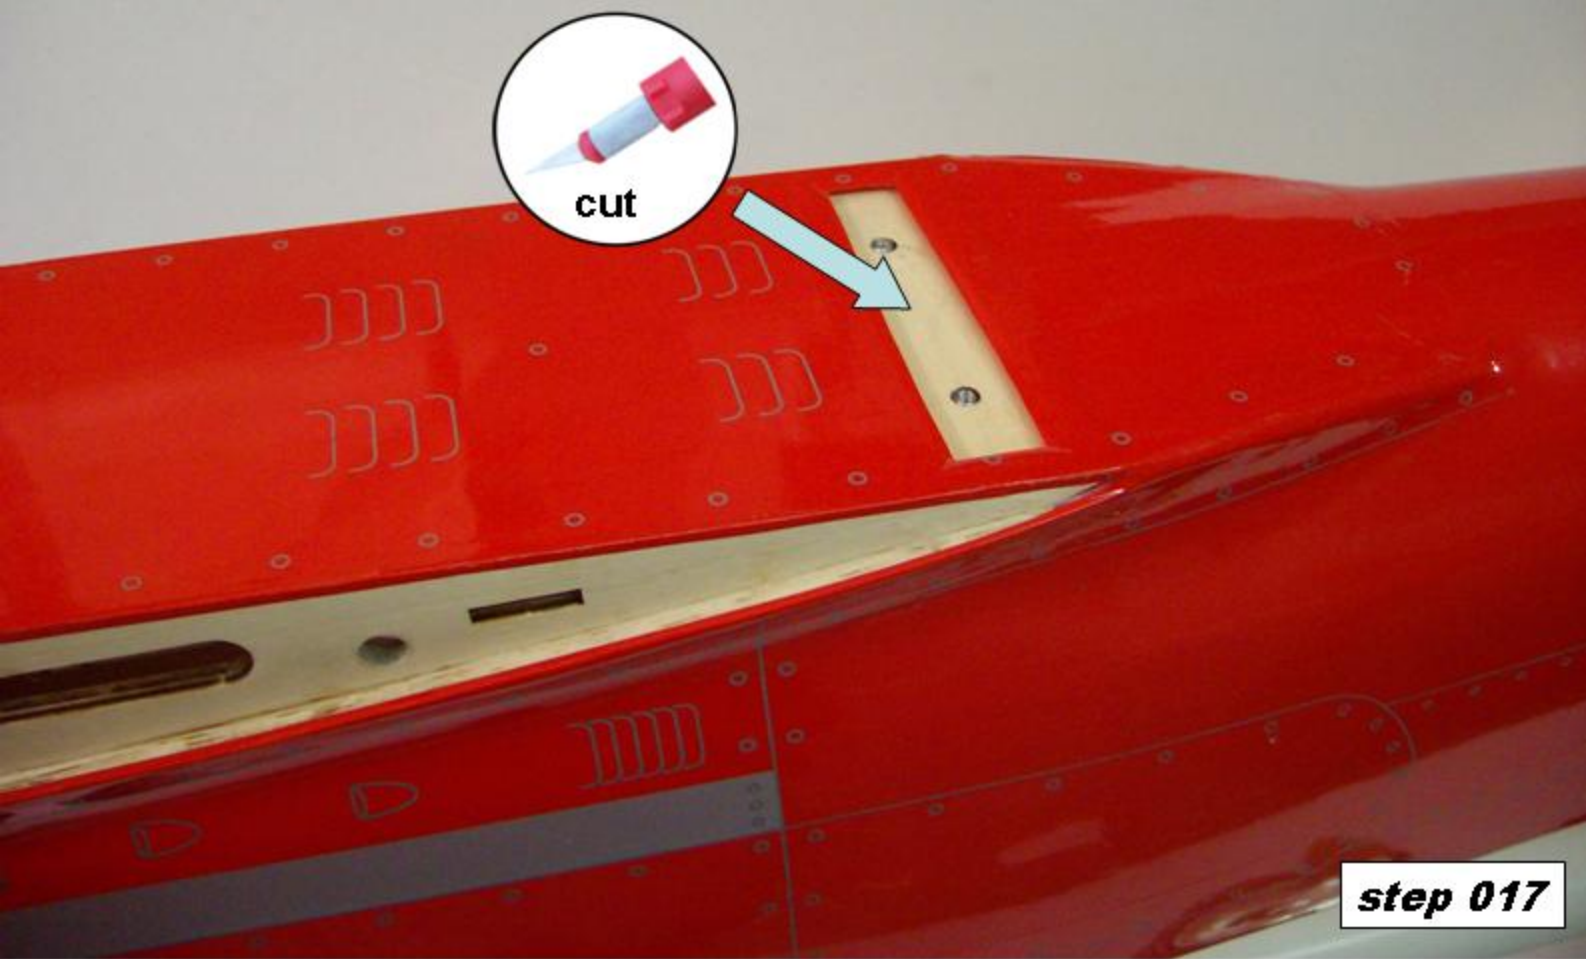





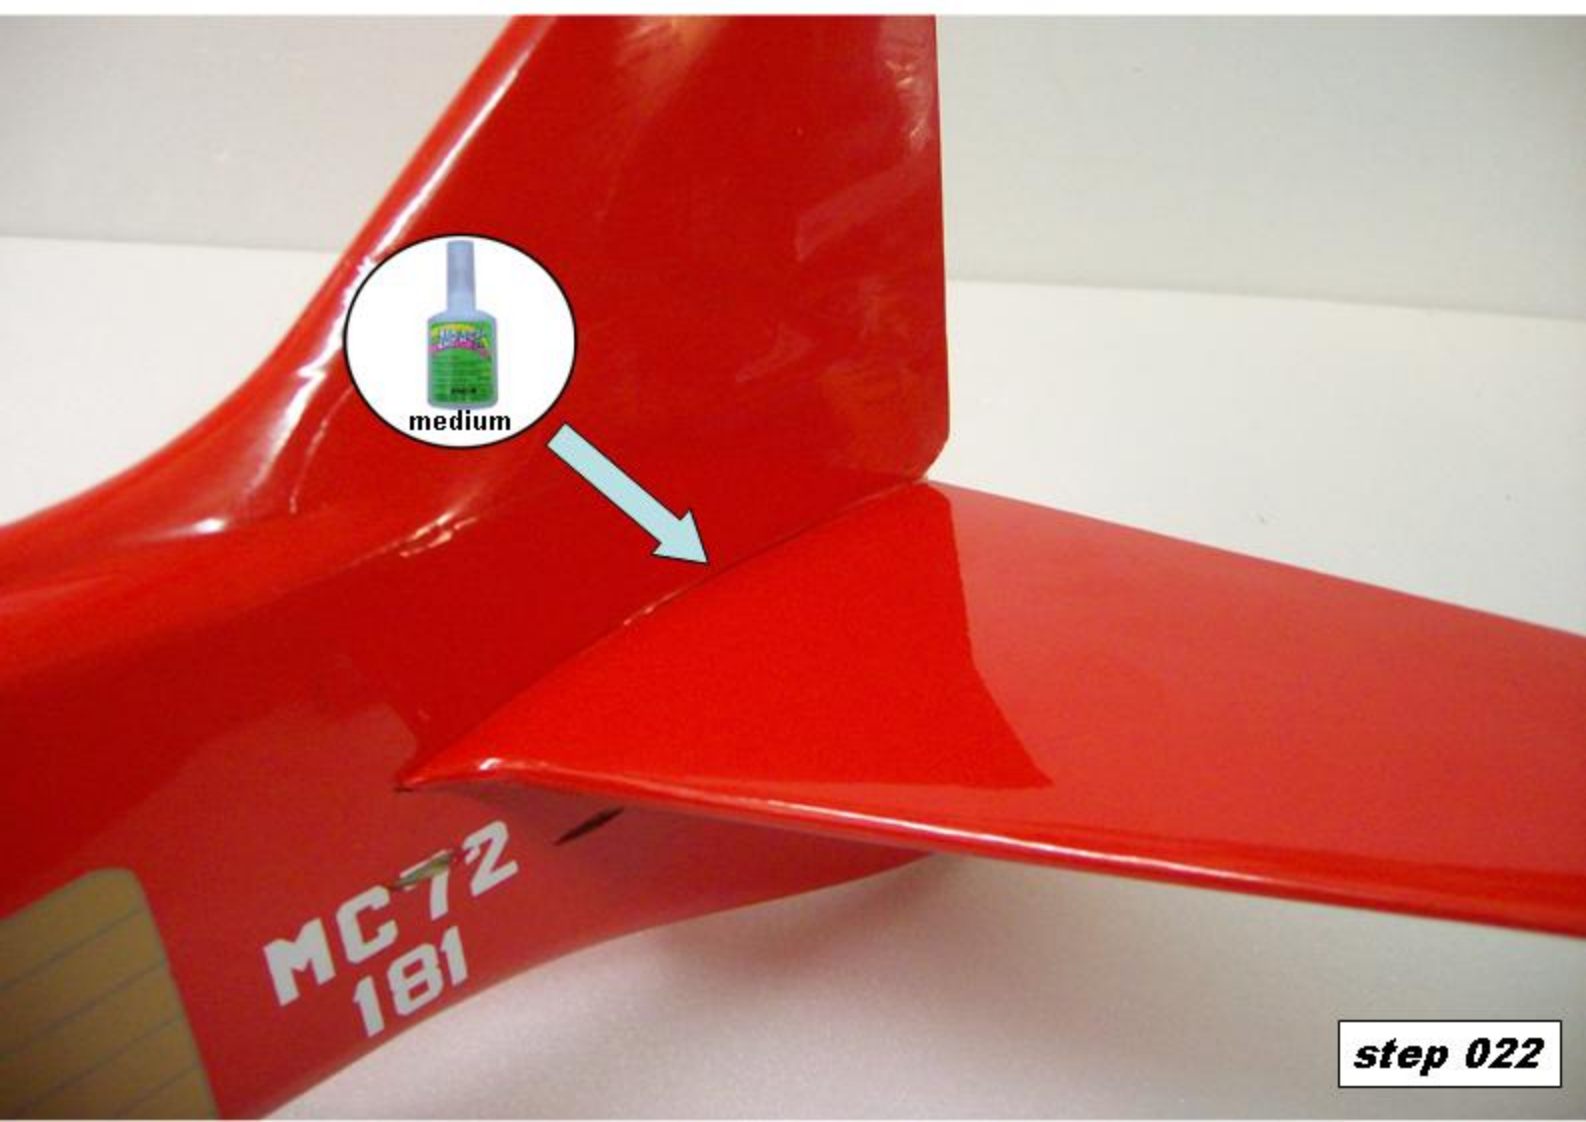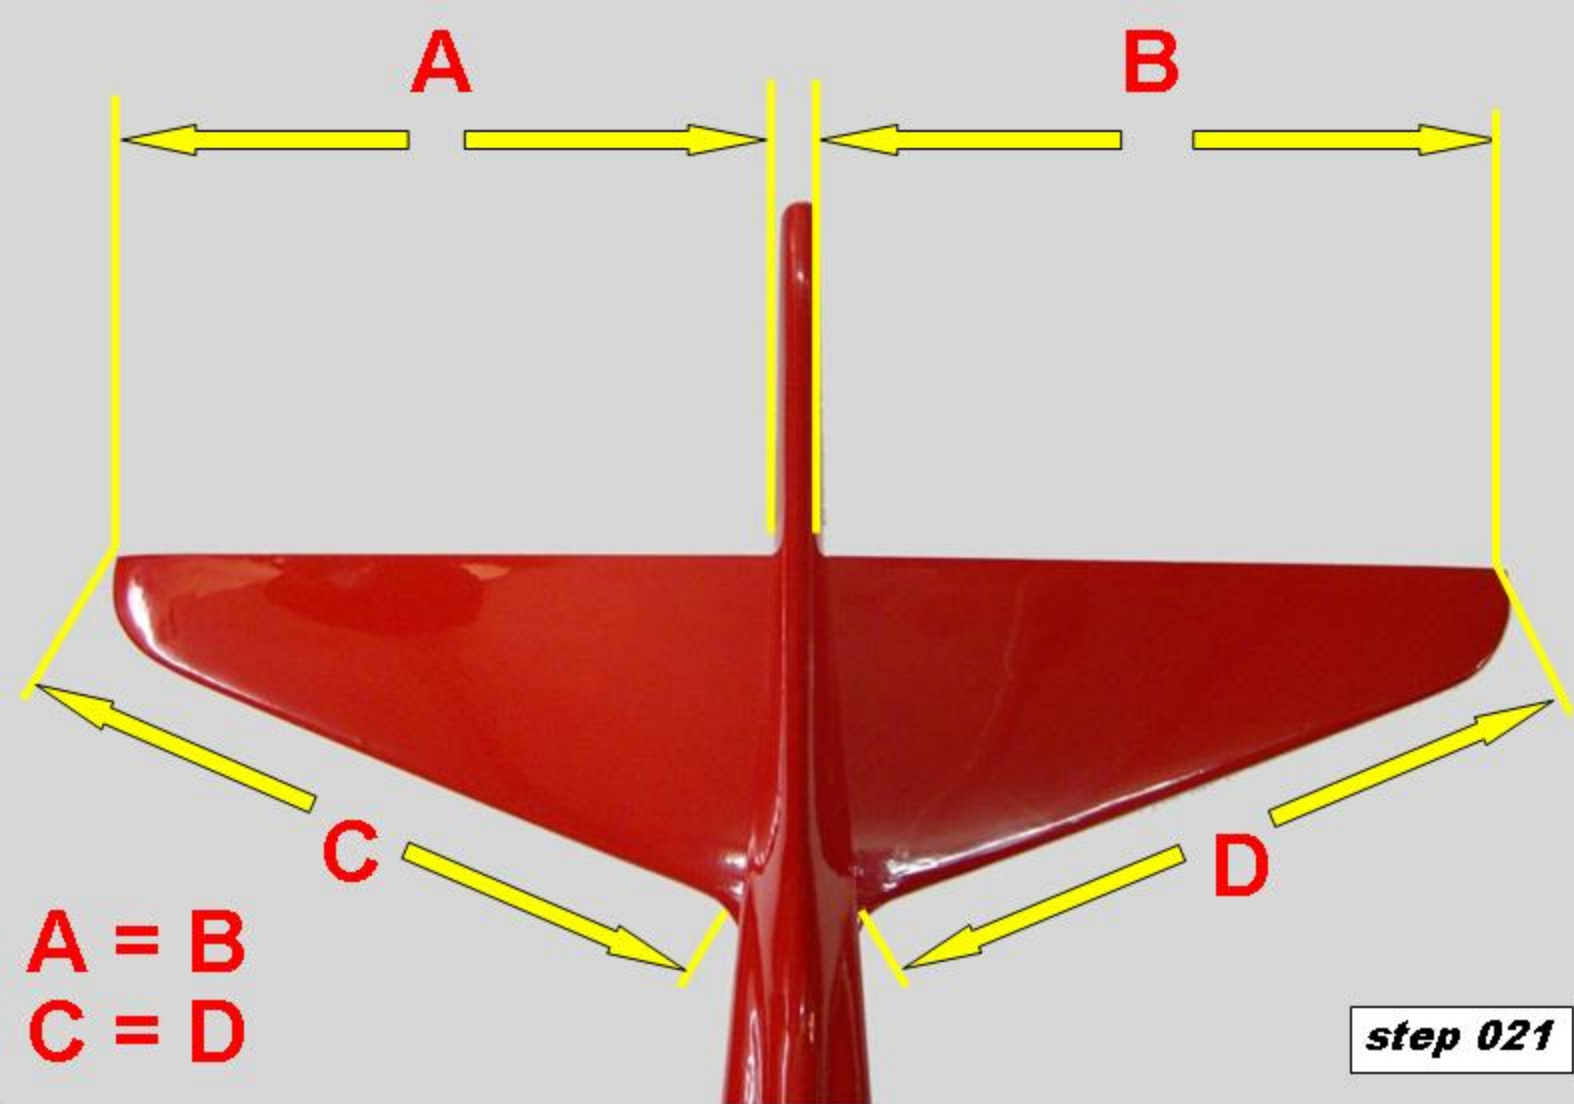

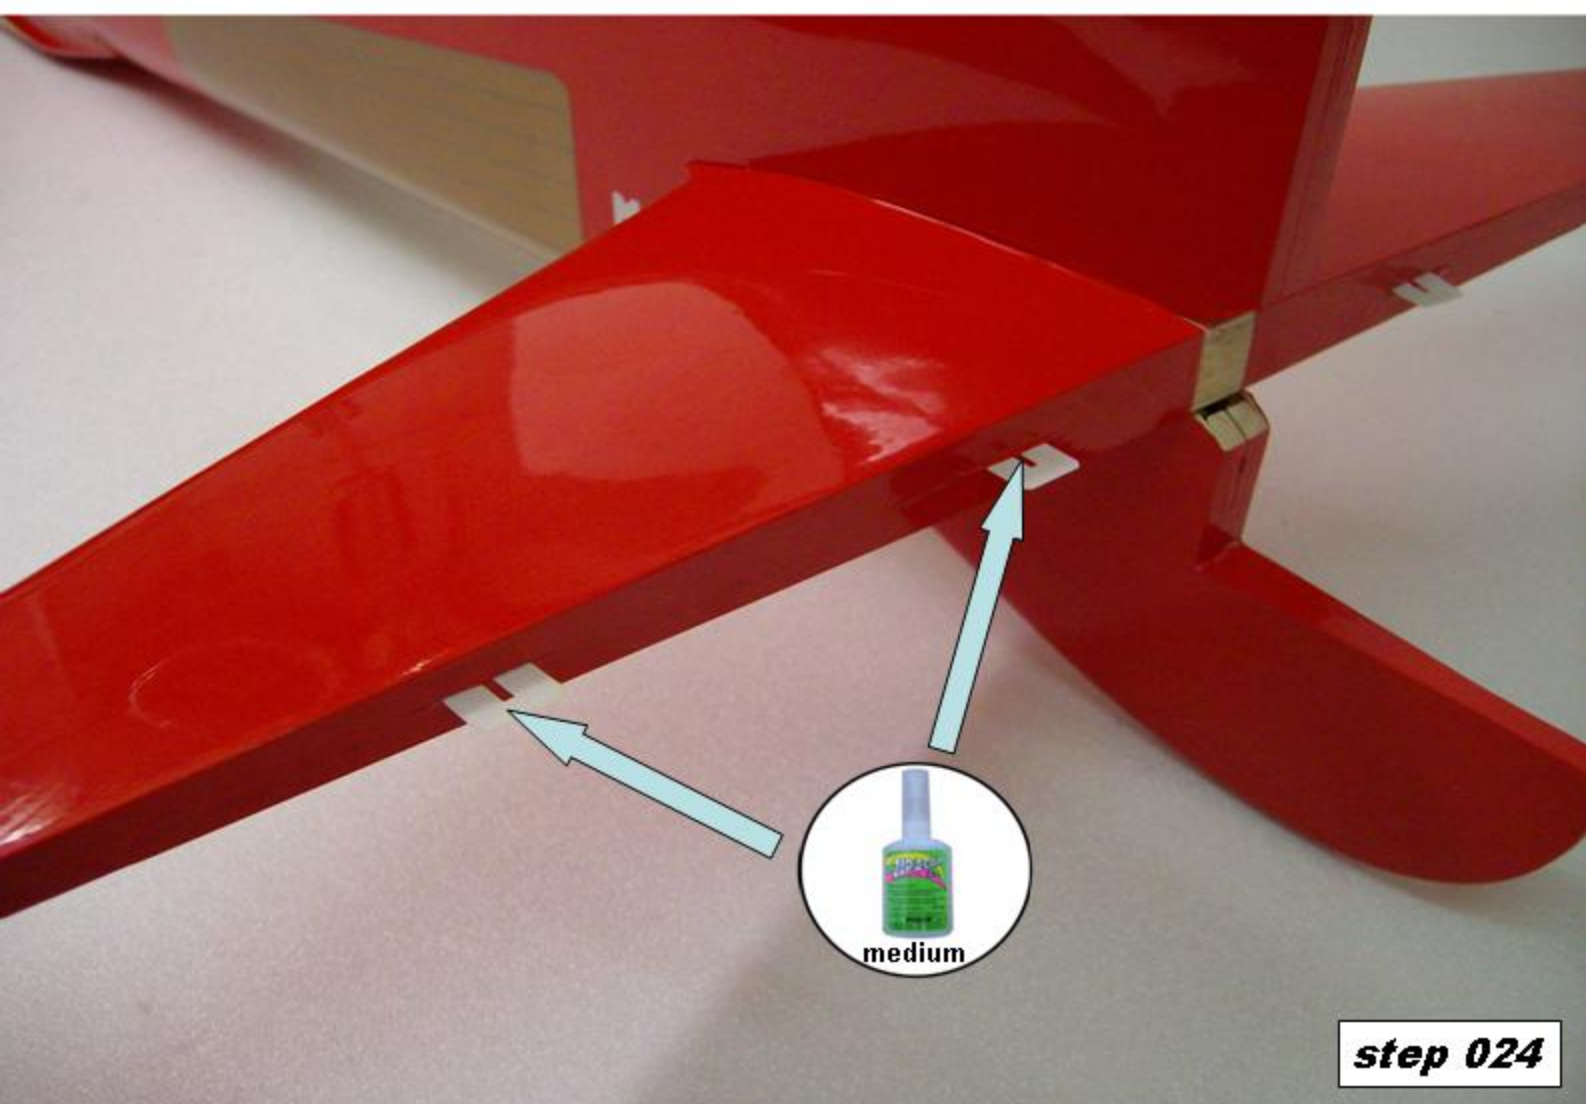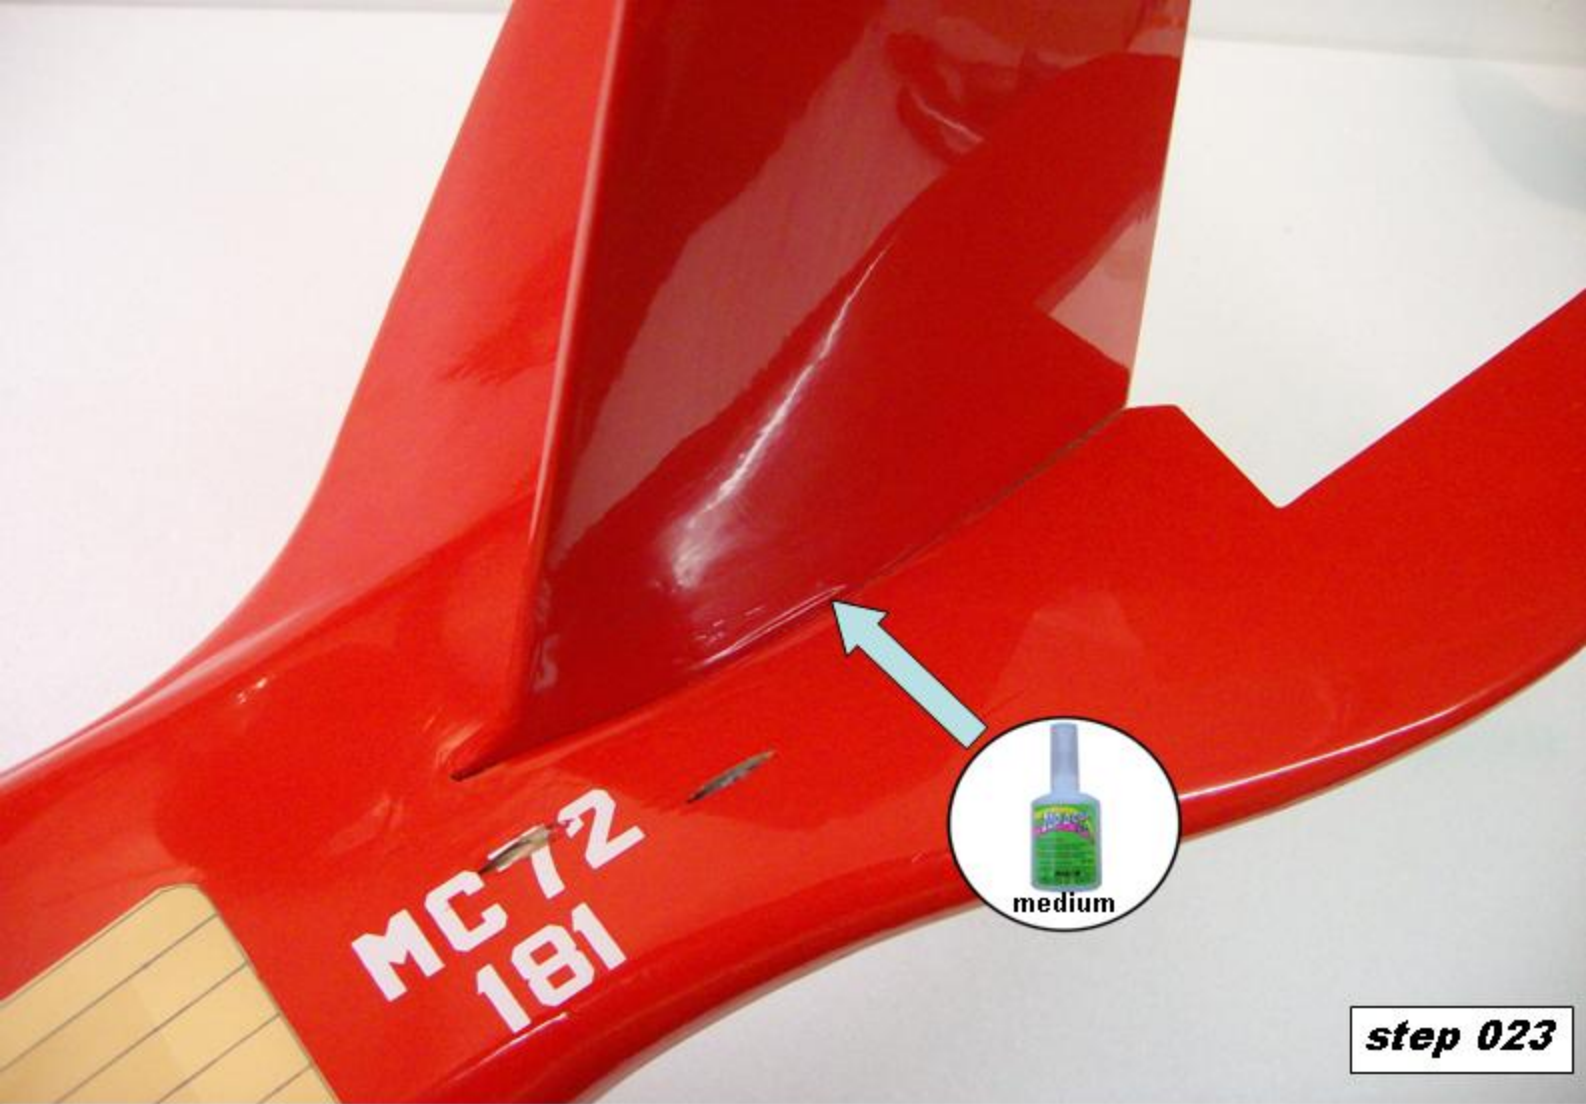


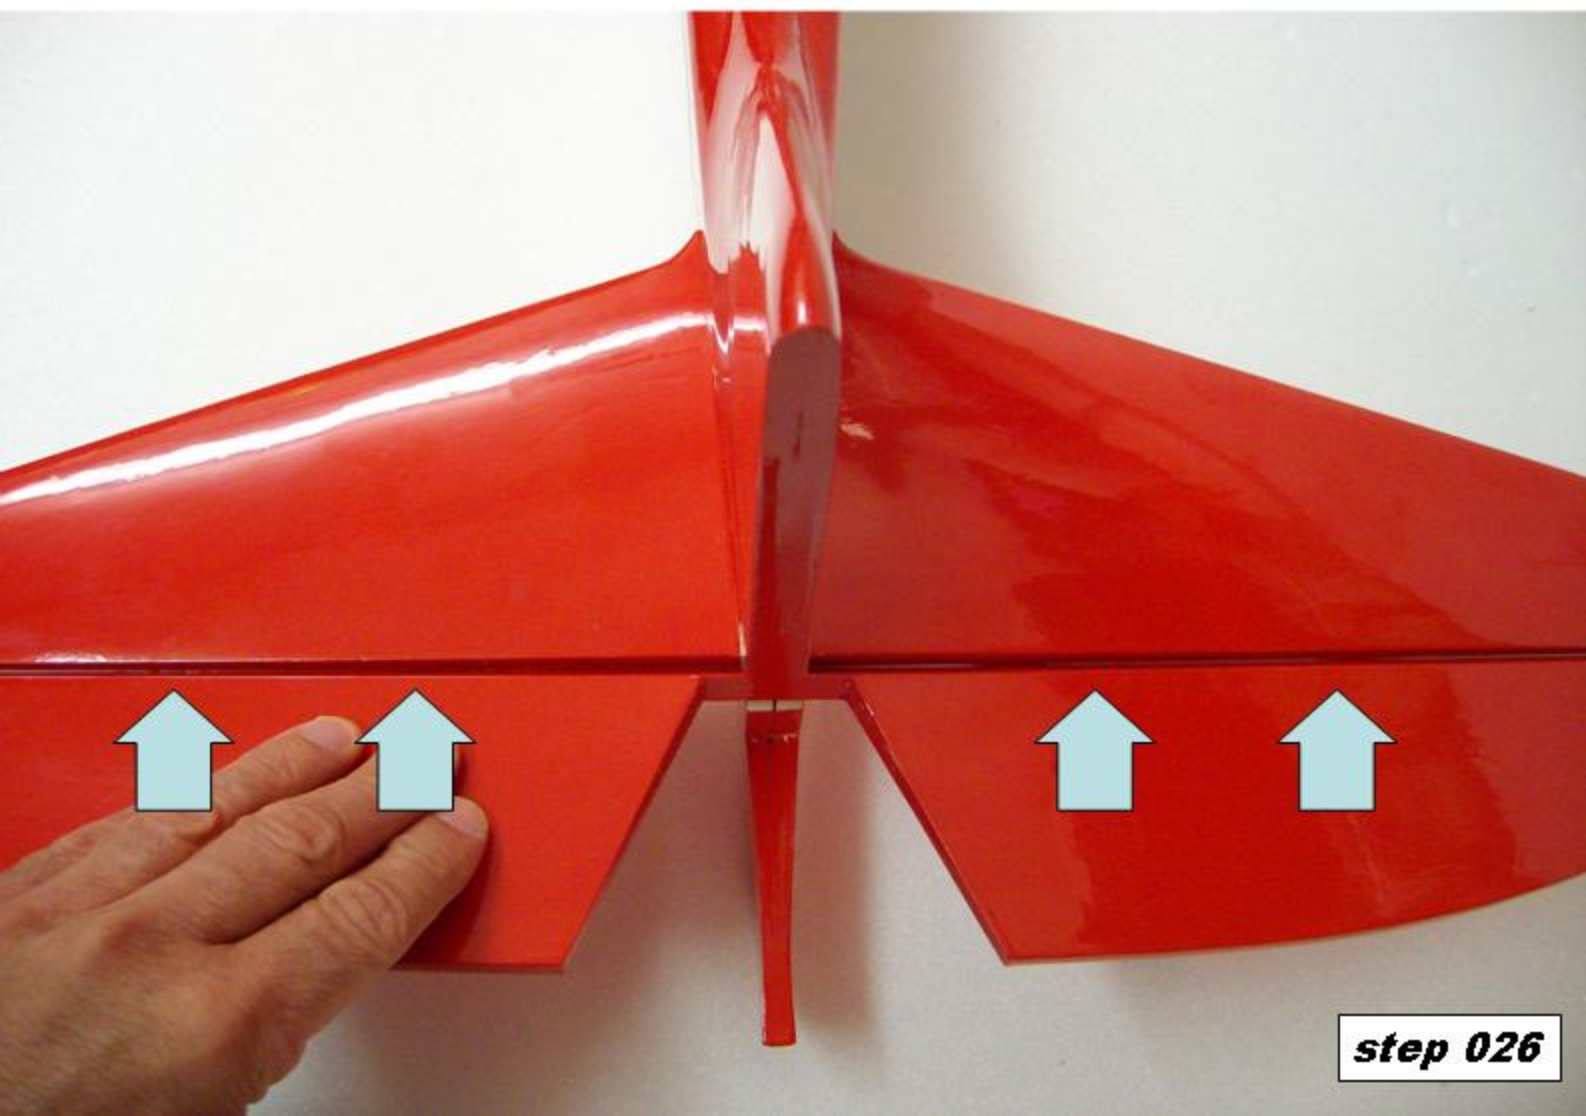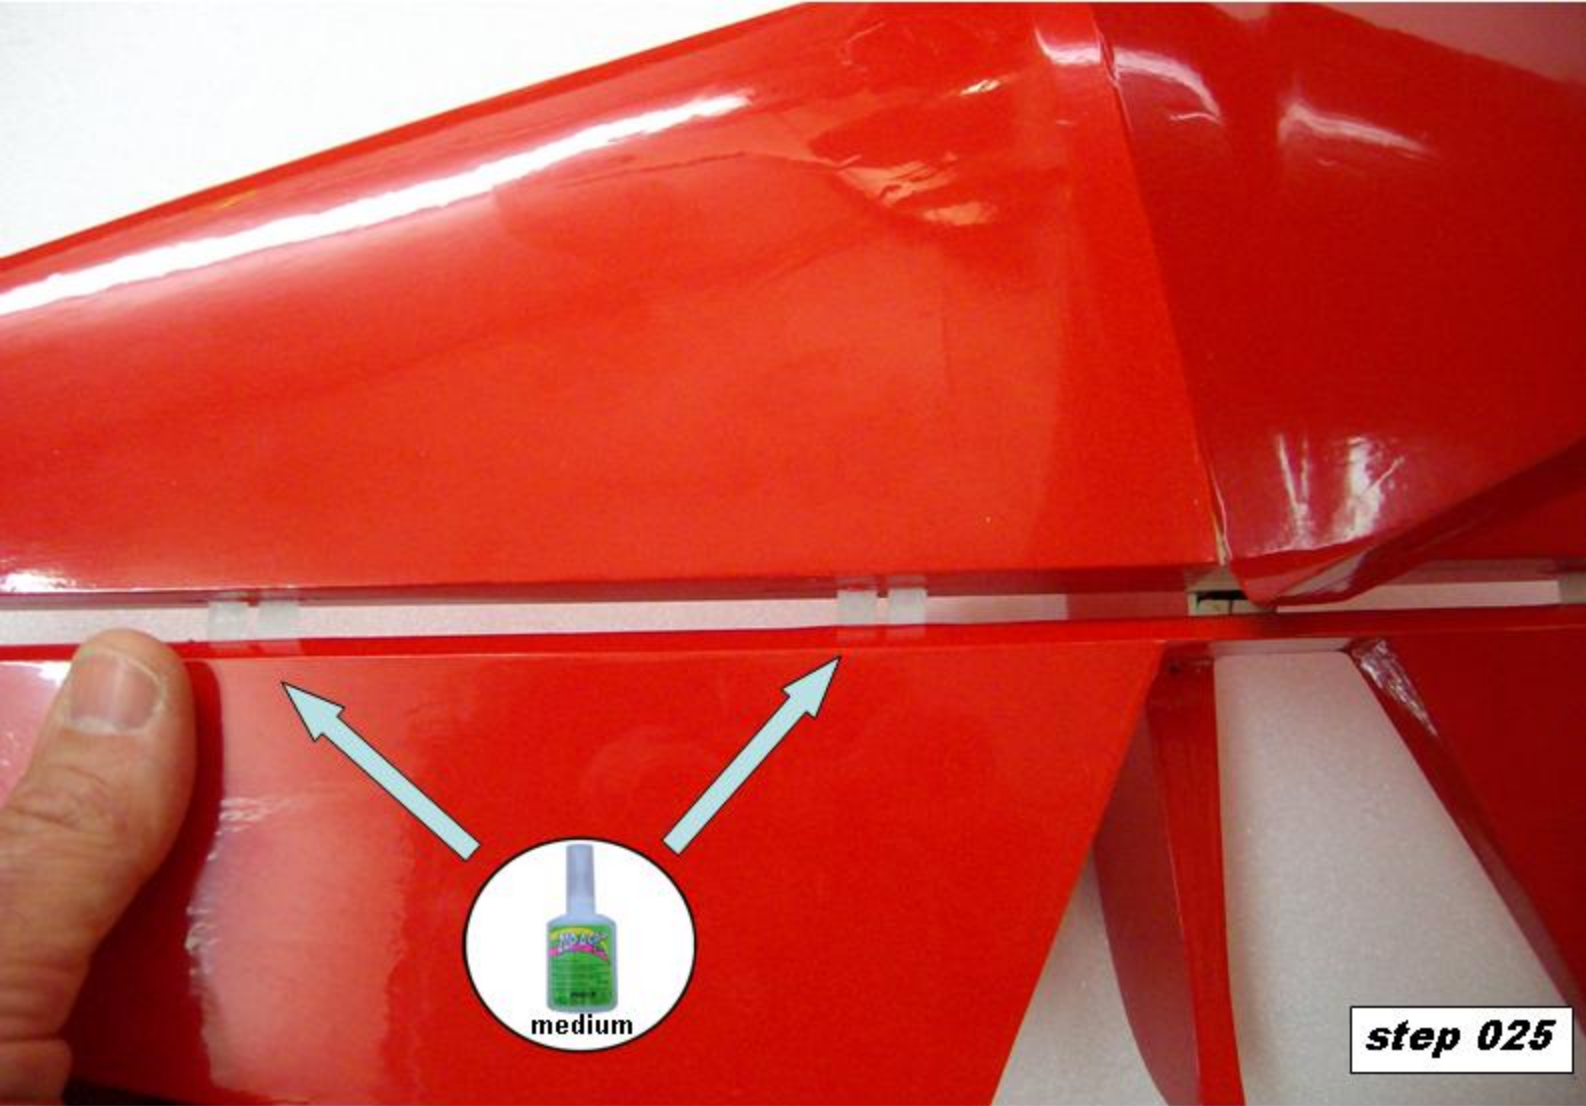


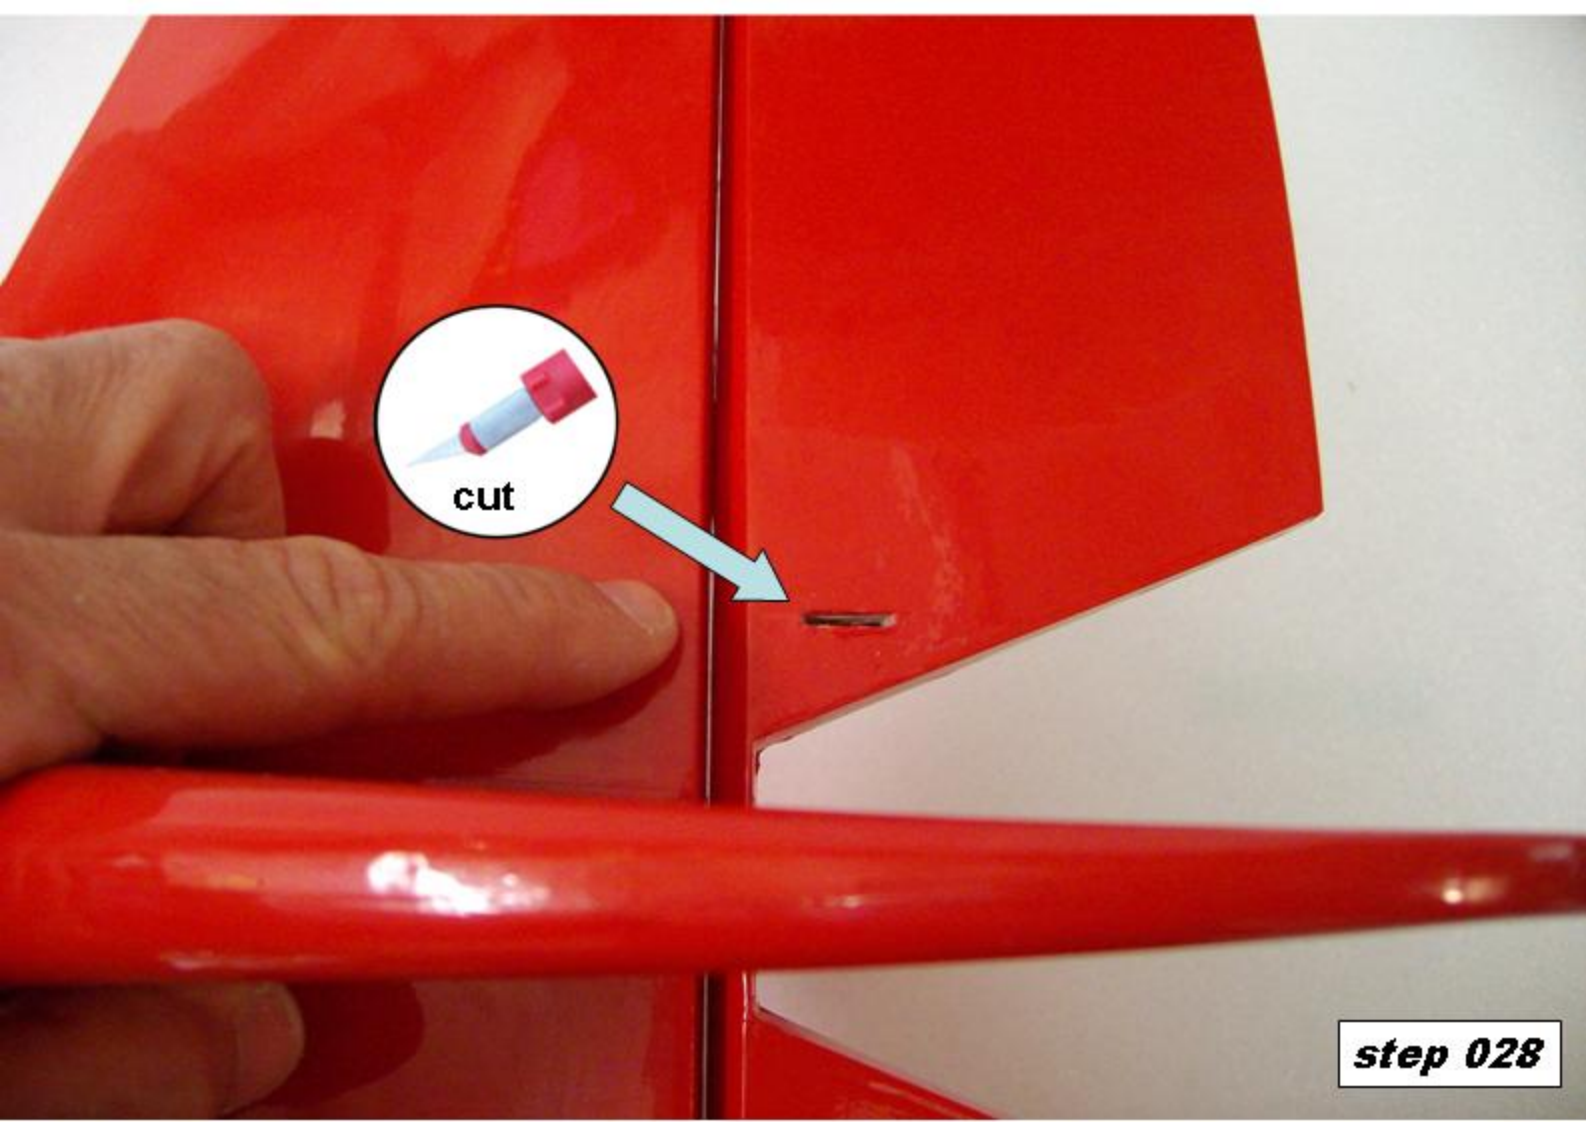


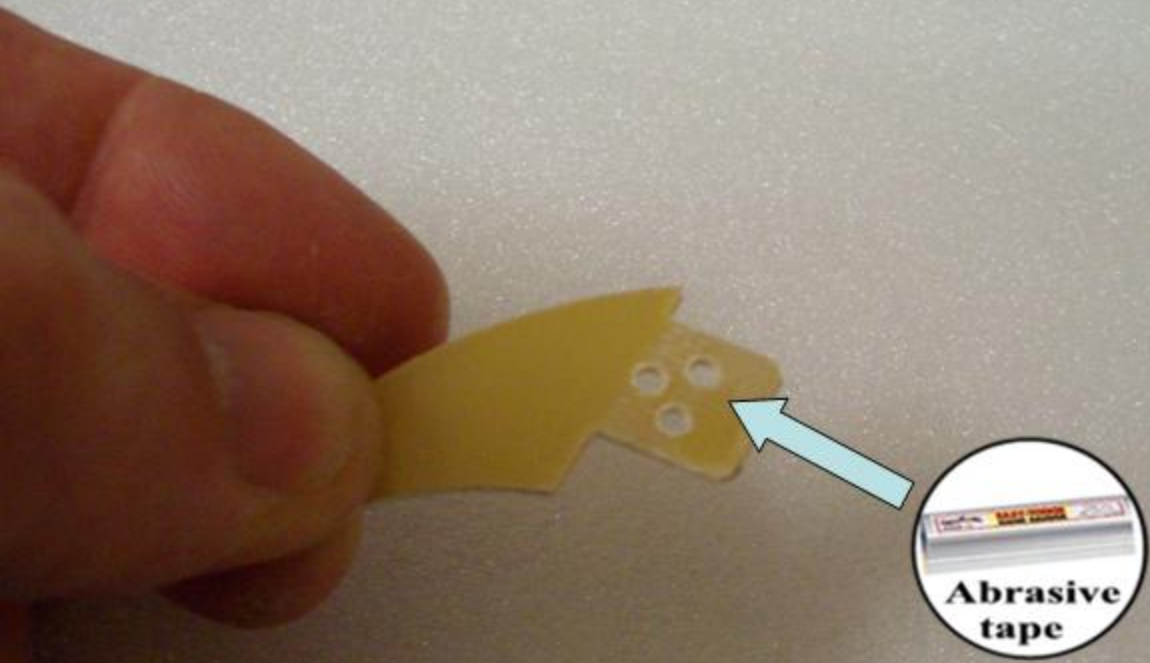


step 029

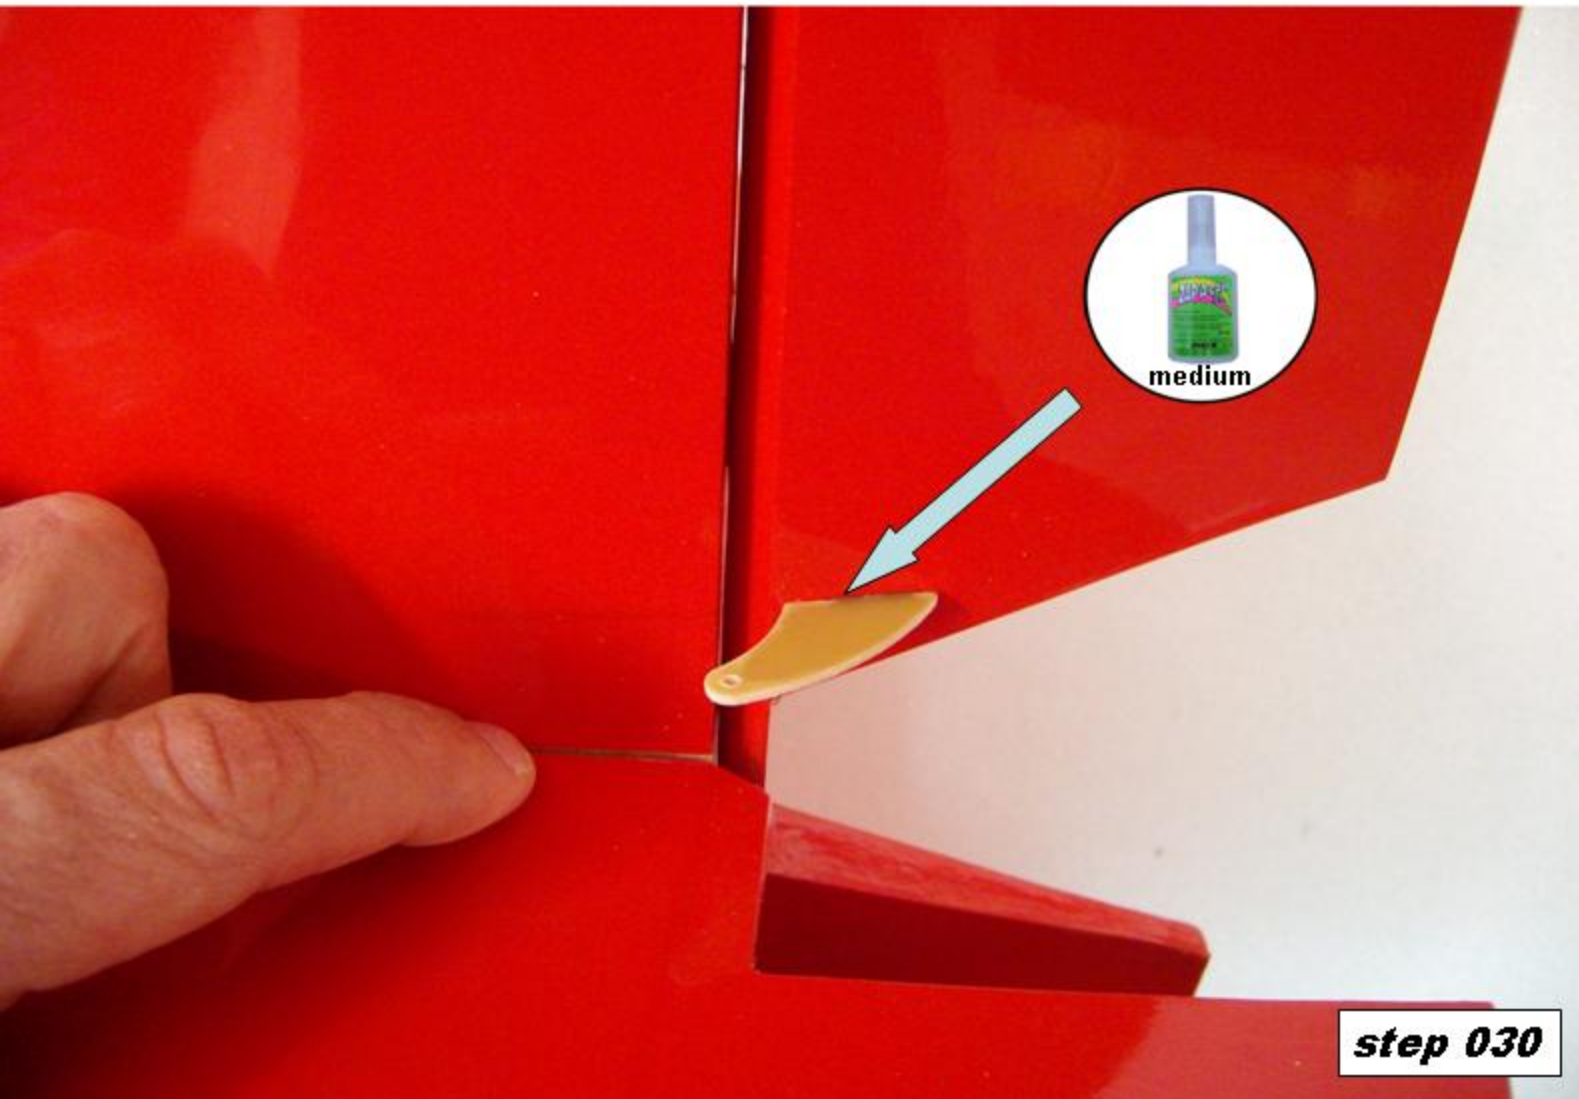


step 030

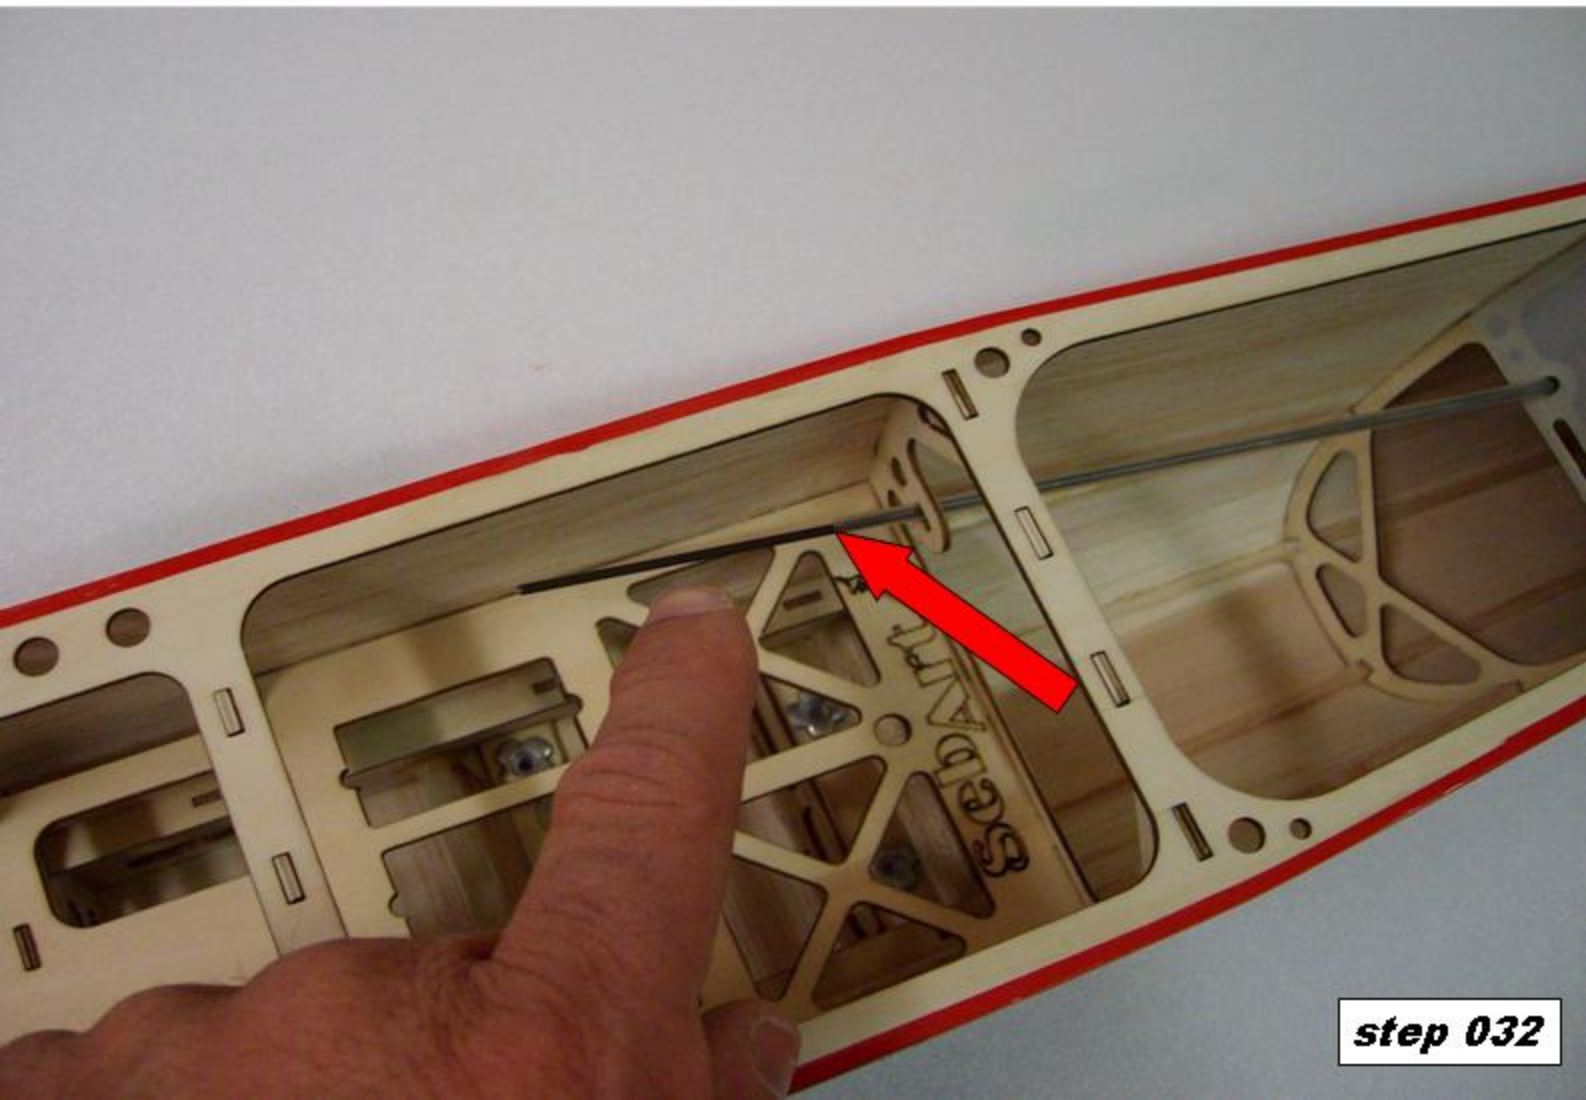
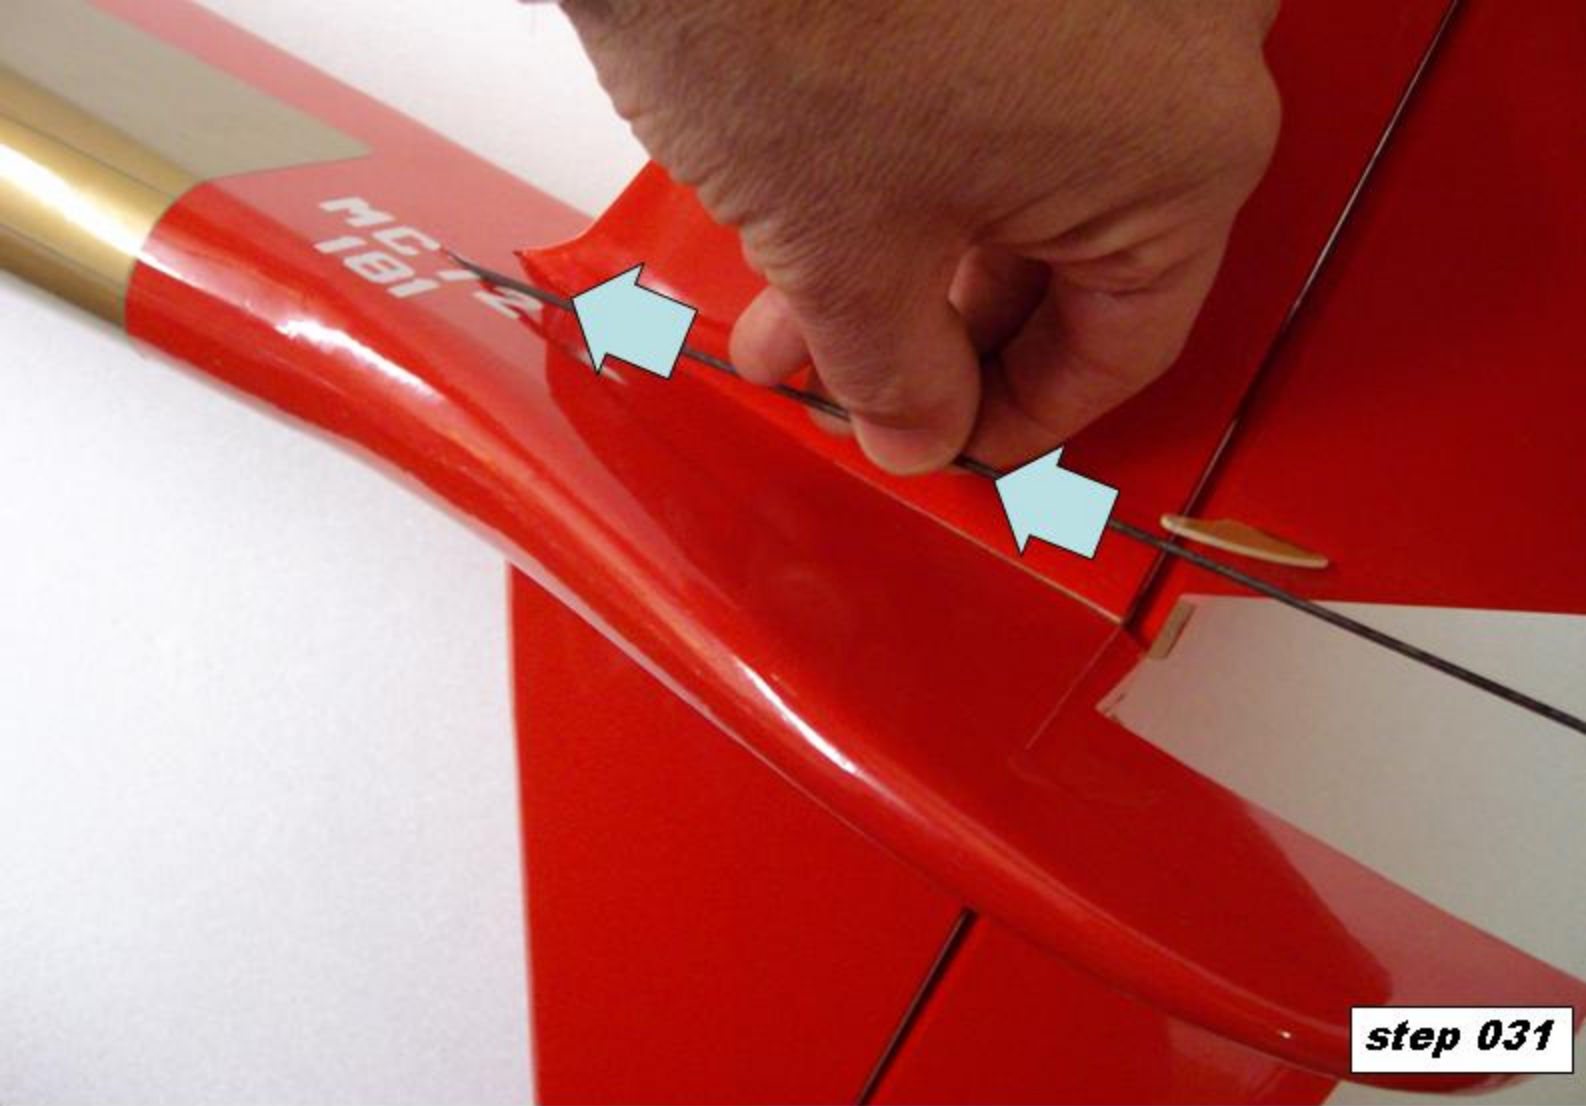


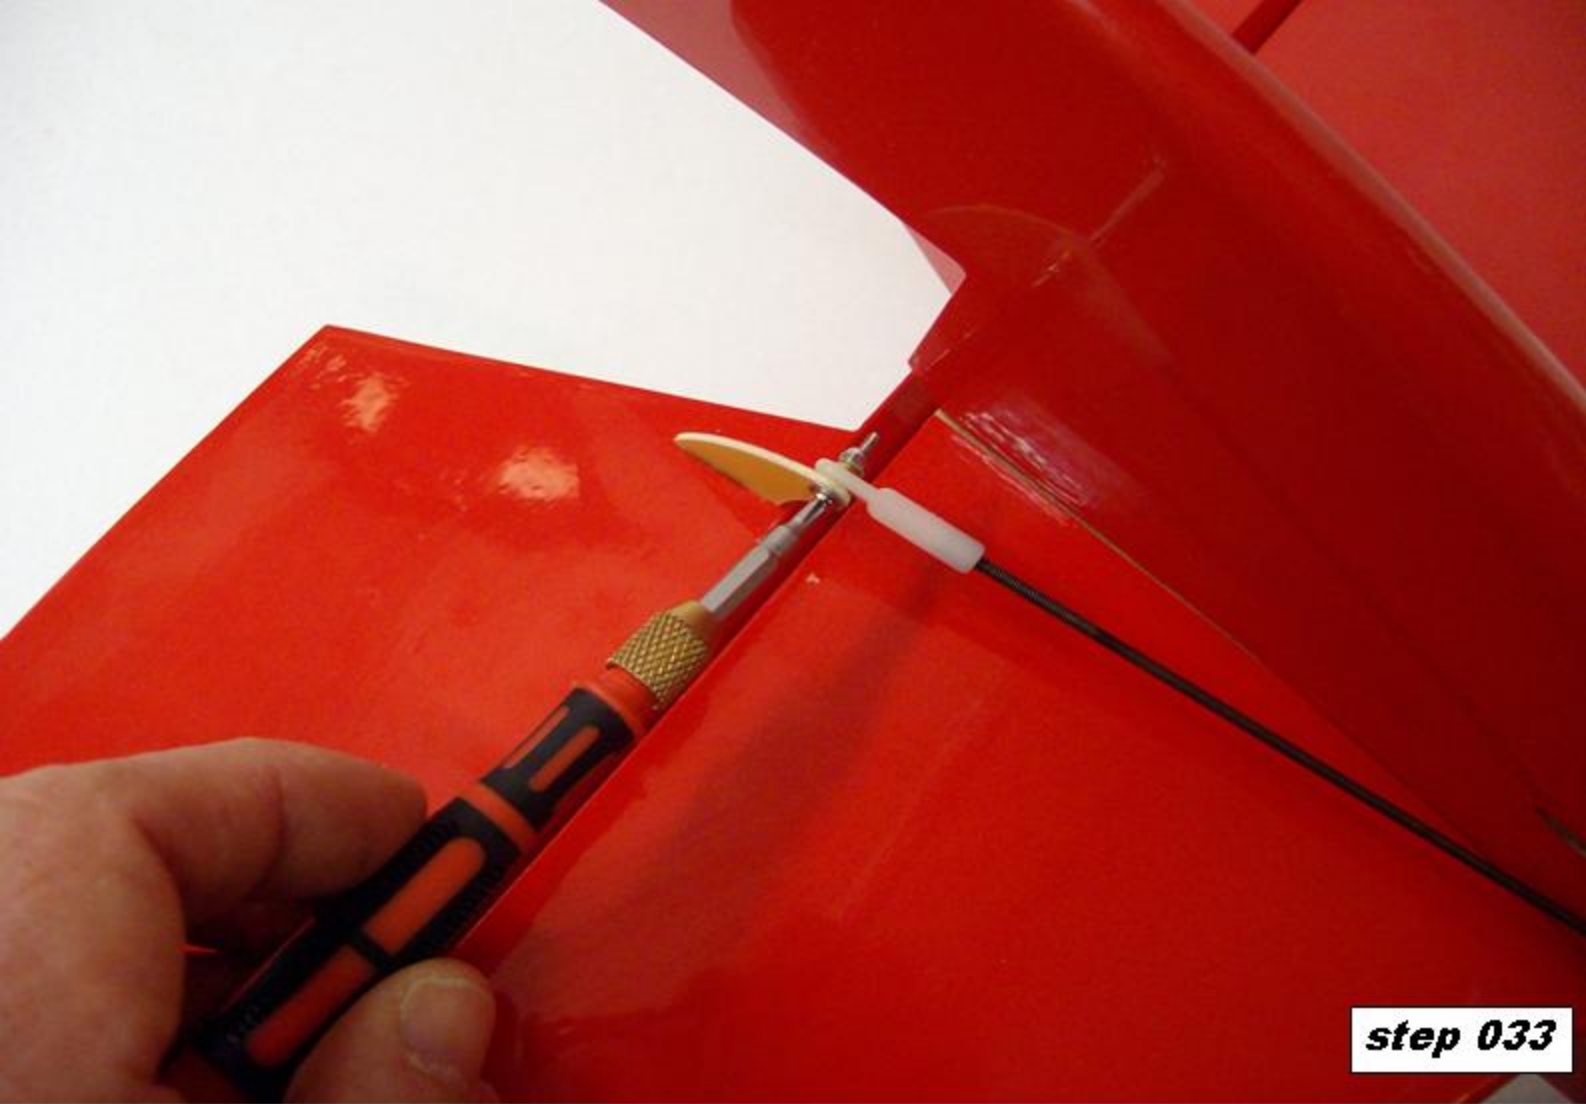


step 033

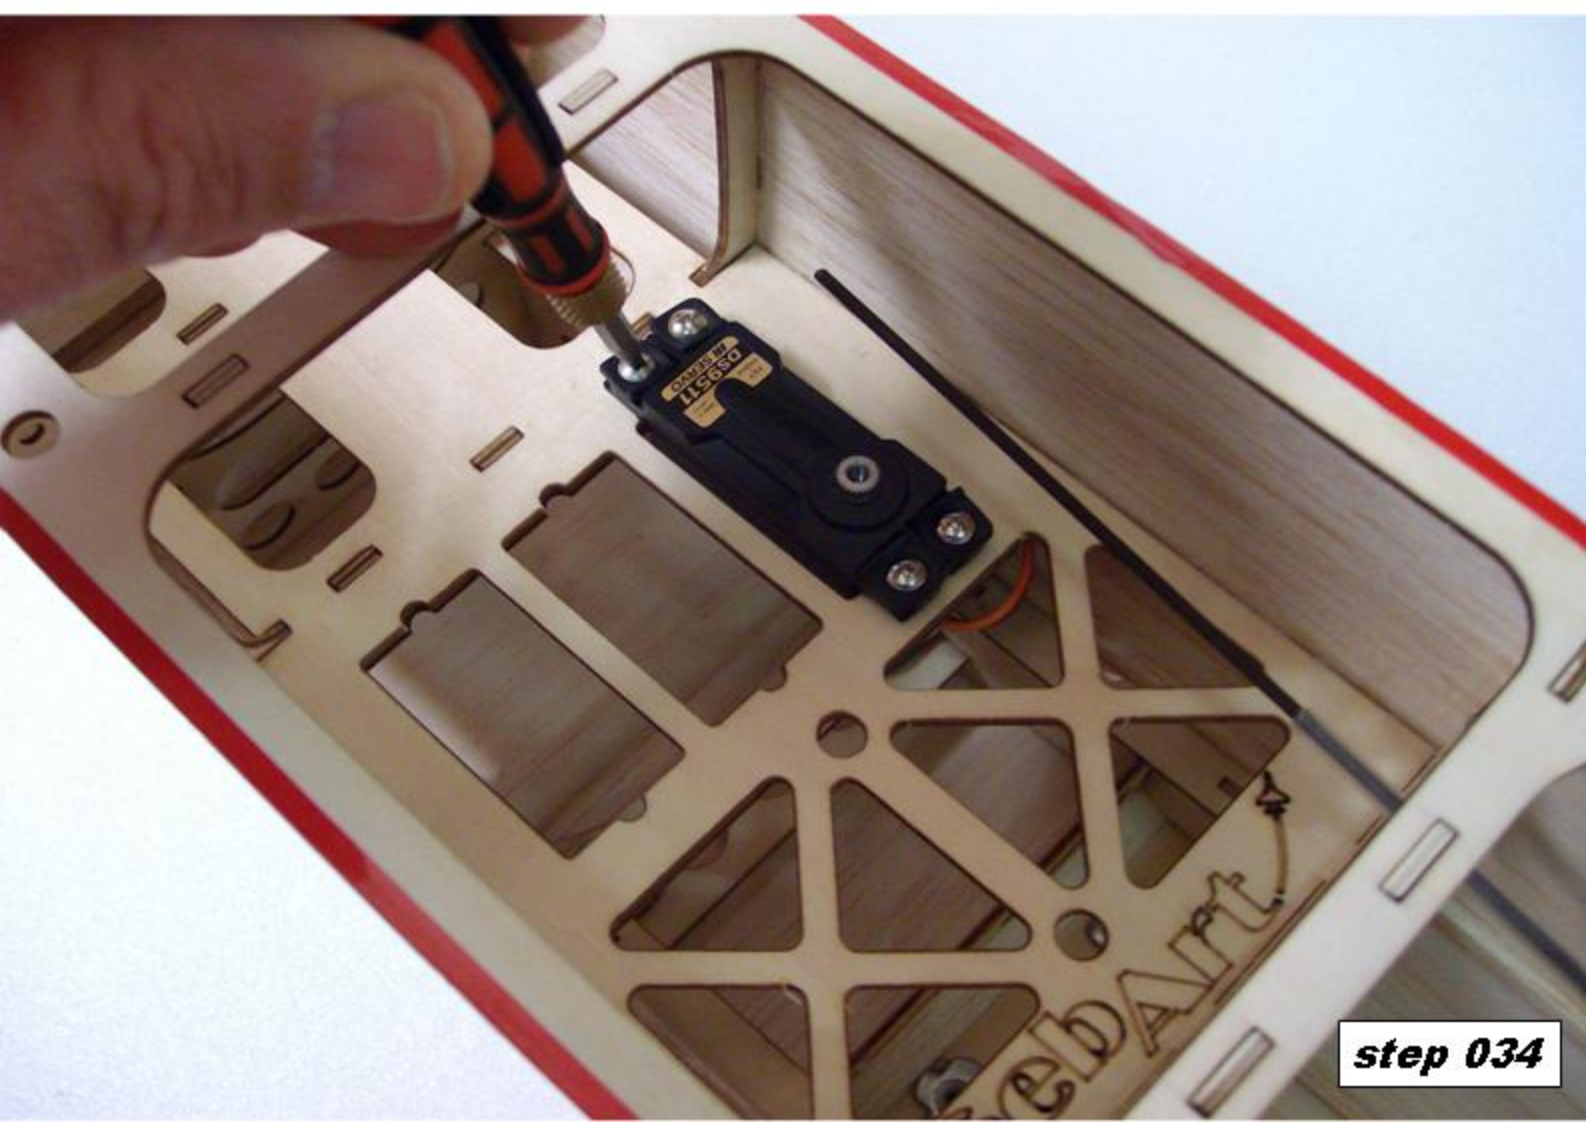


step 034

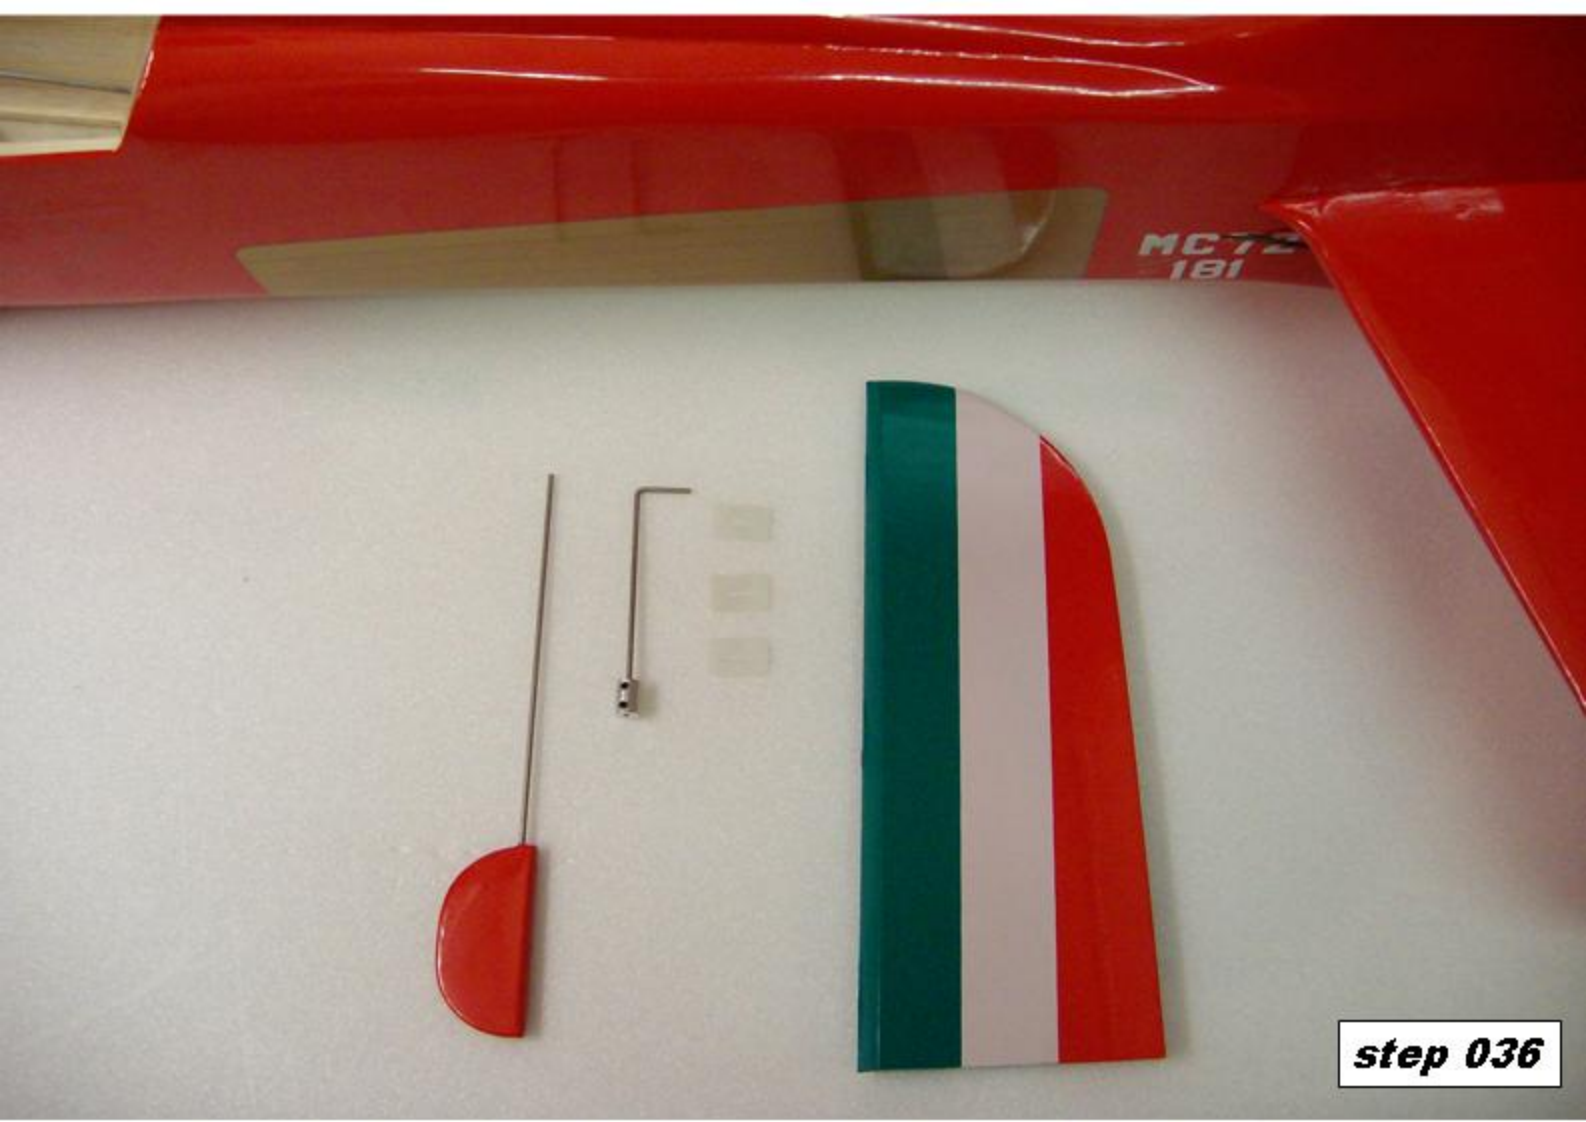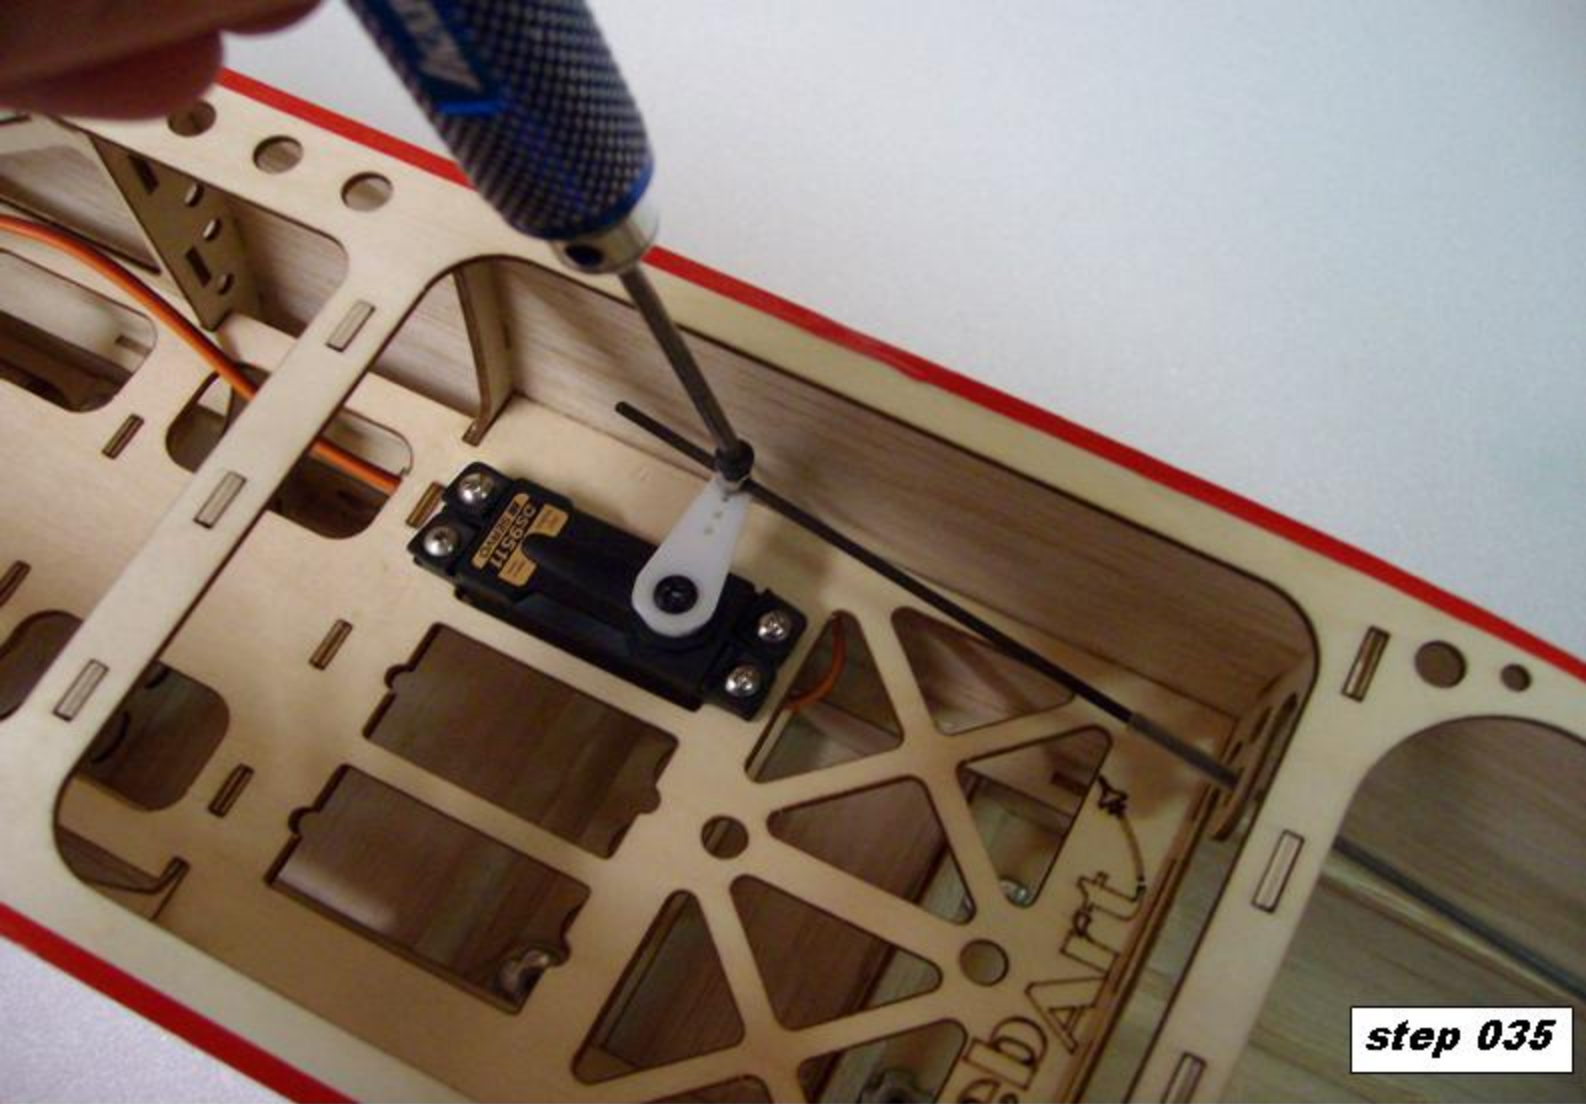


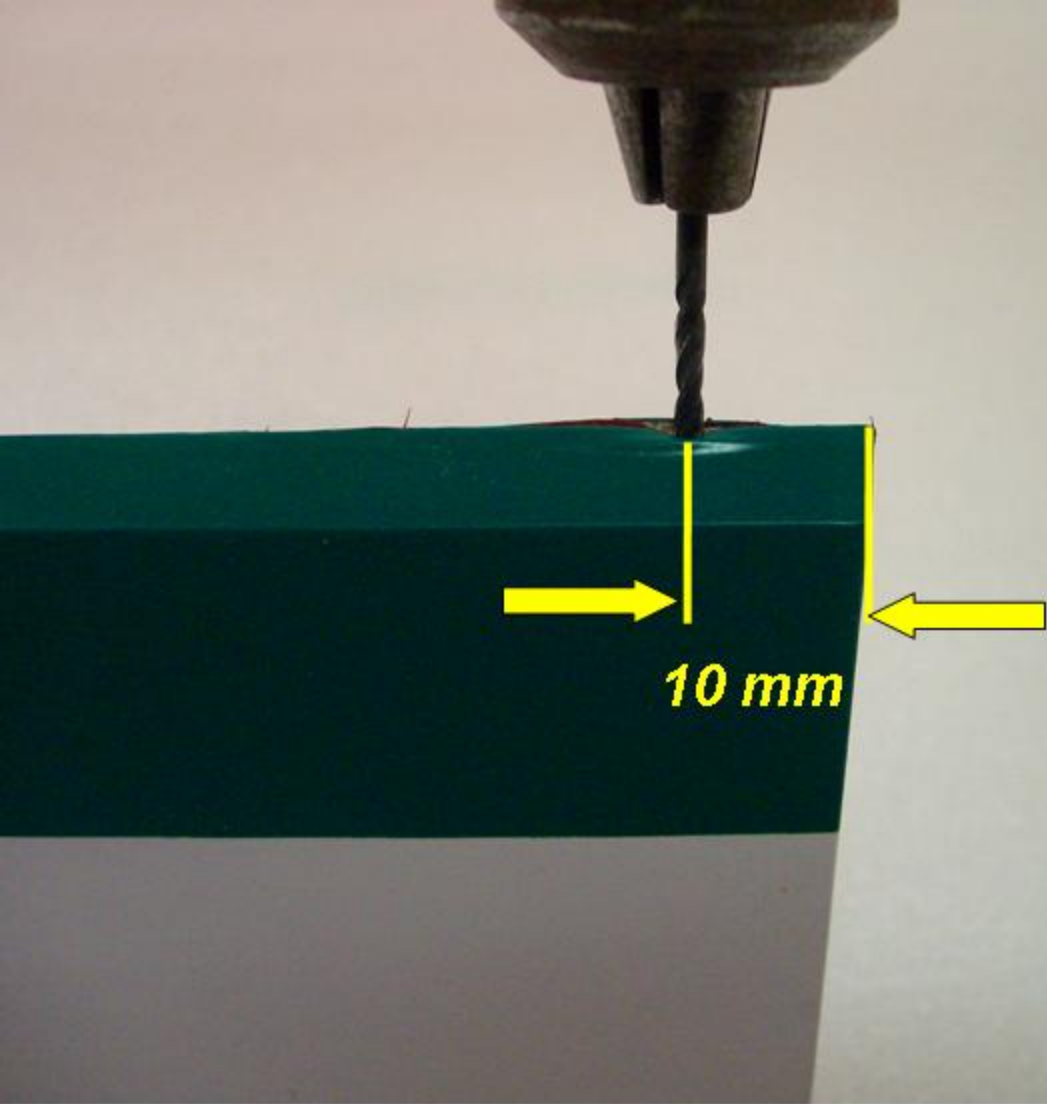


step 037

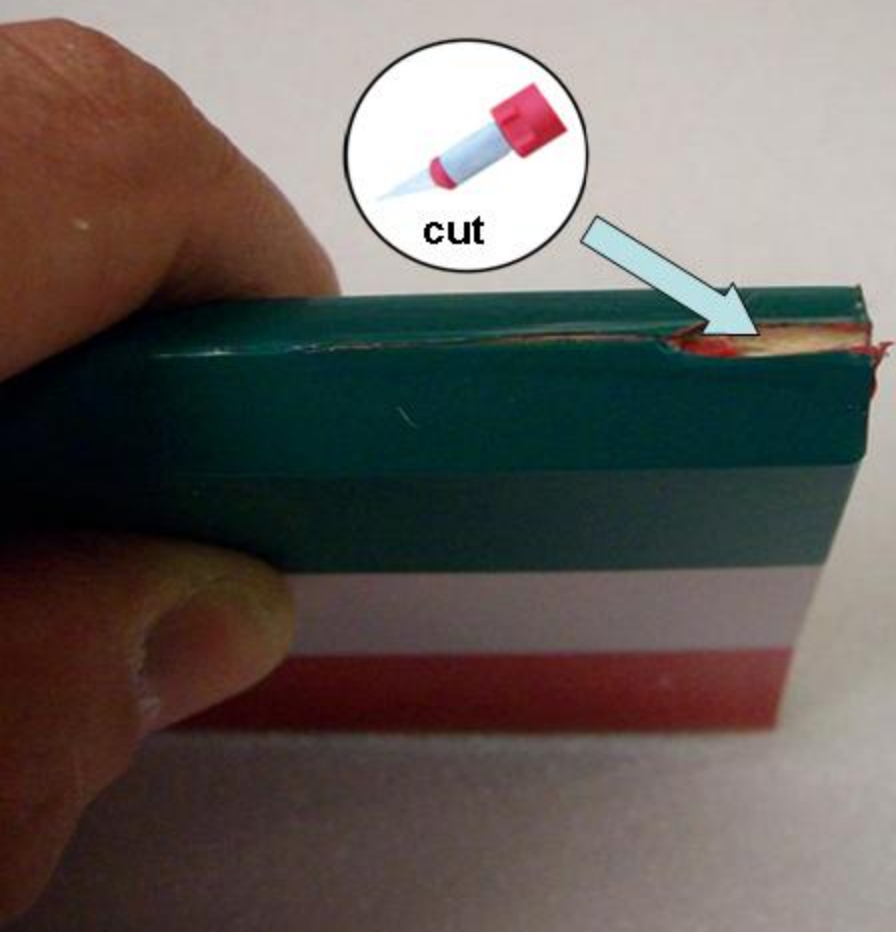


step 038


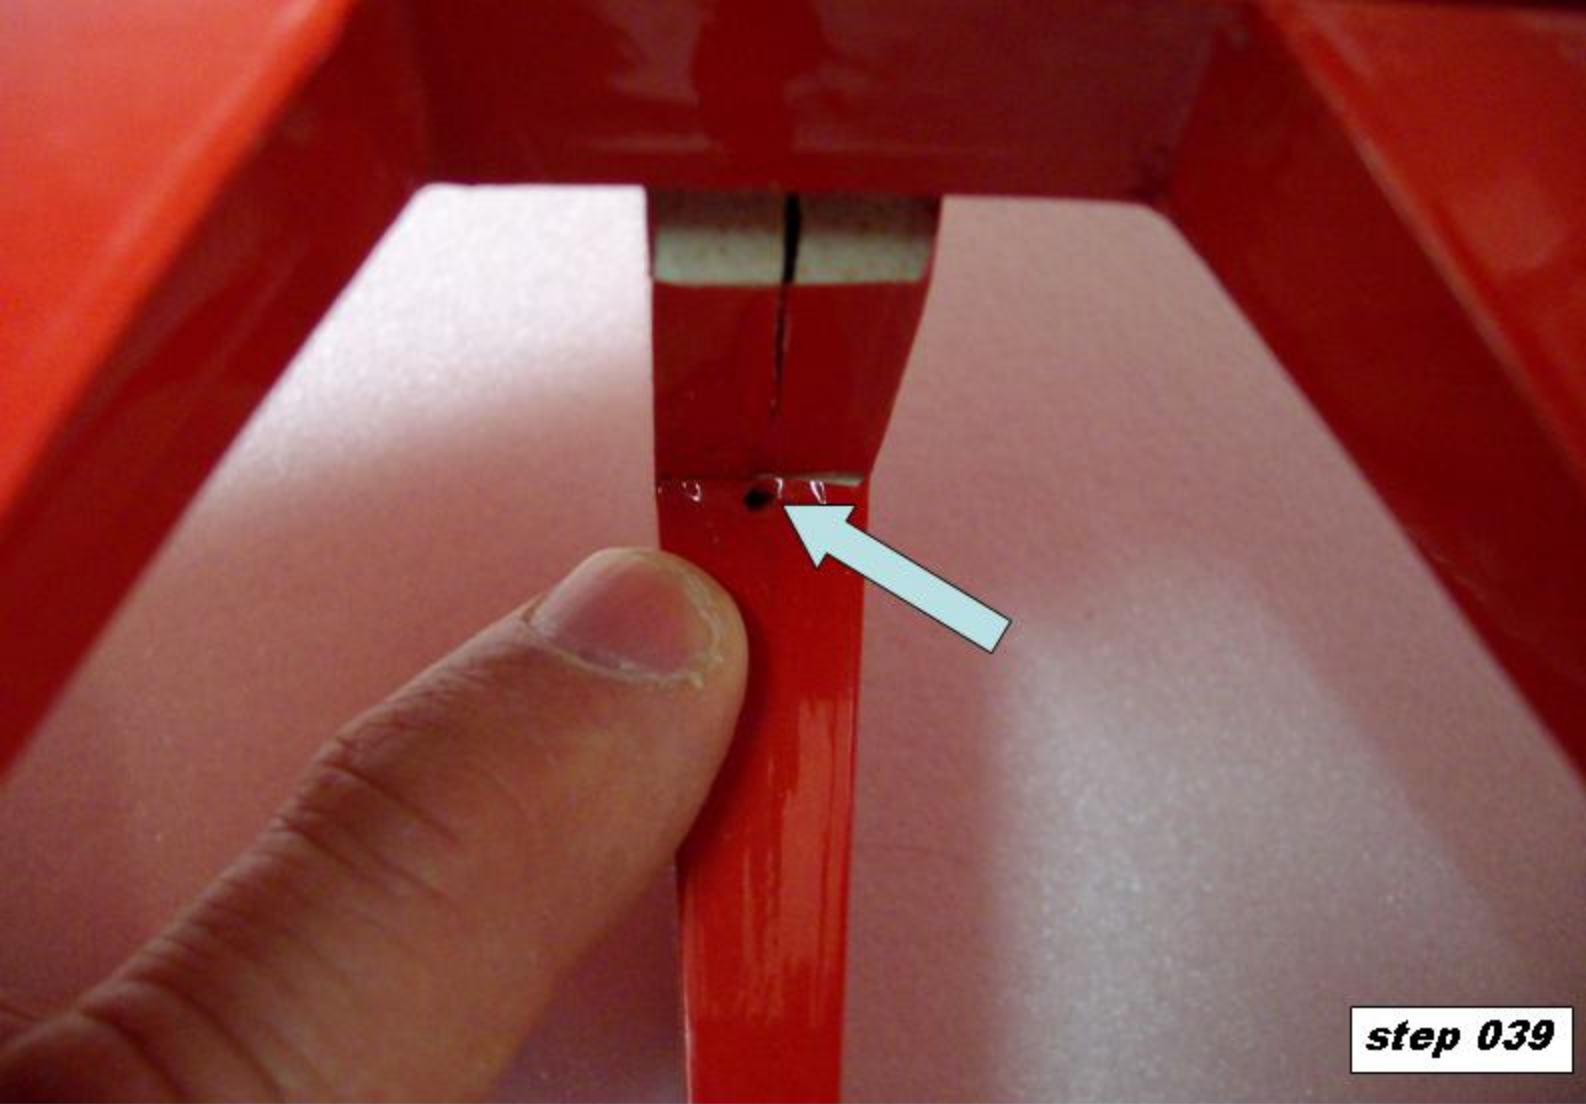



step 039

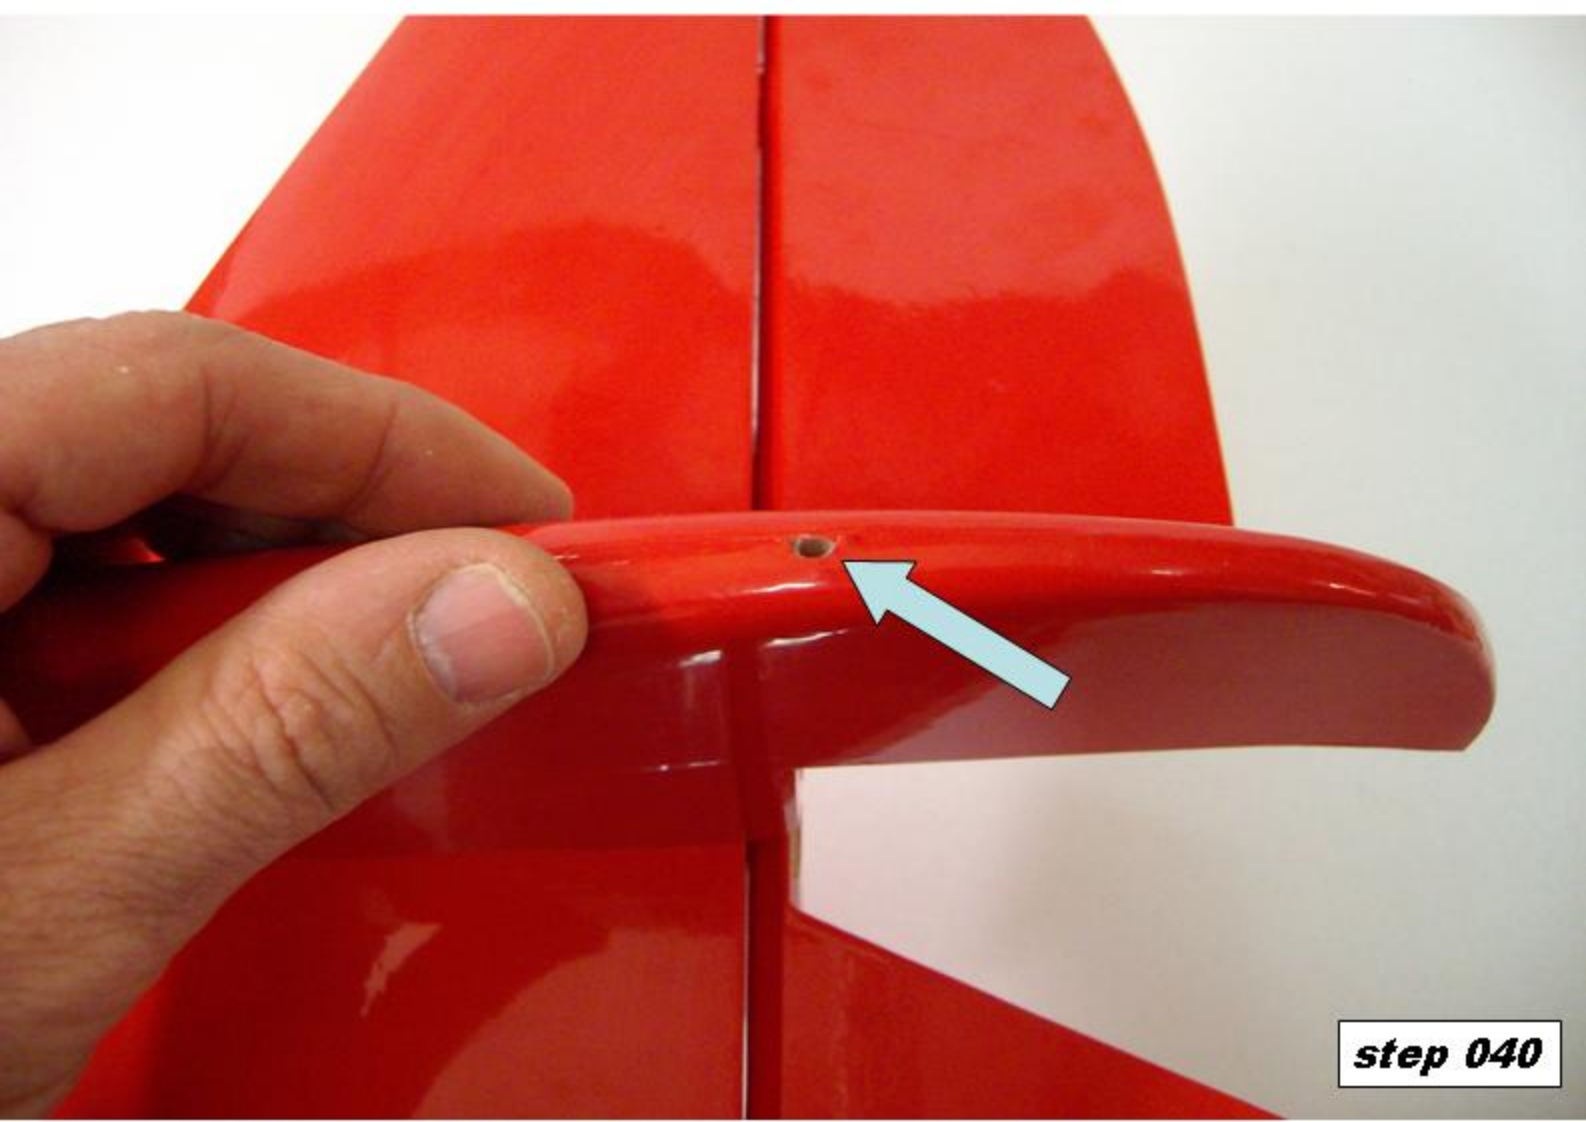


step 040

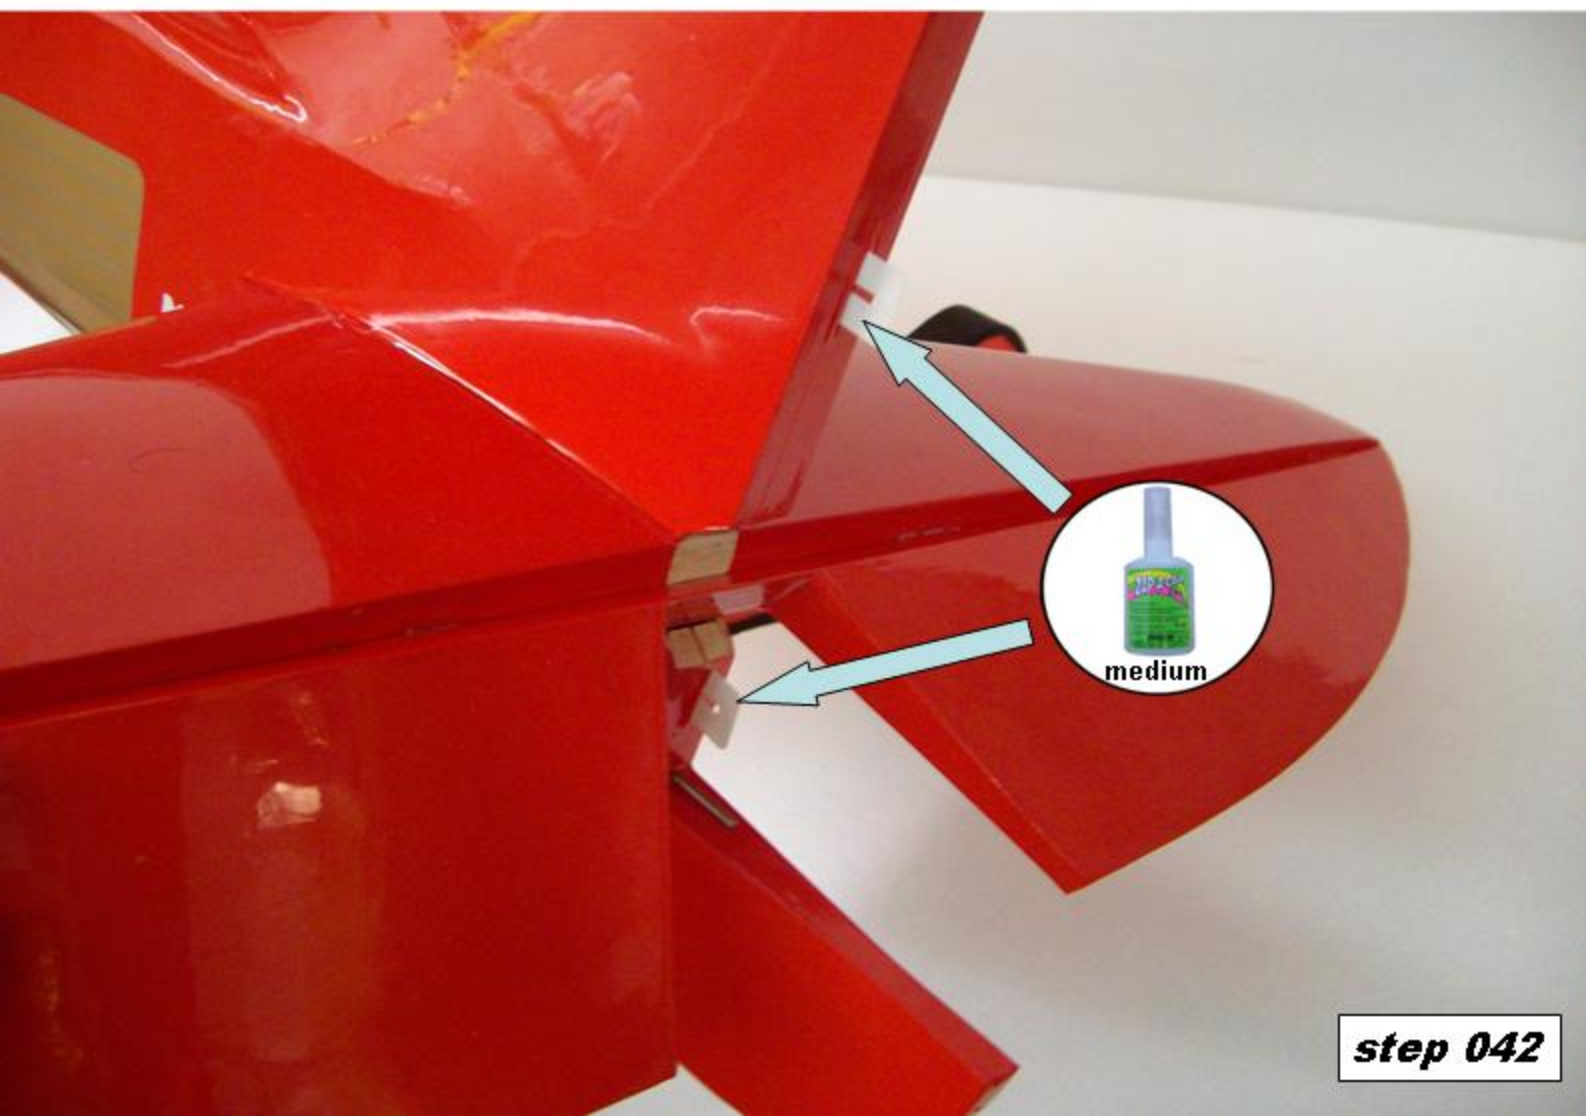

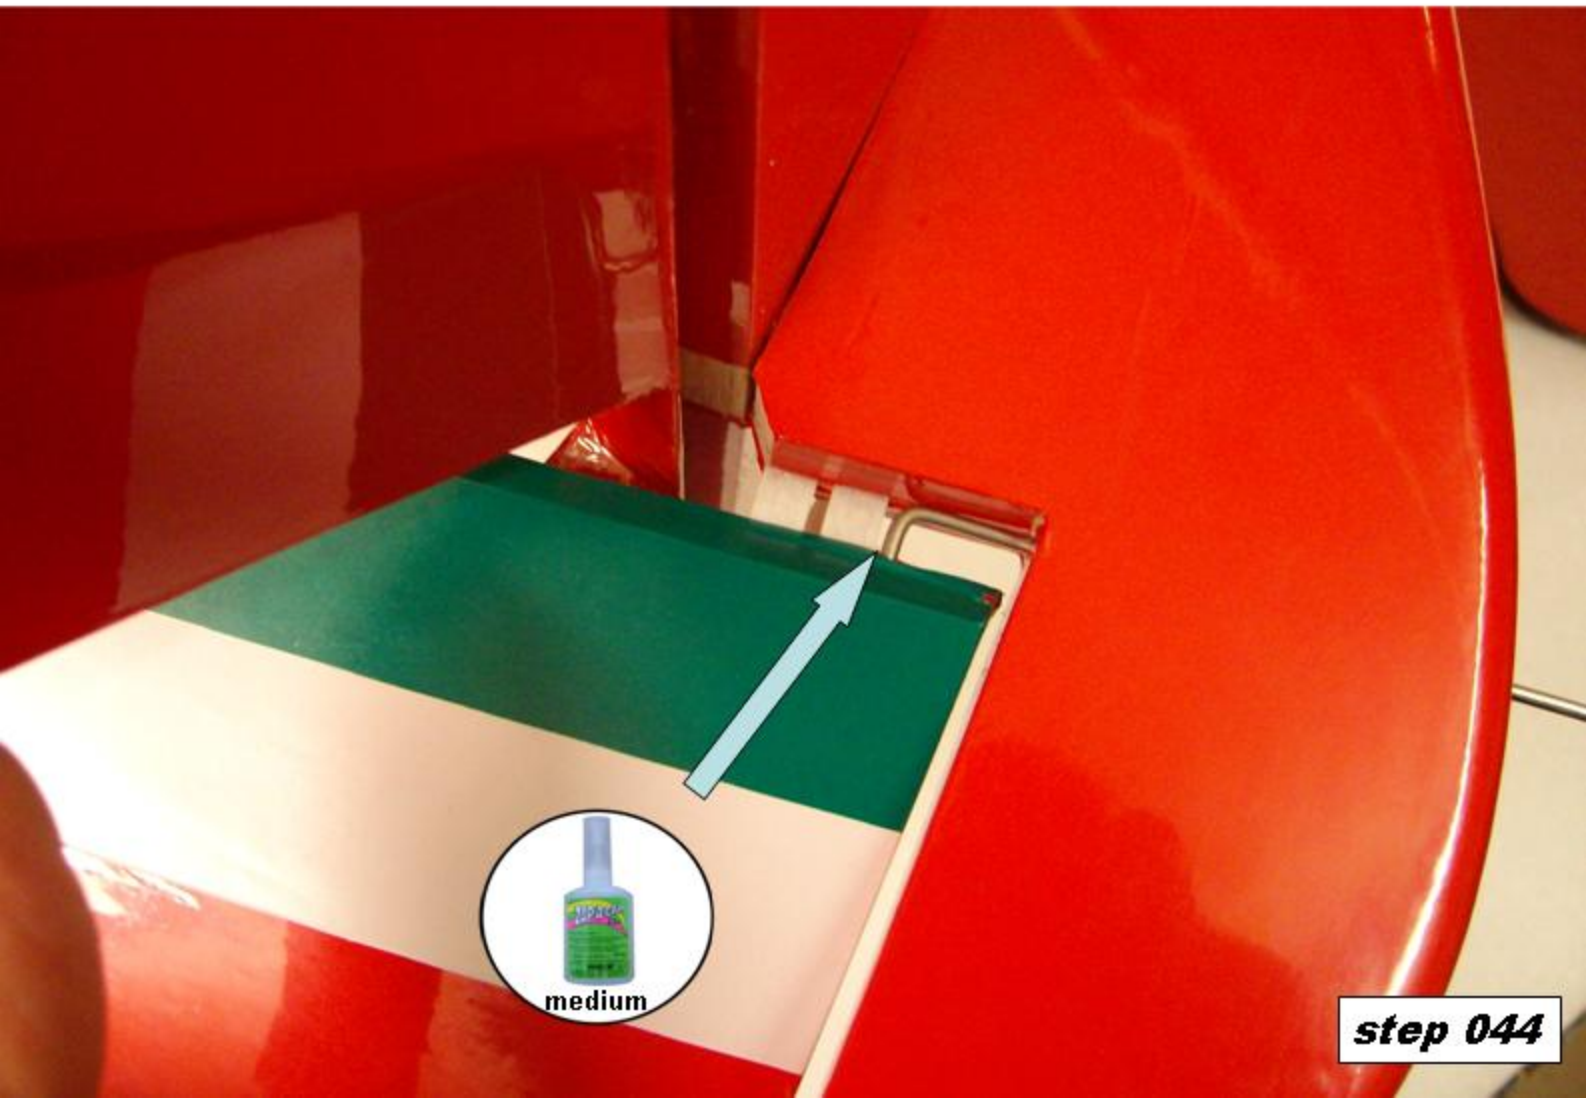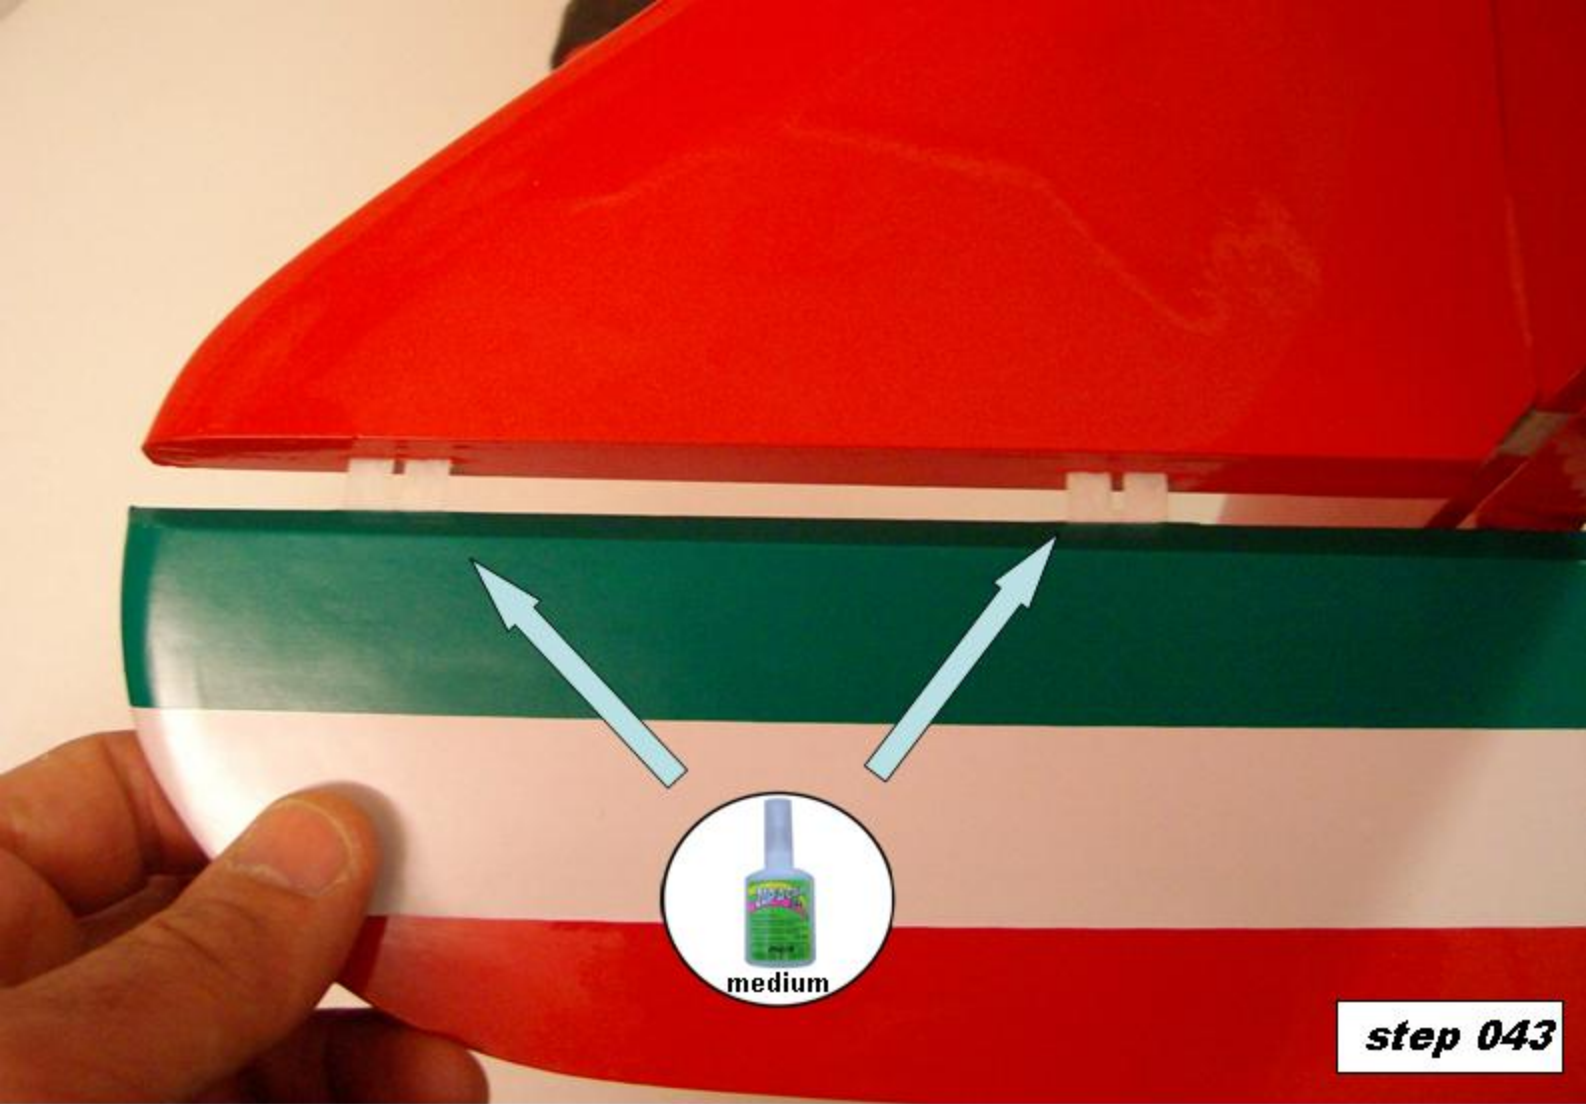



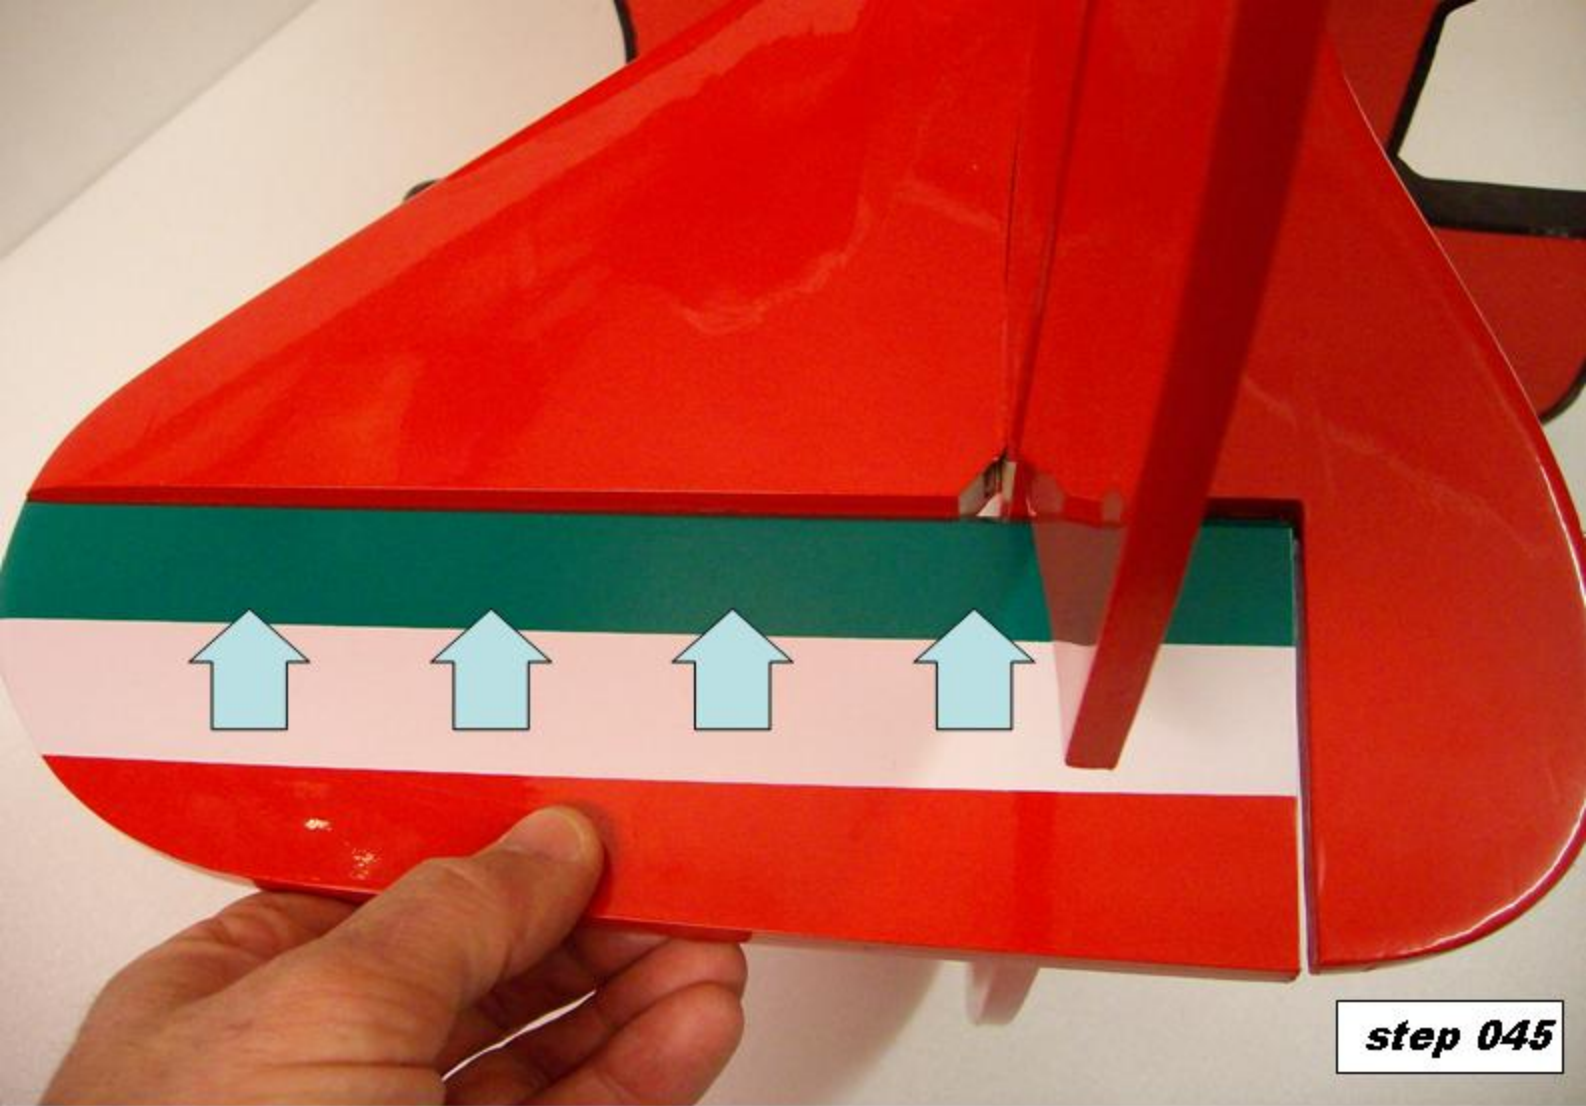



step 045

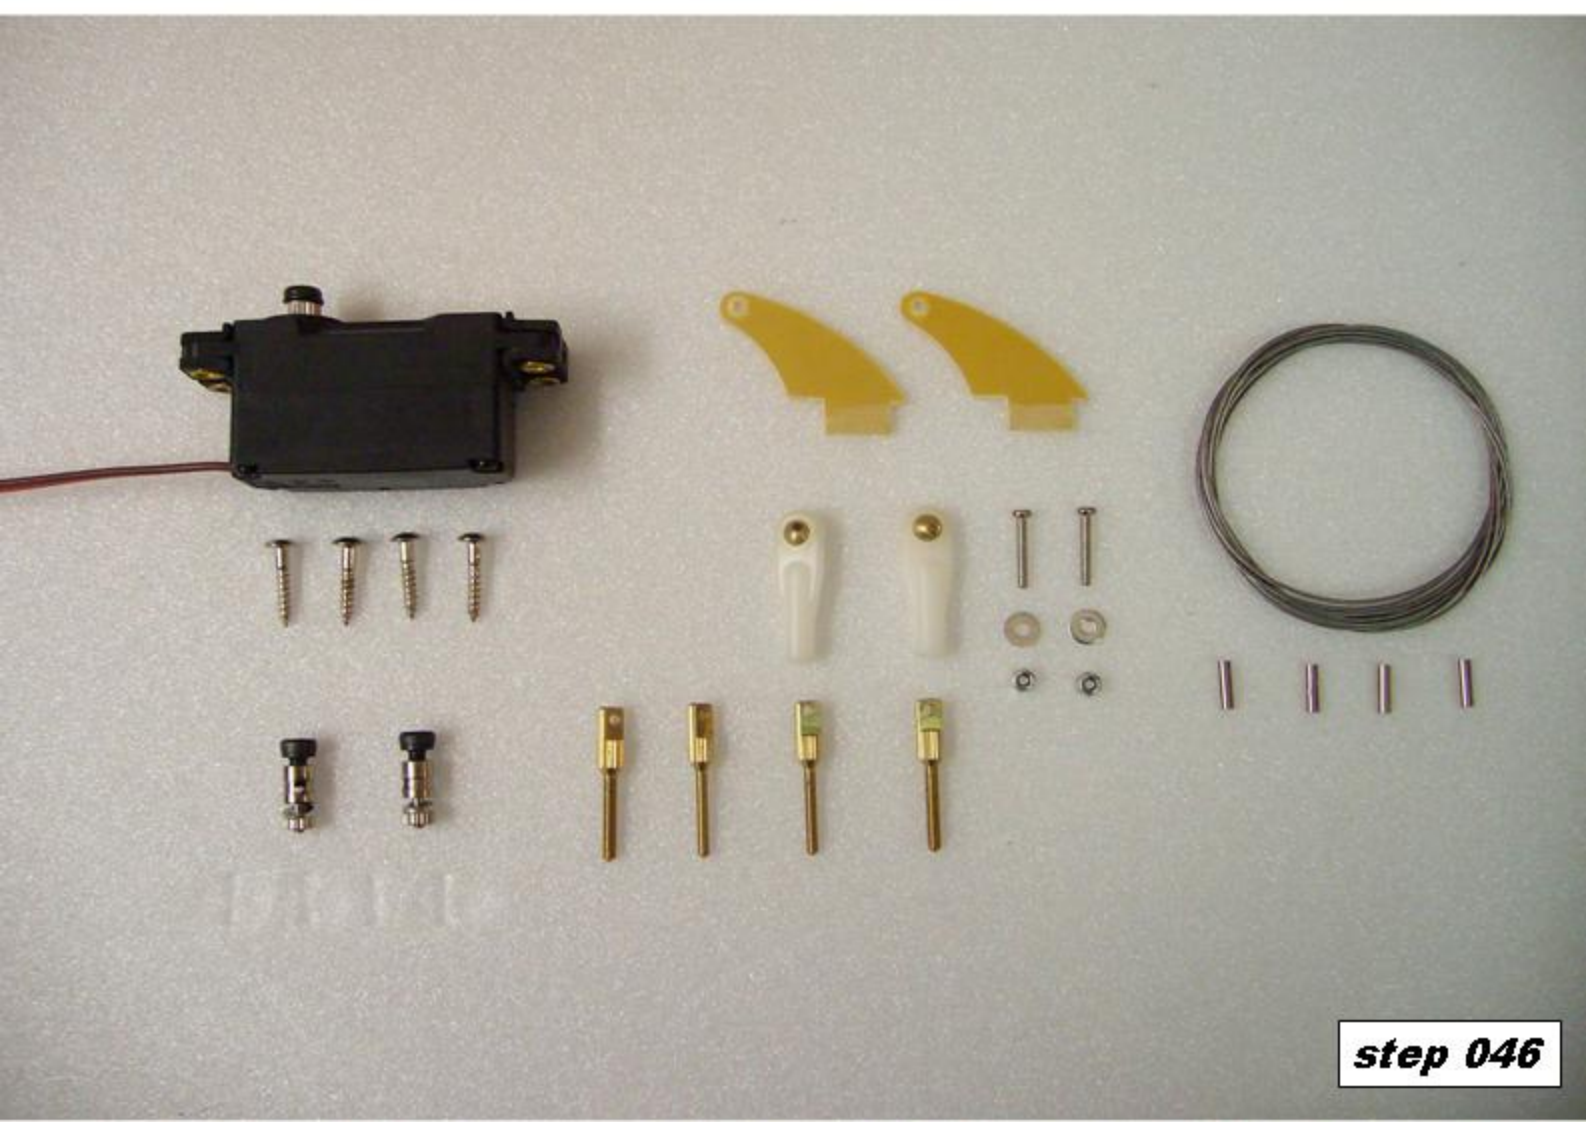

step 046

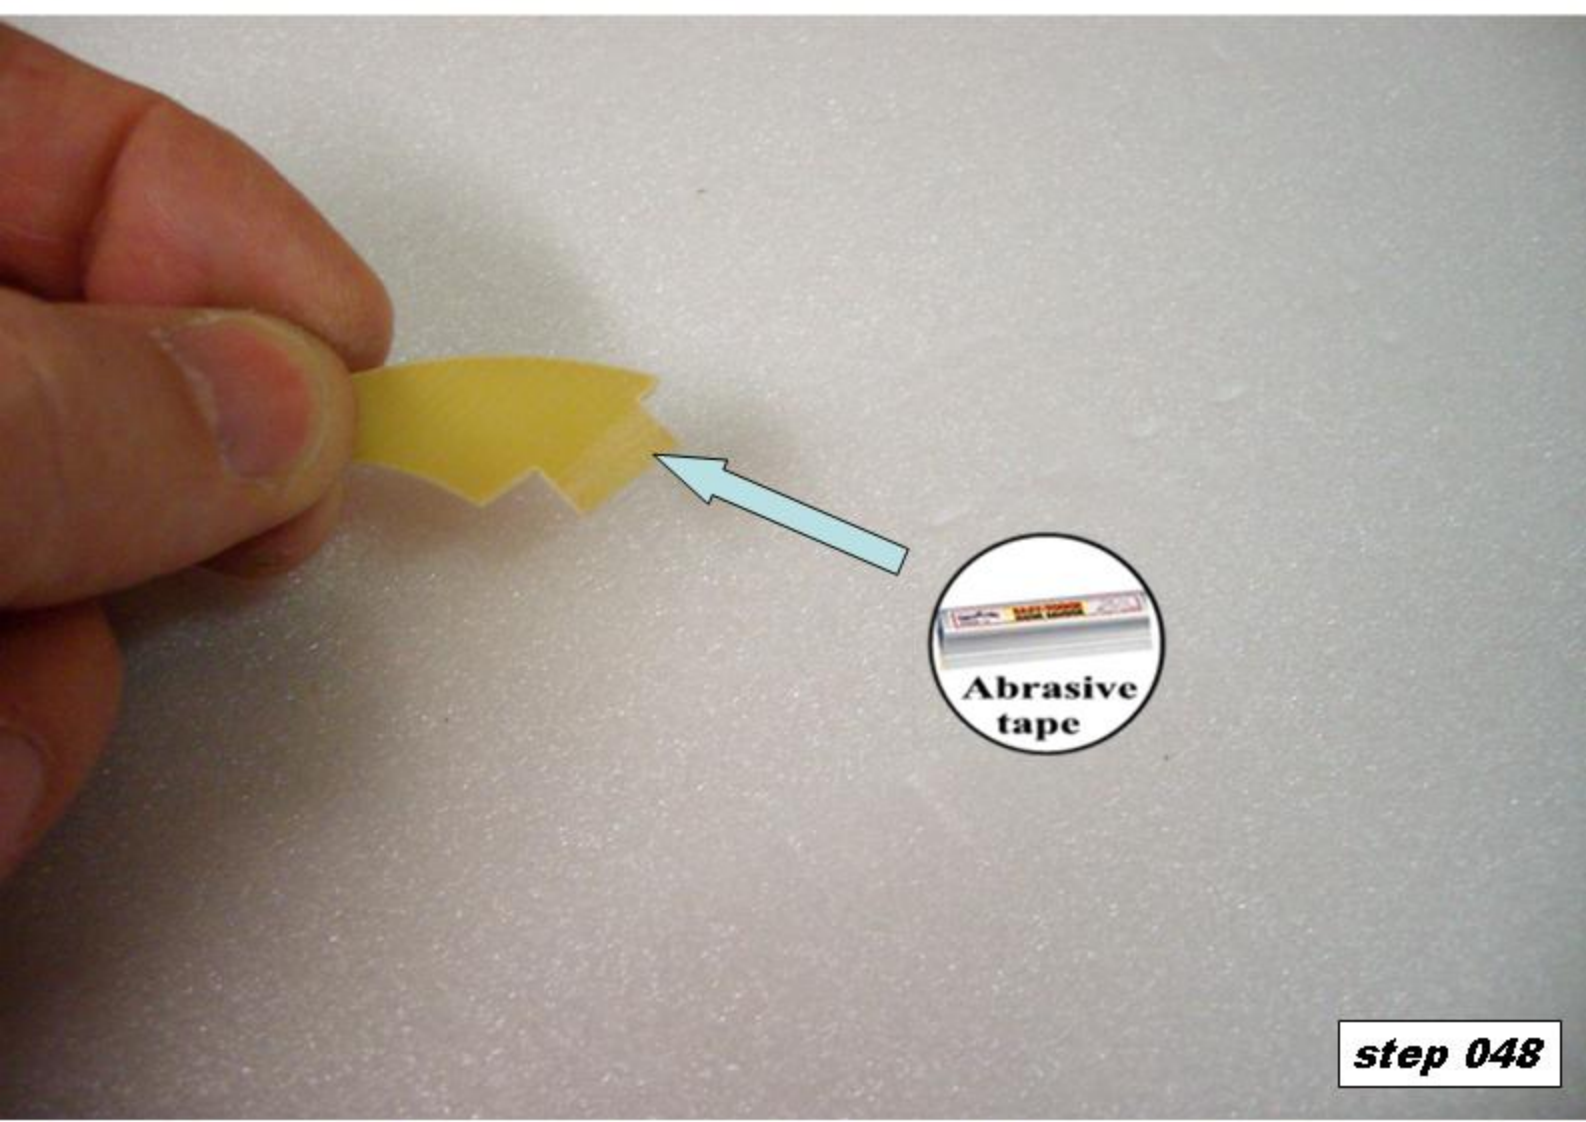


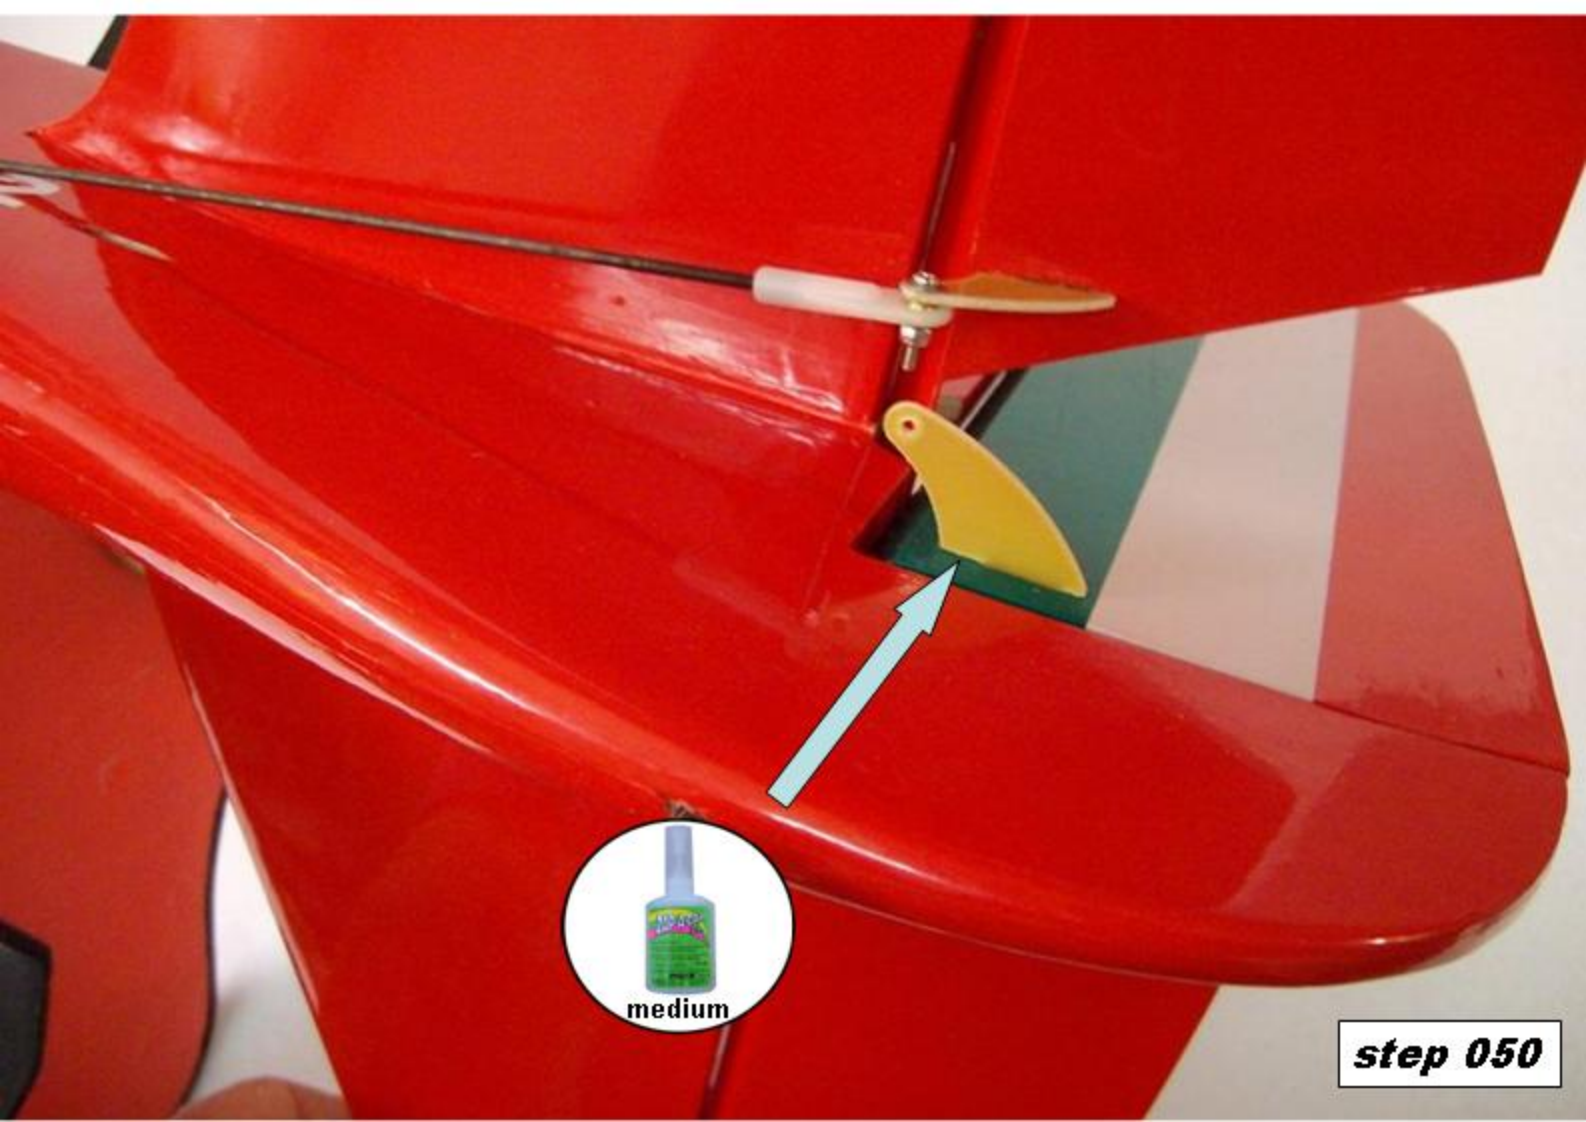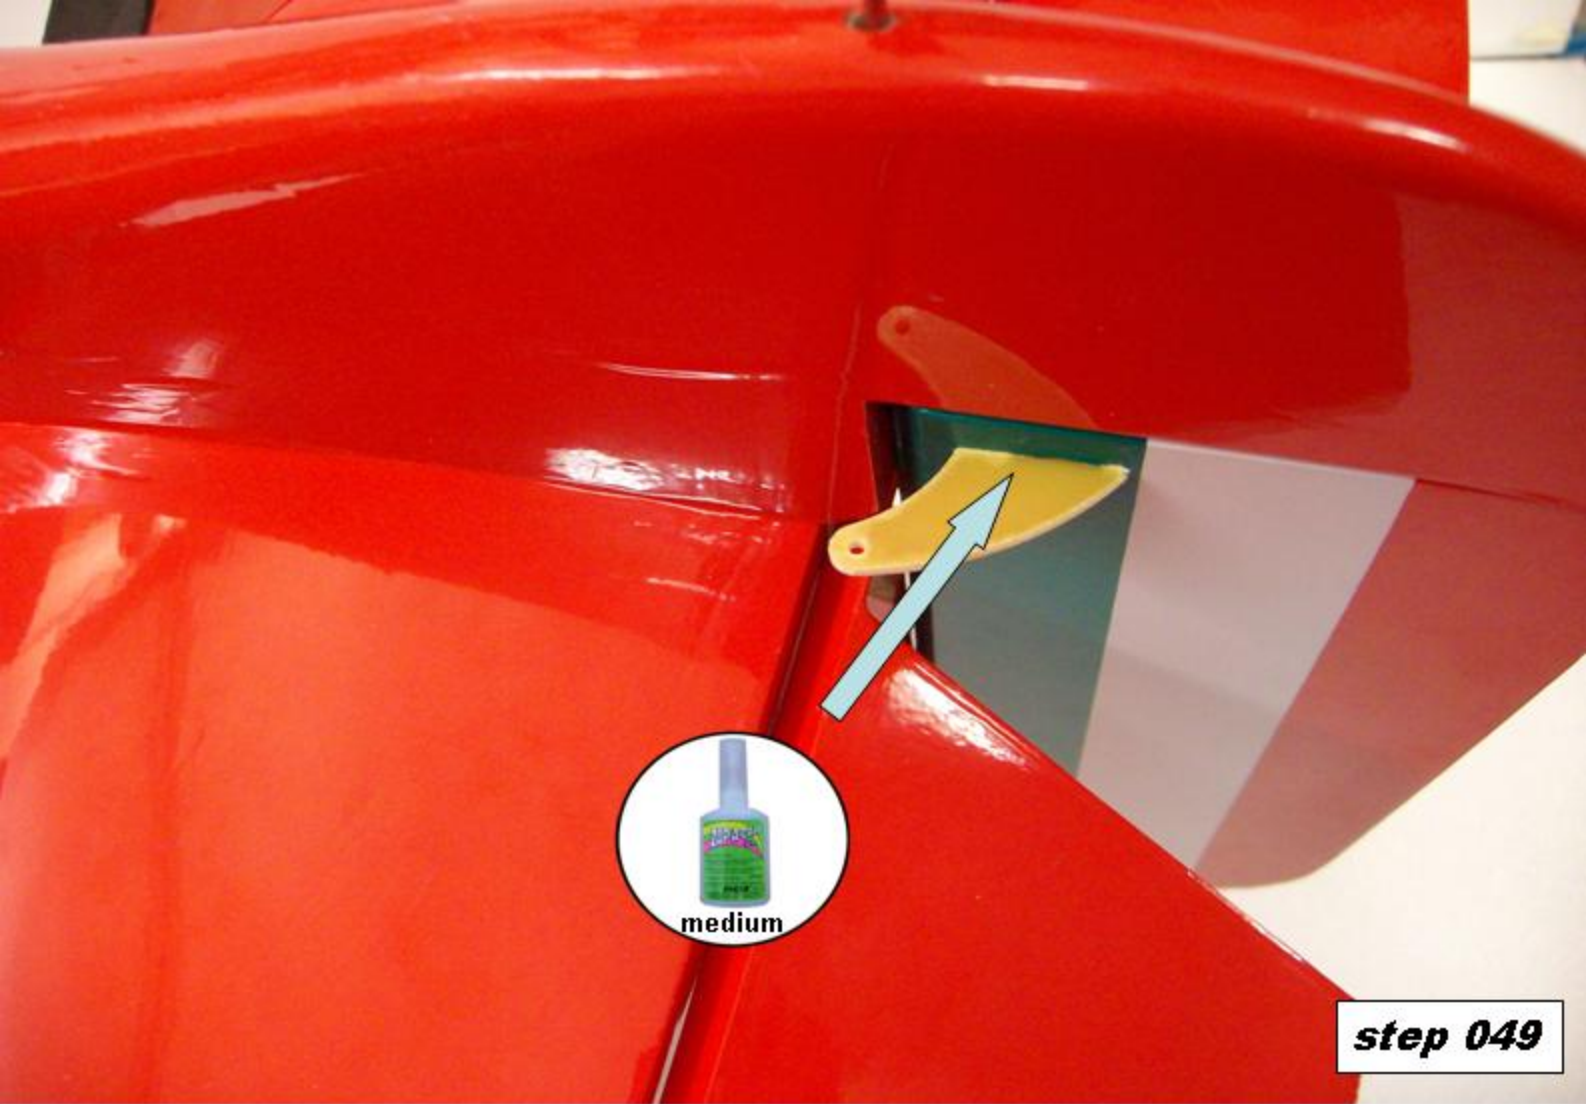

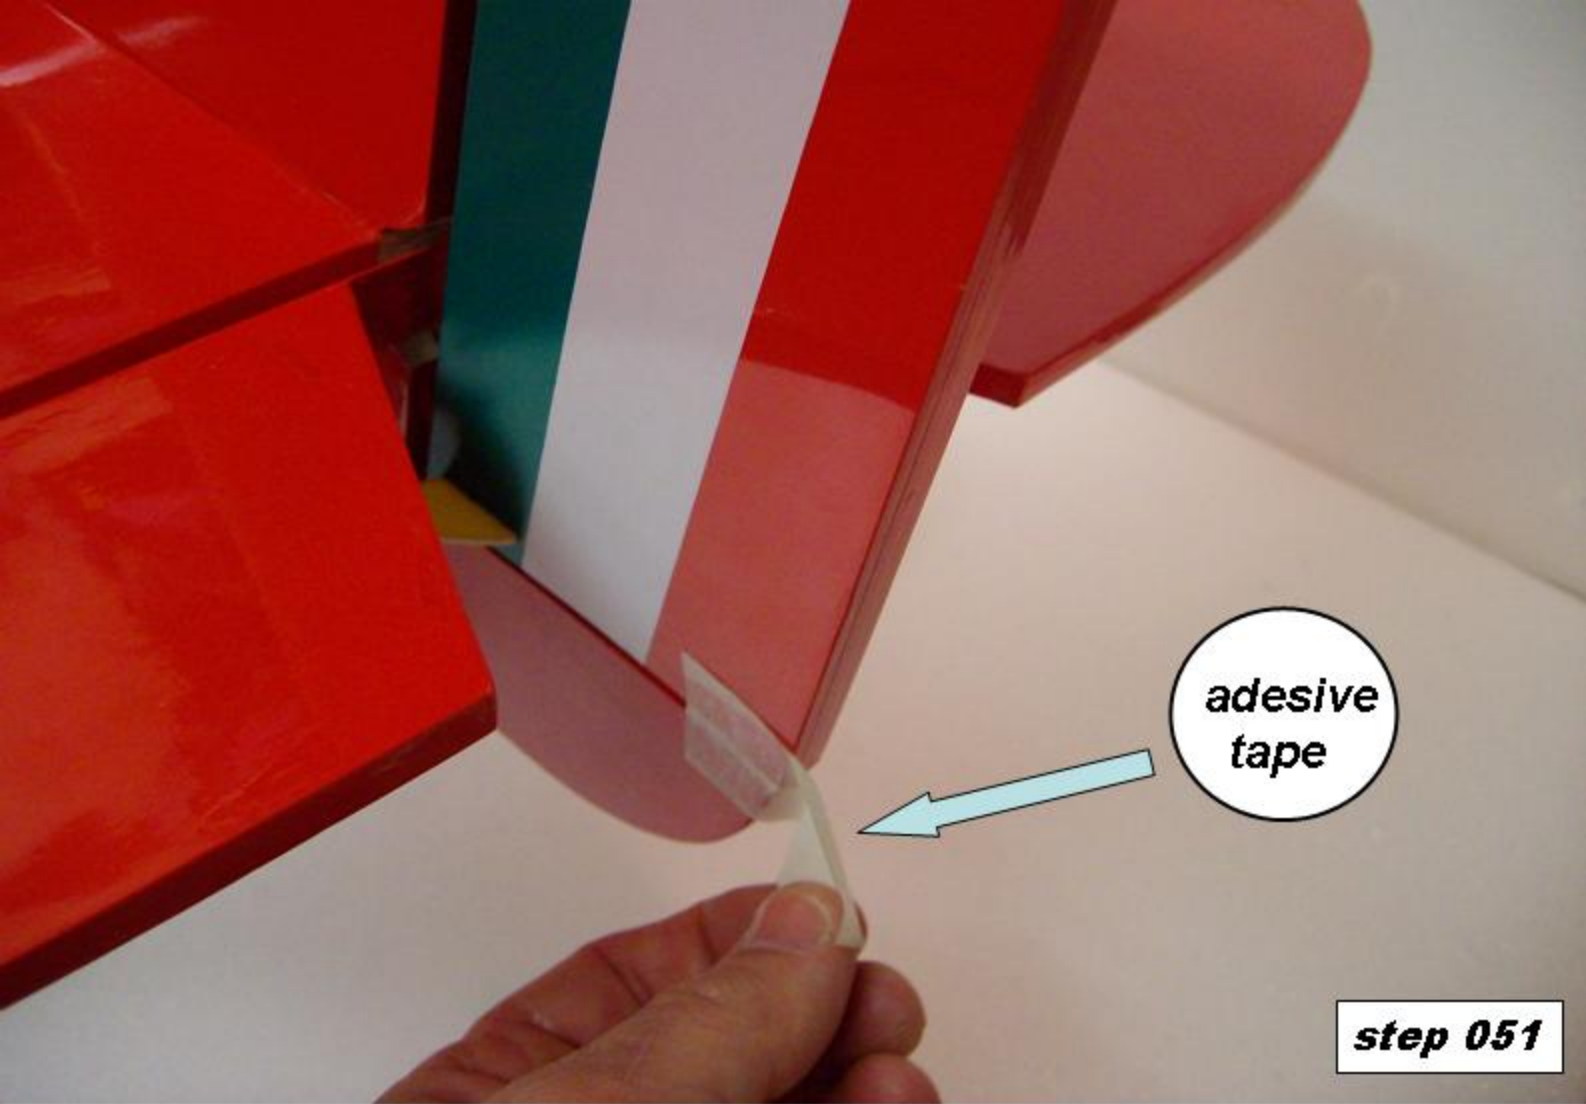


adesive
tape


step 051

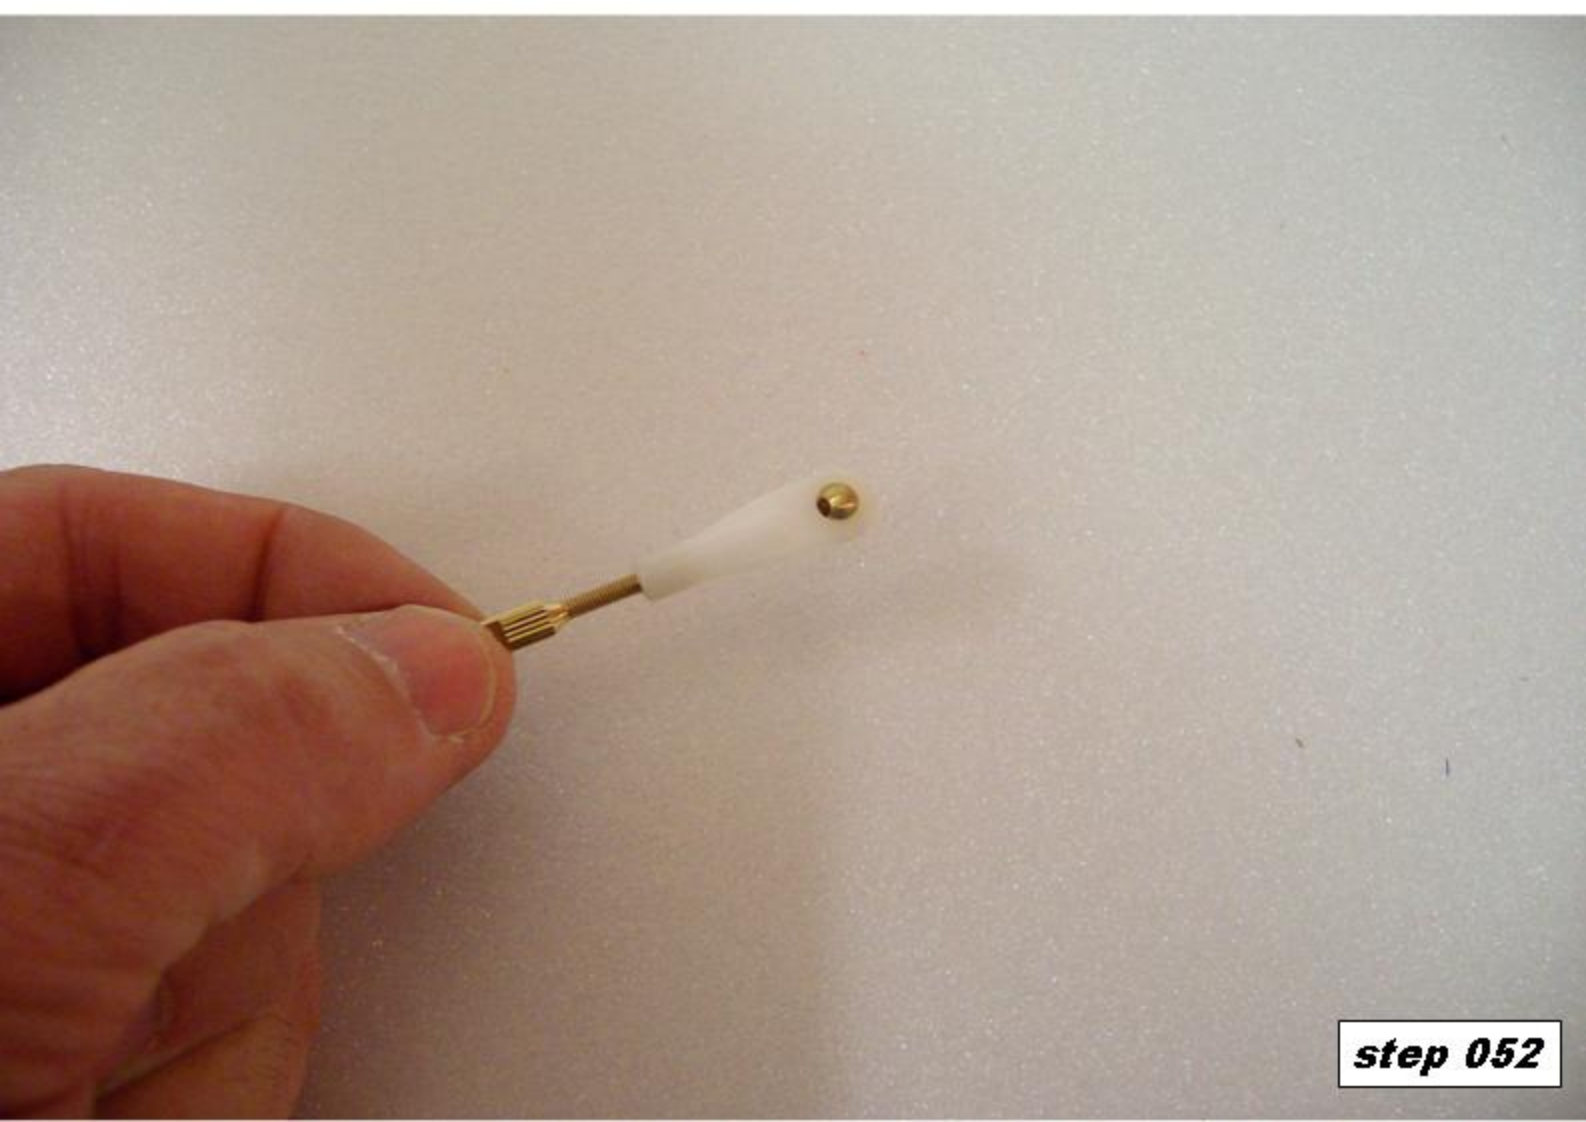


step 052

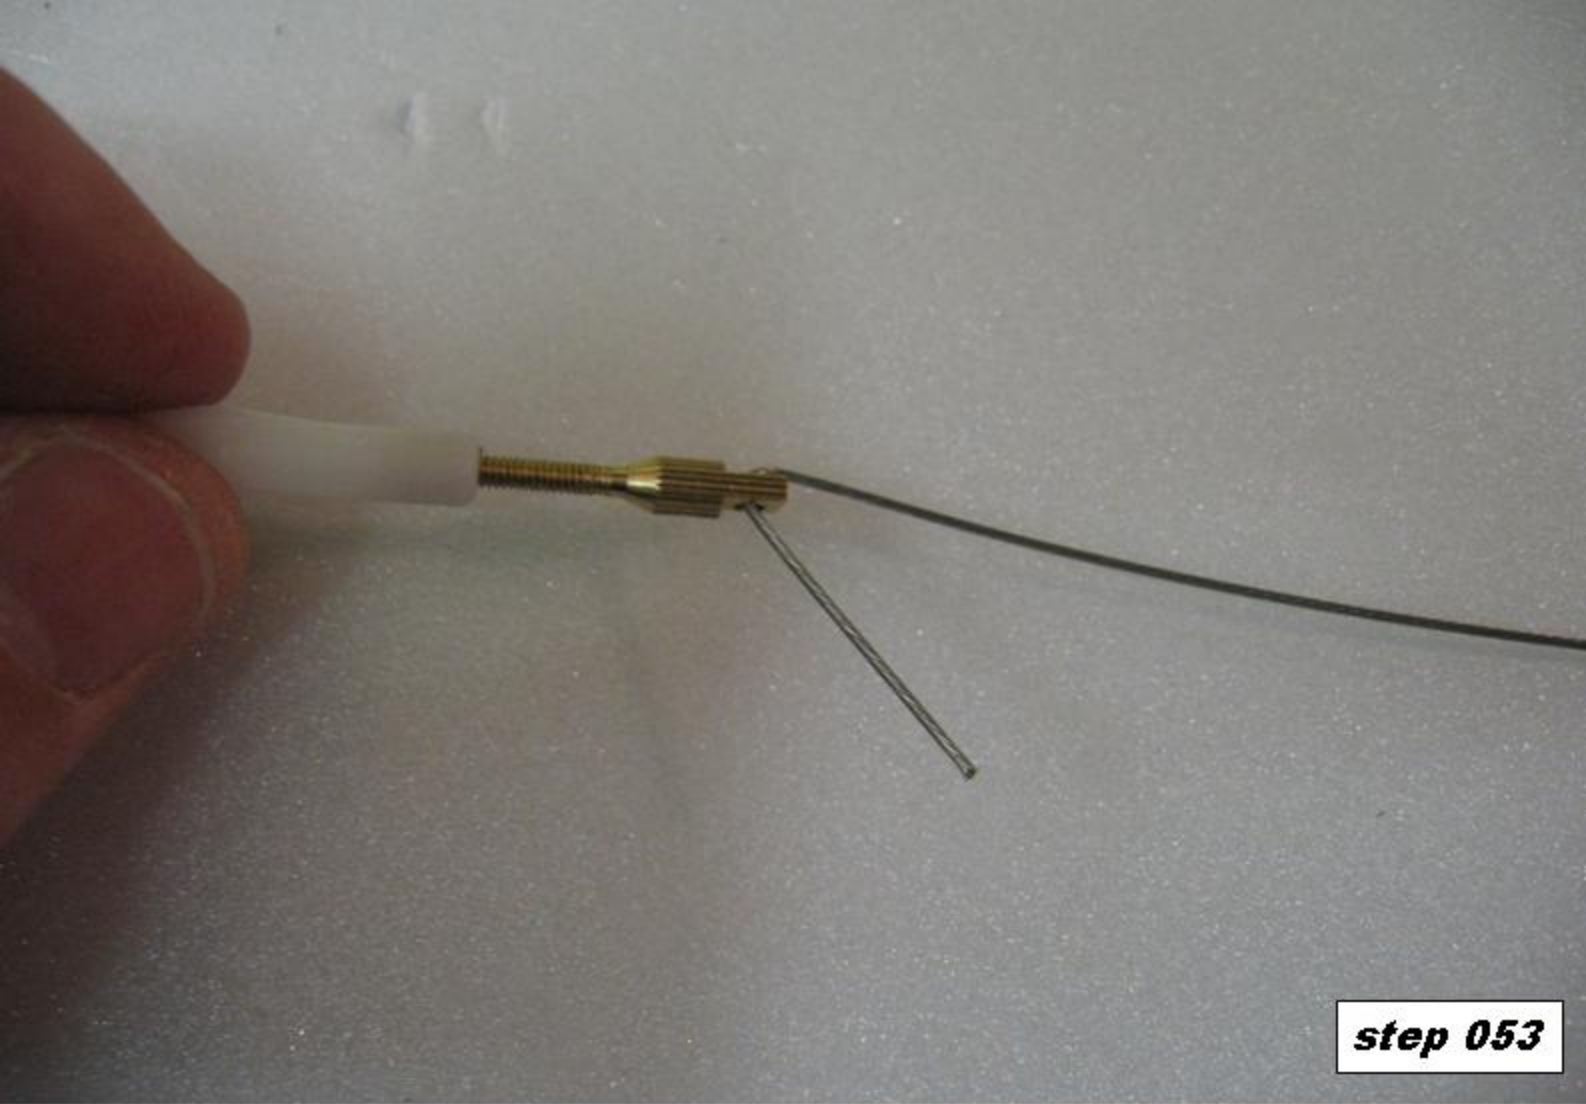

step 053

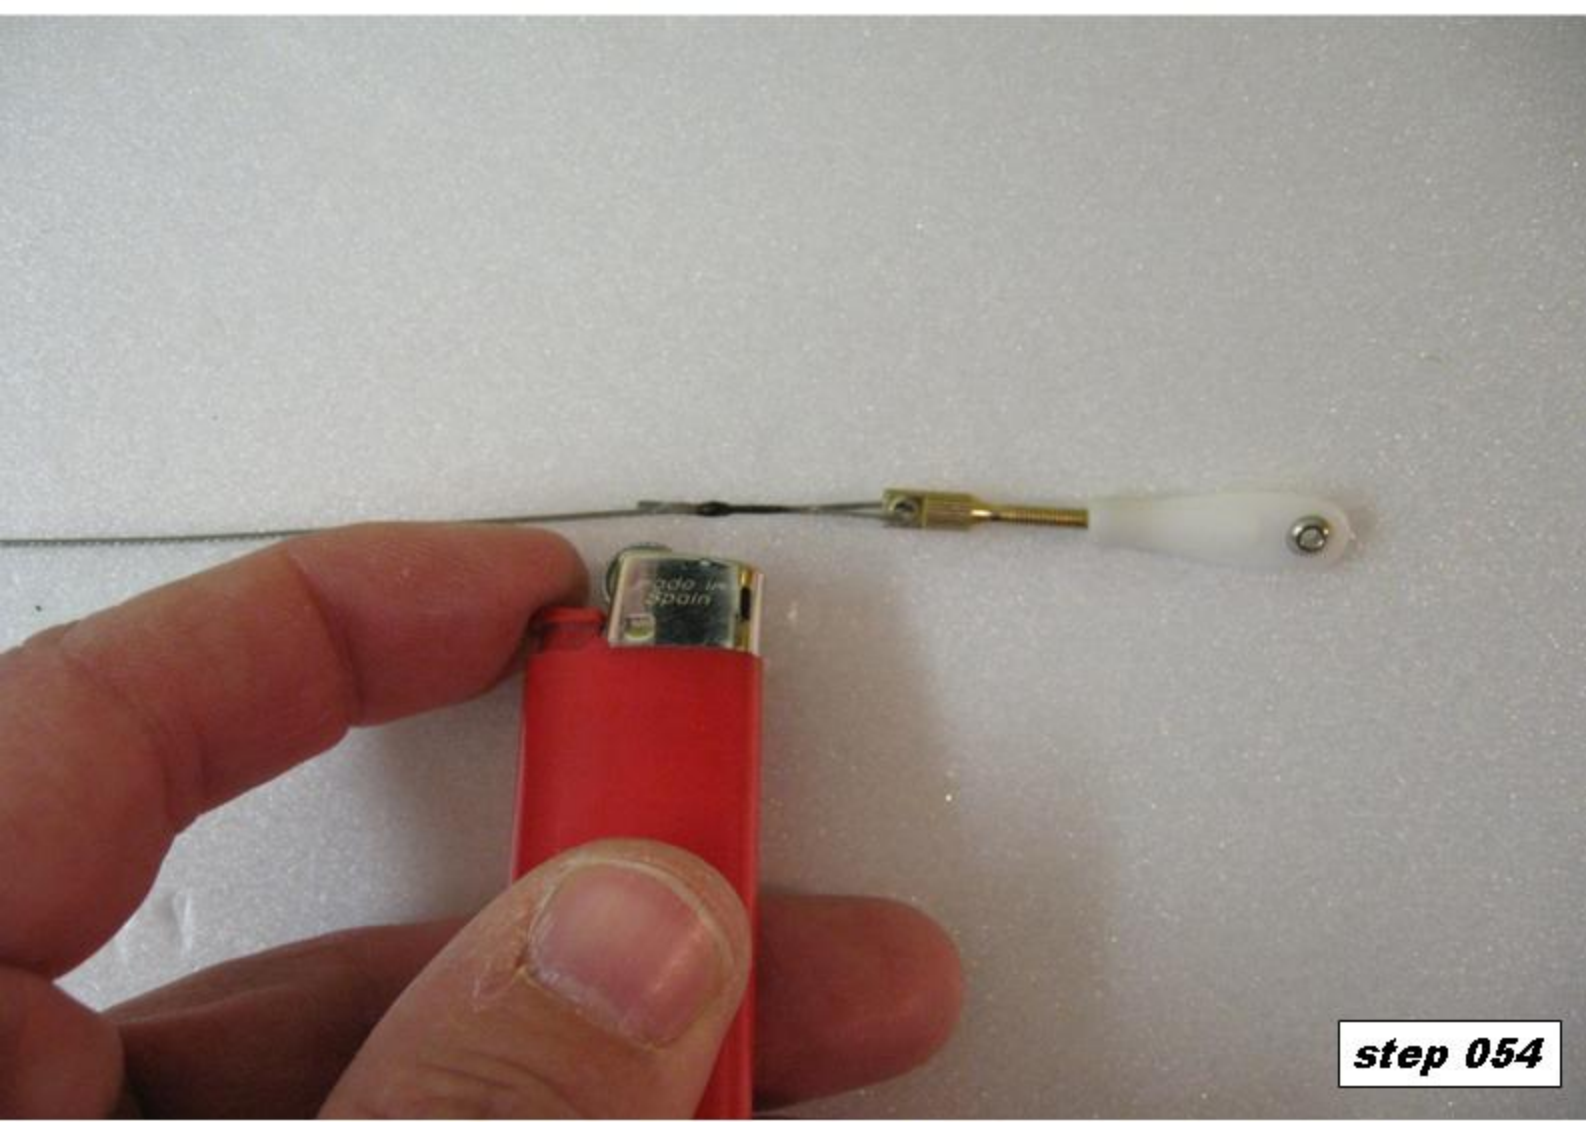

step 054

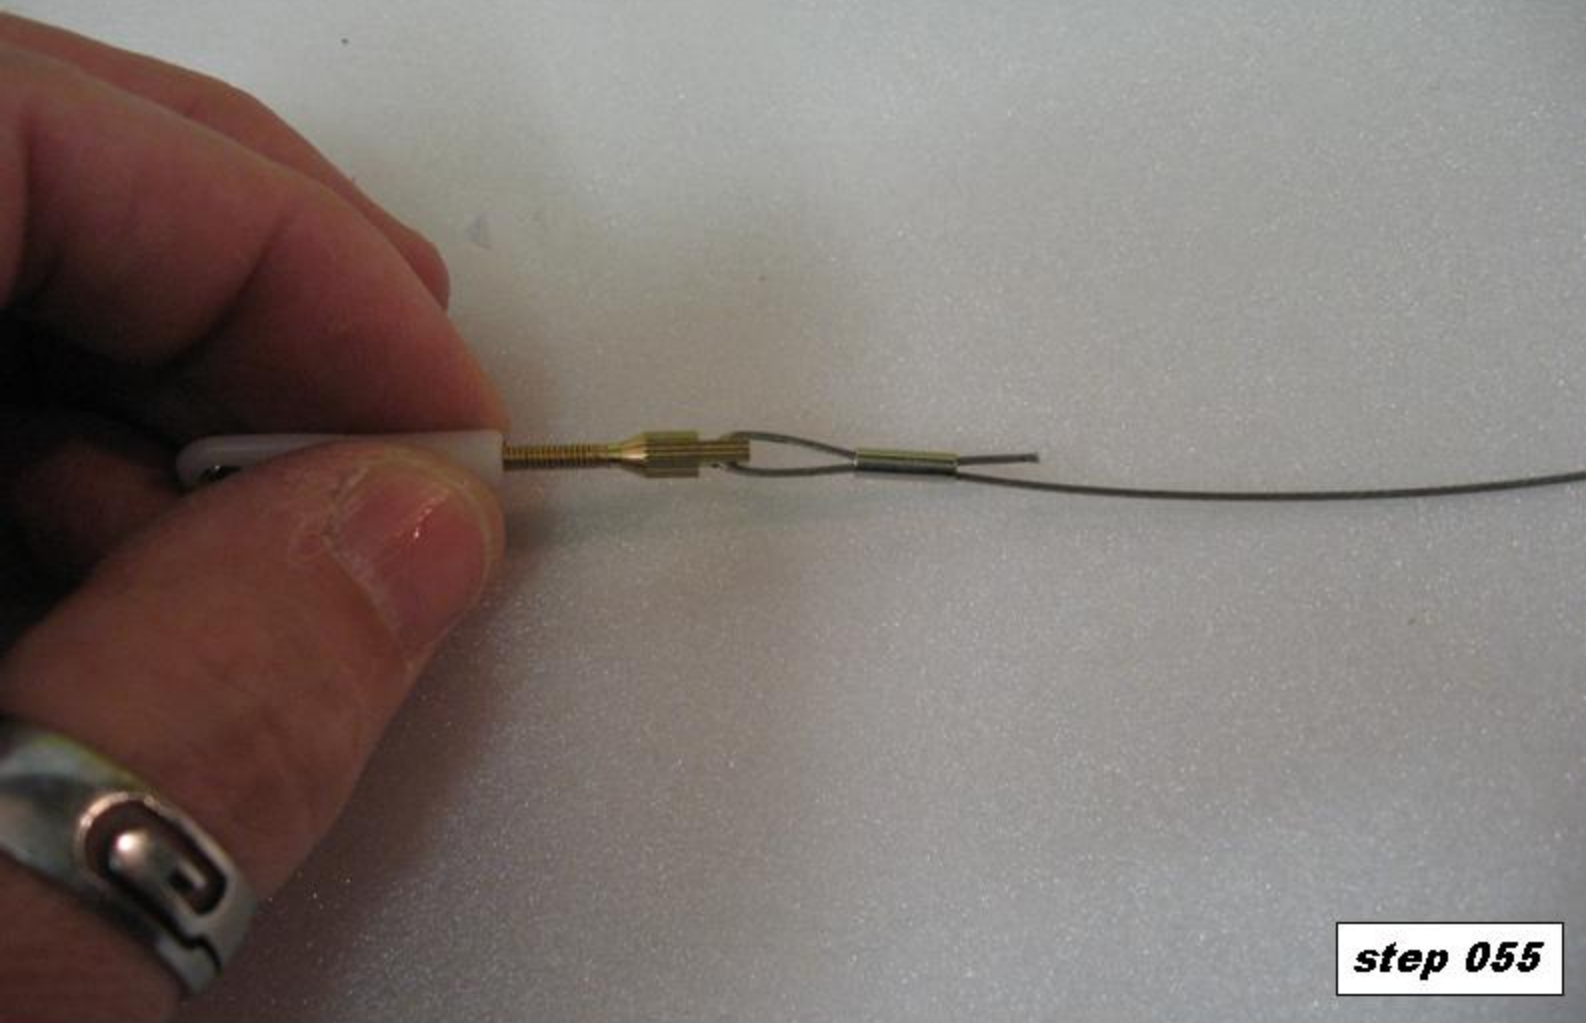

step 055





step 056




step 057




step 058

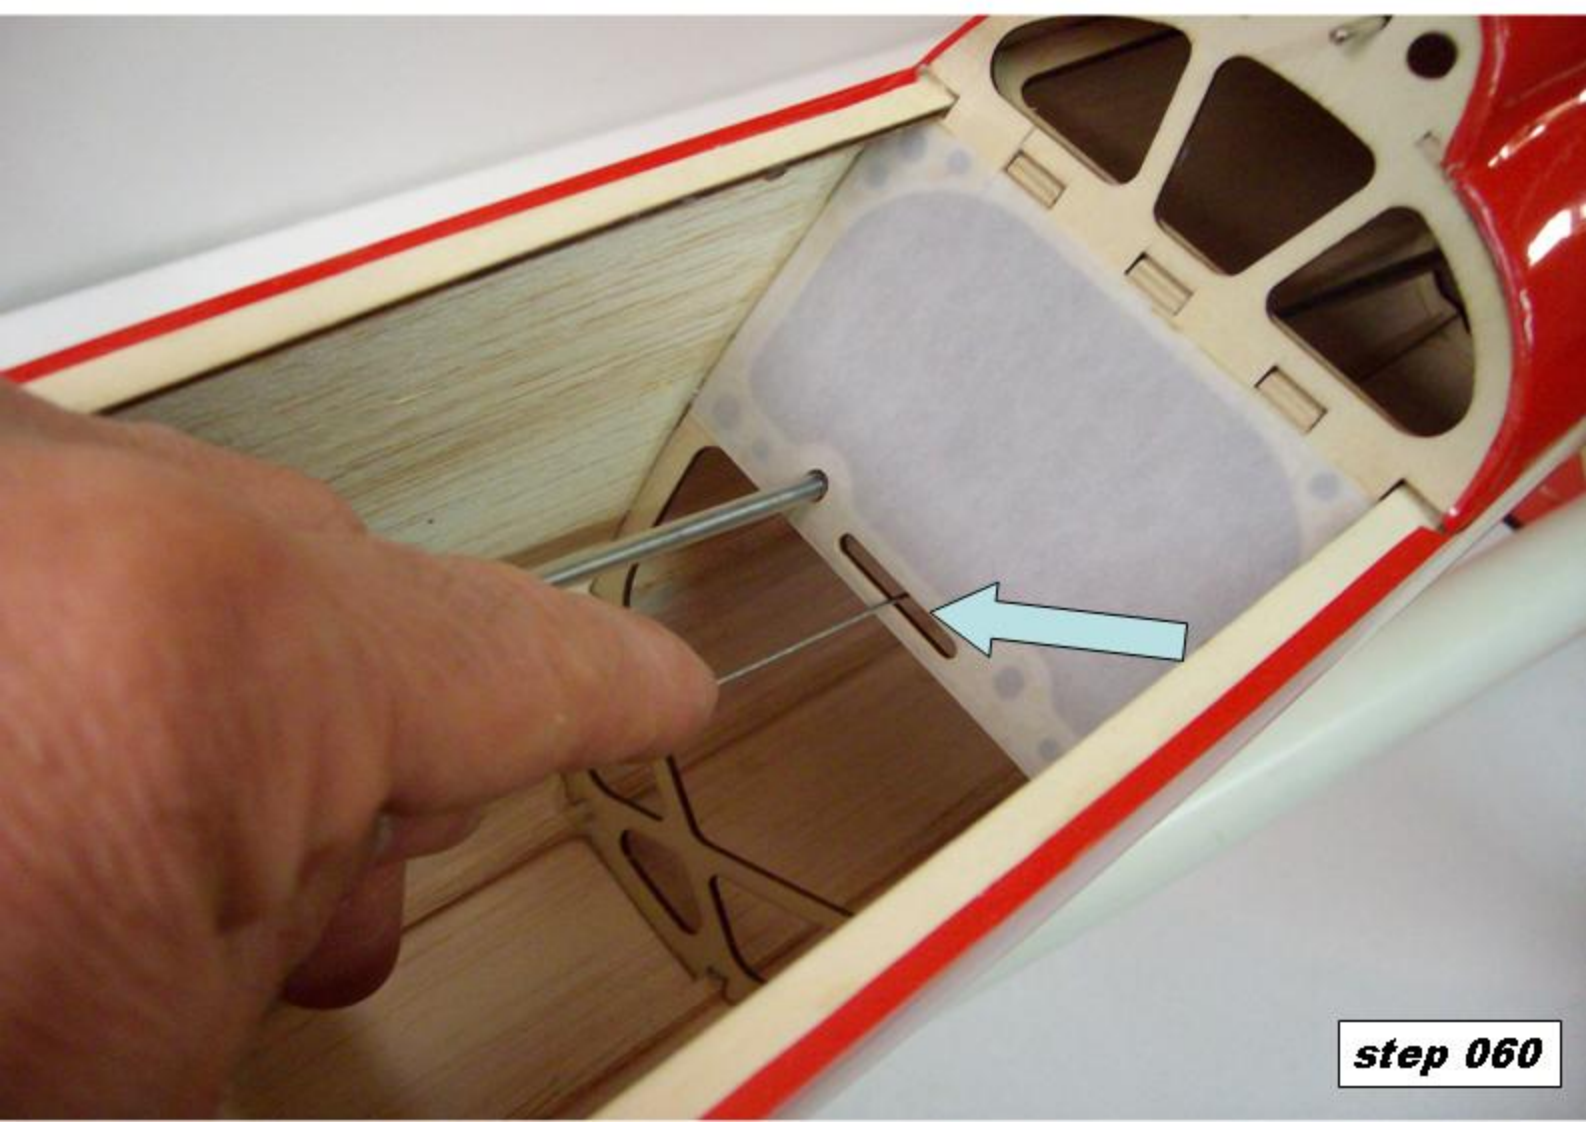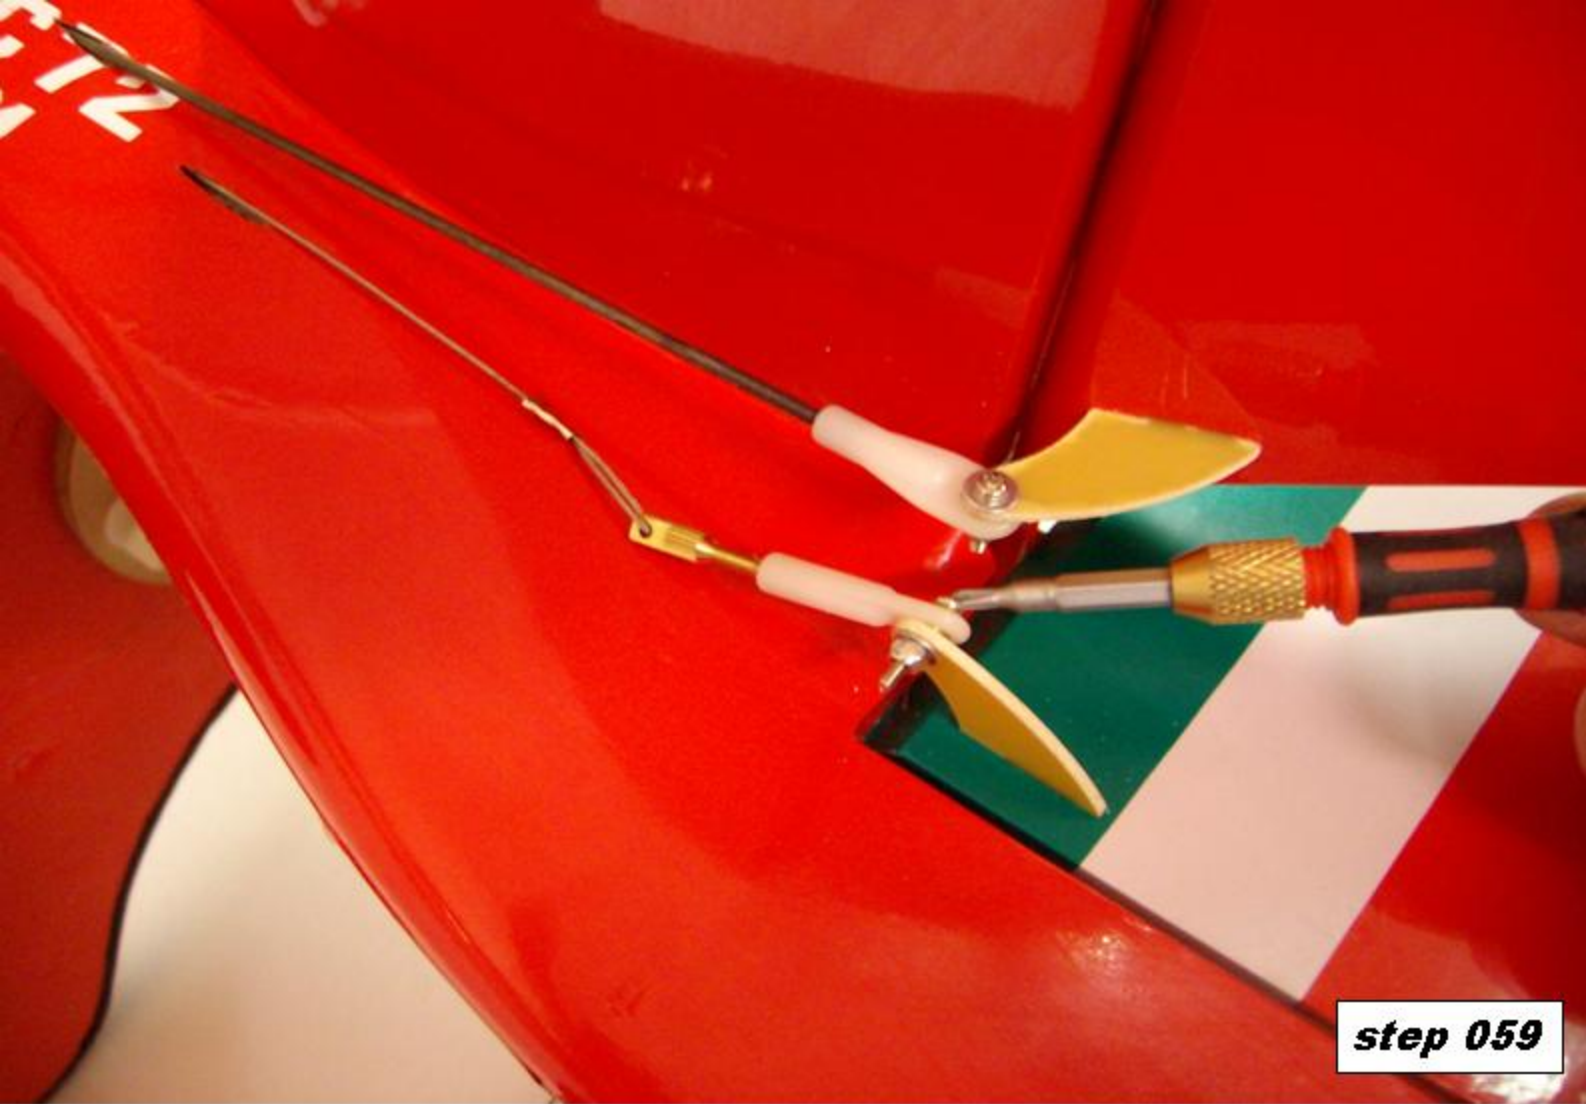


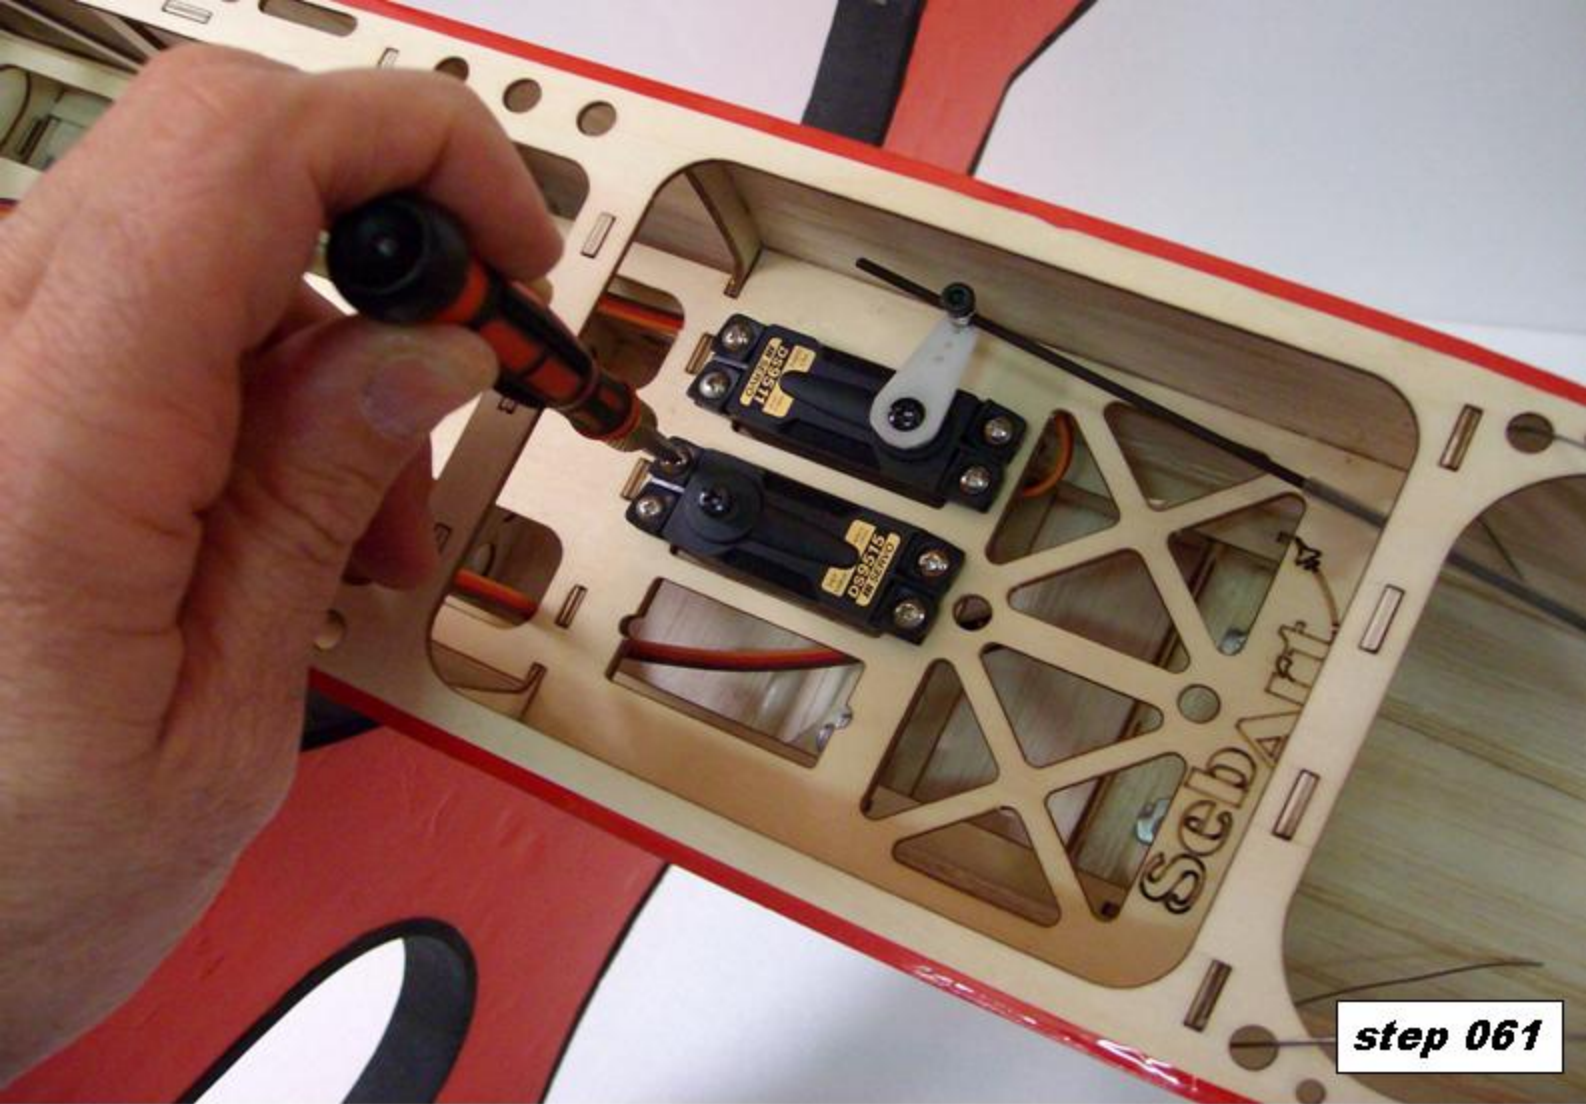


step 061

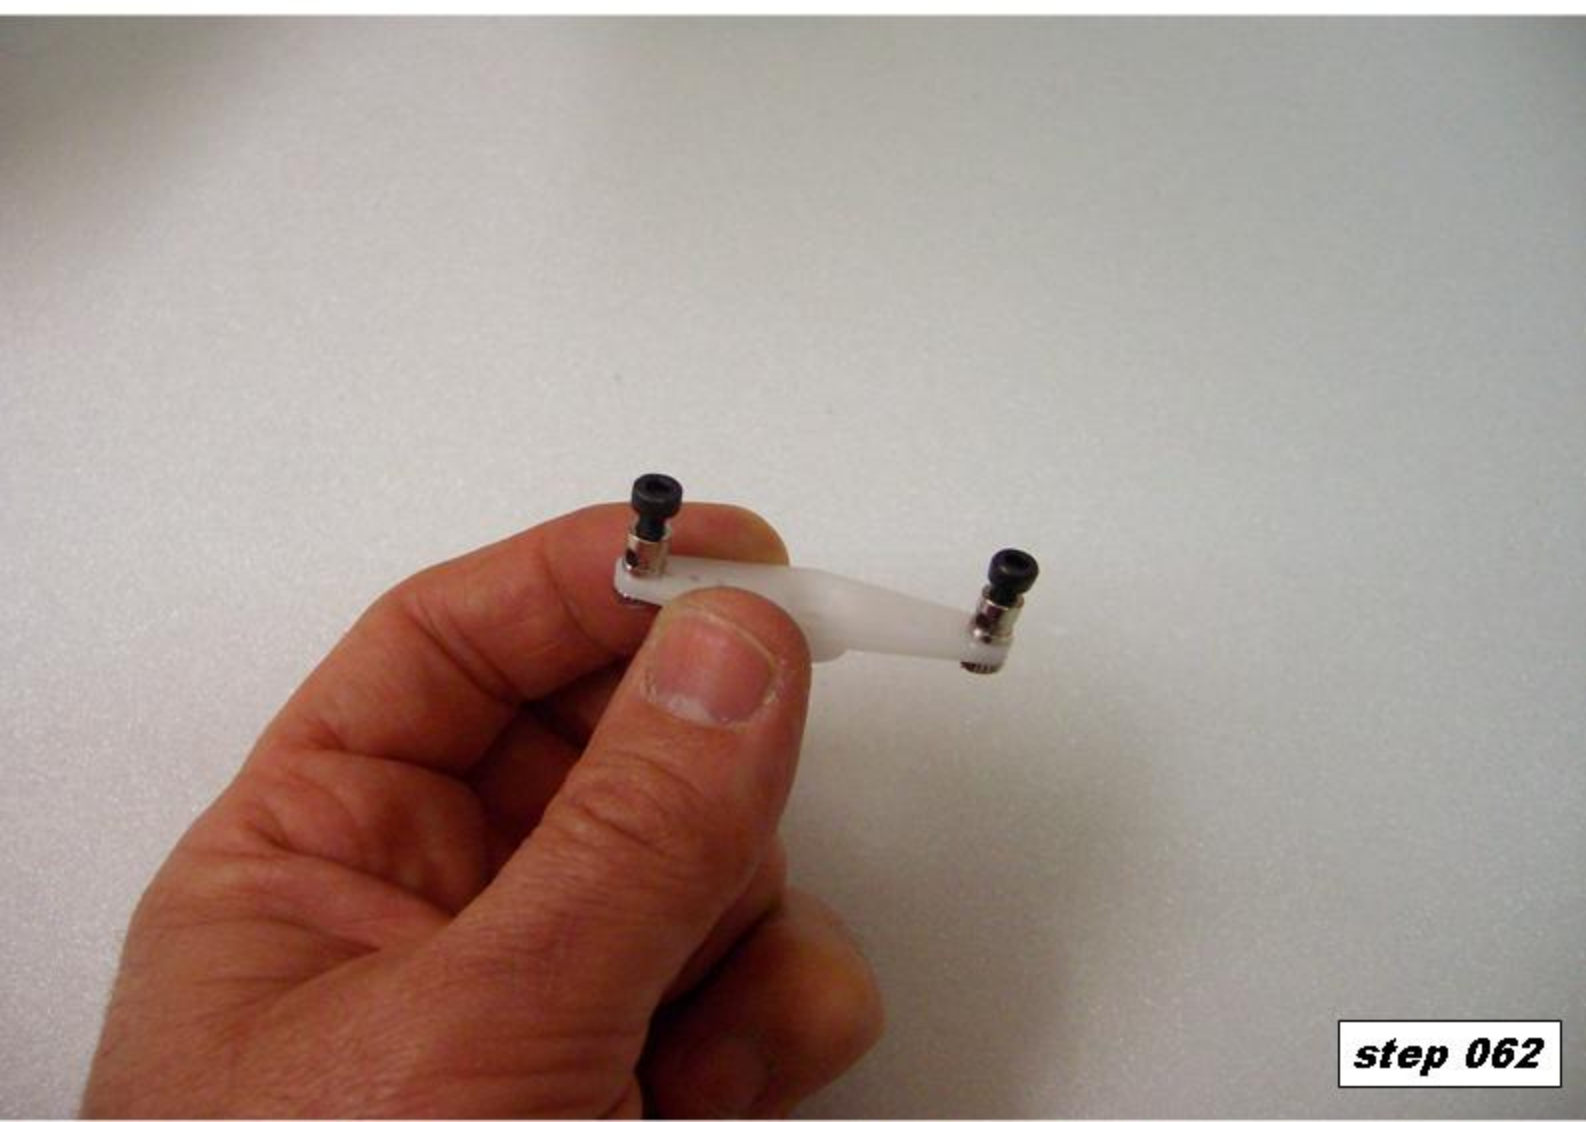

step 062

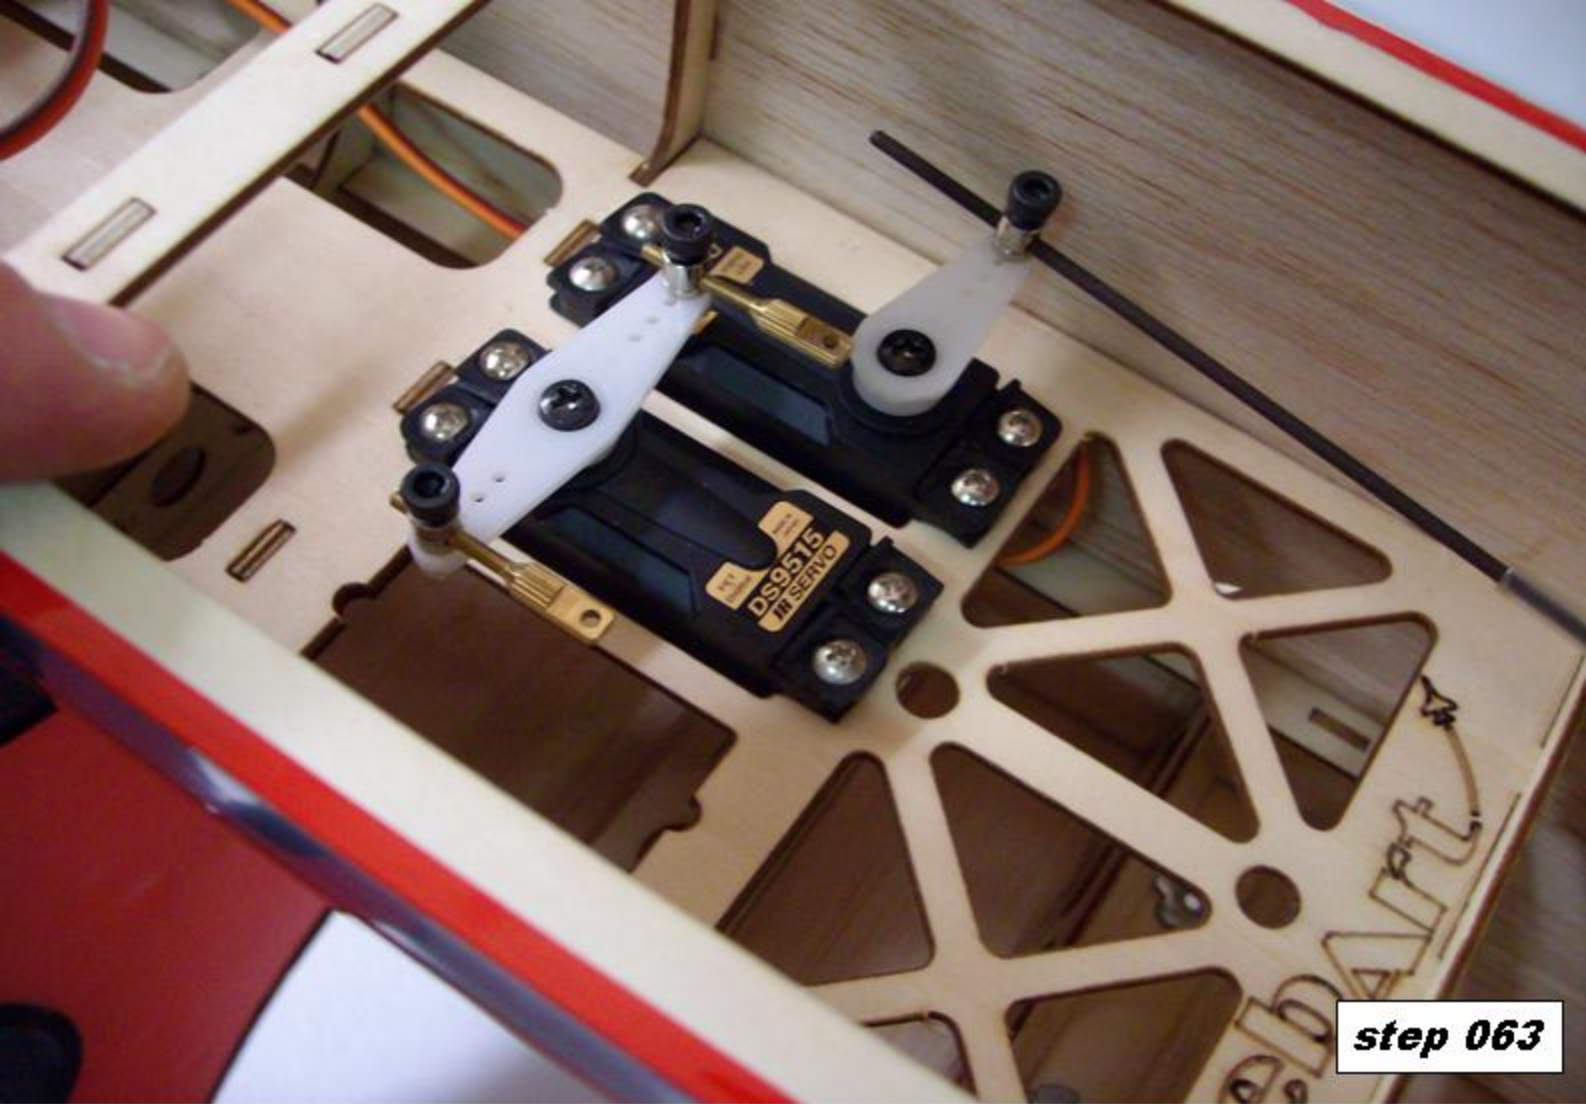



step 063

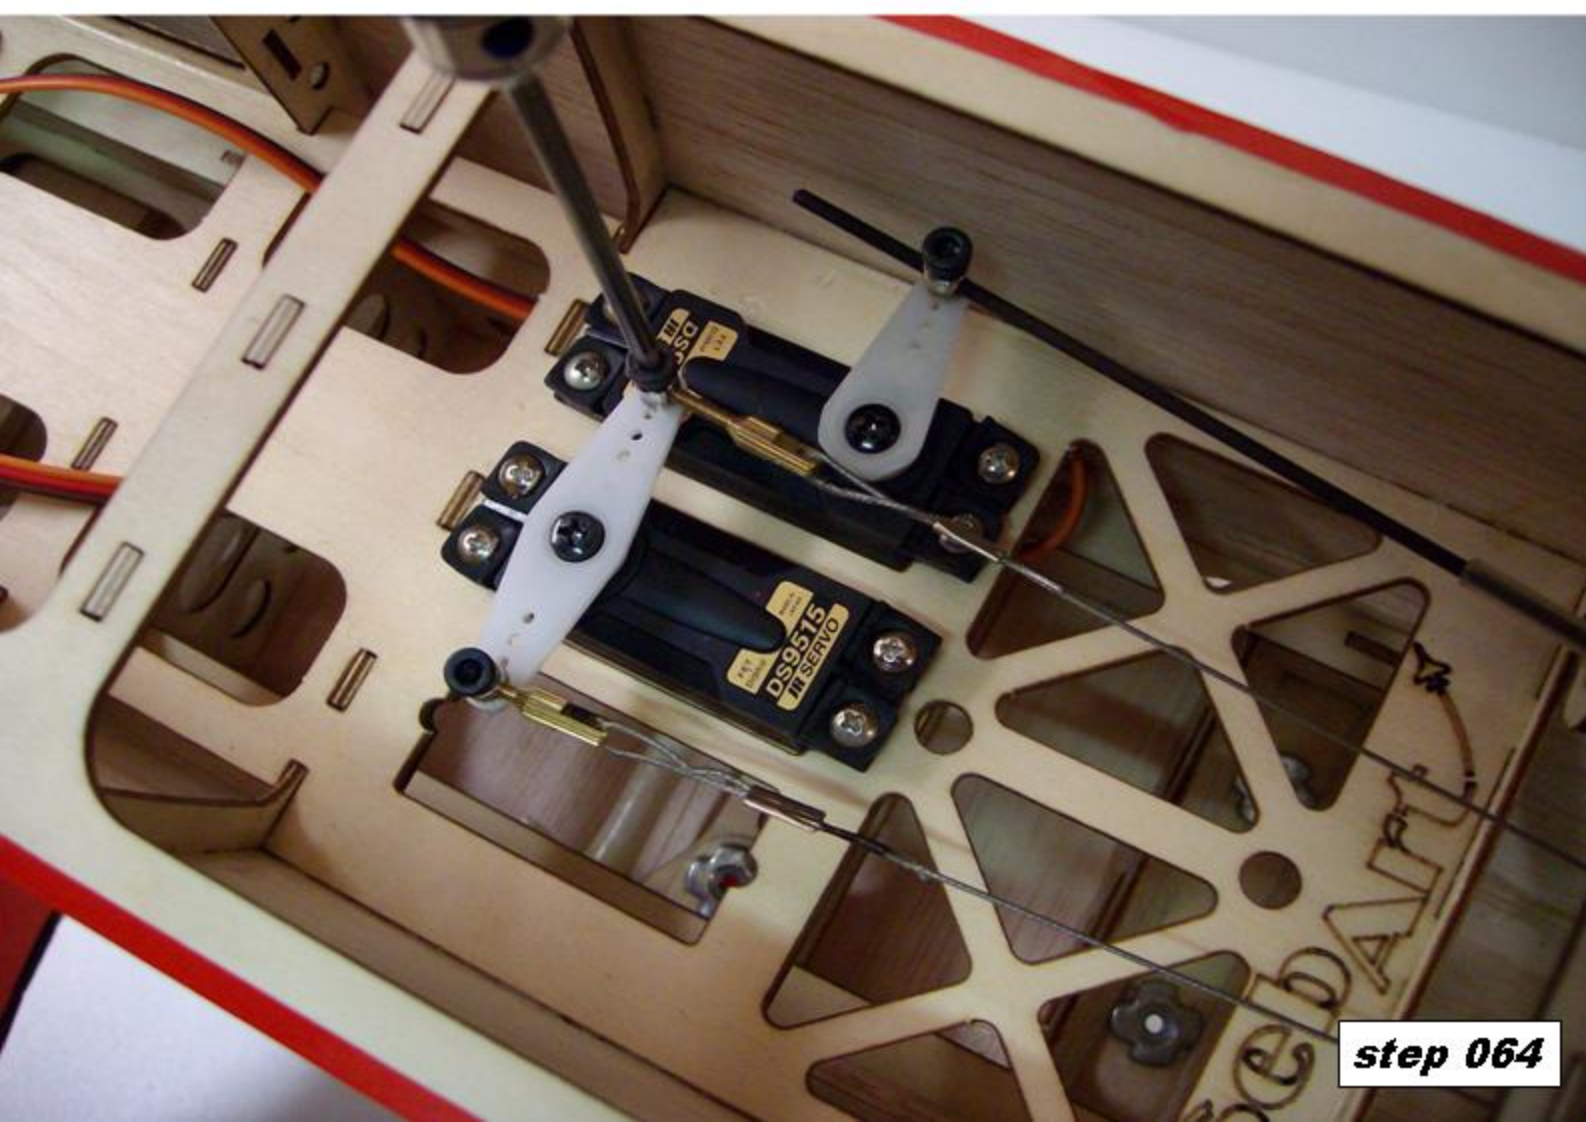


step 064


cut at the
correct height

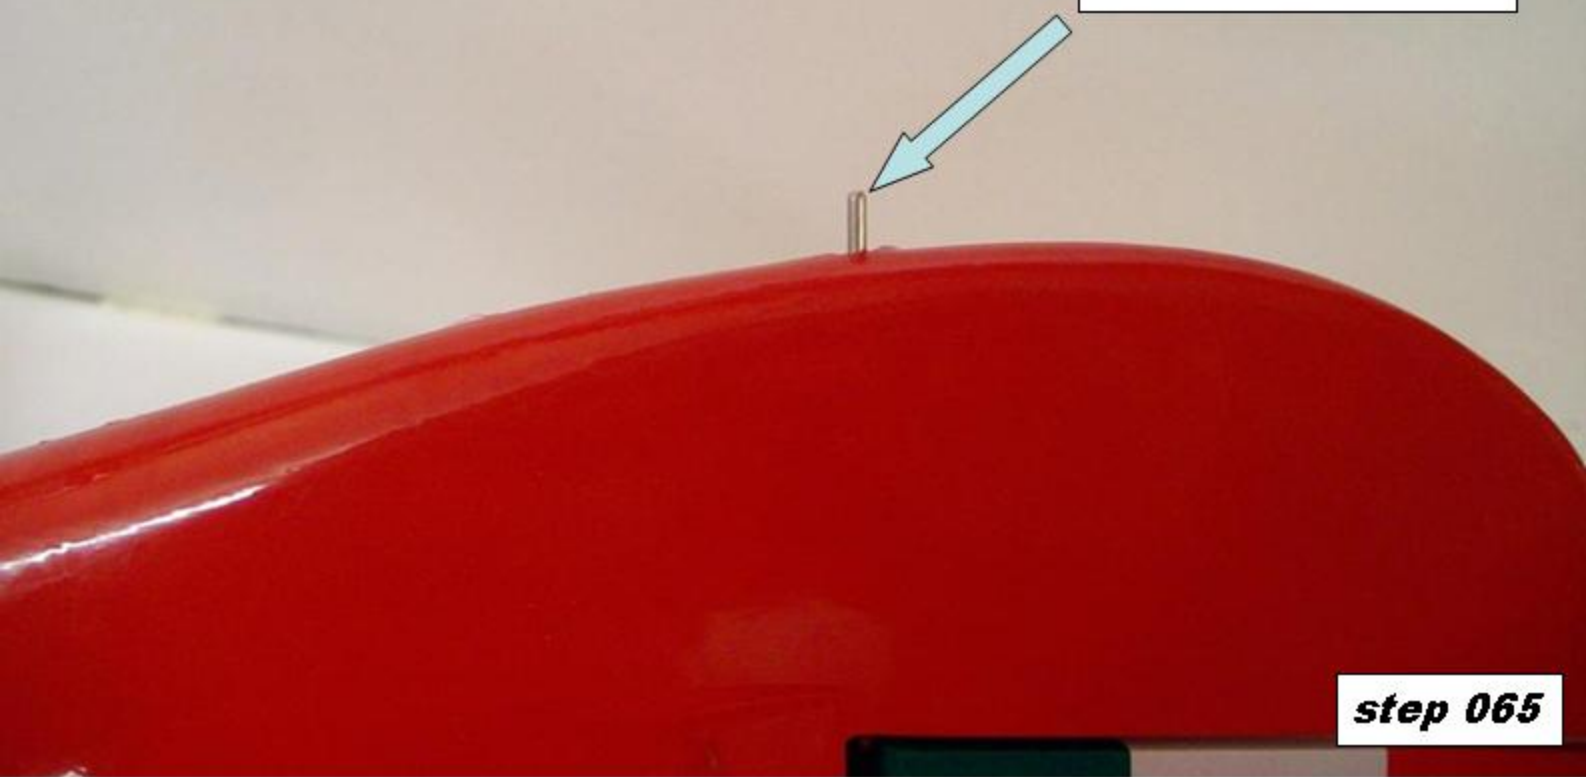

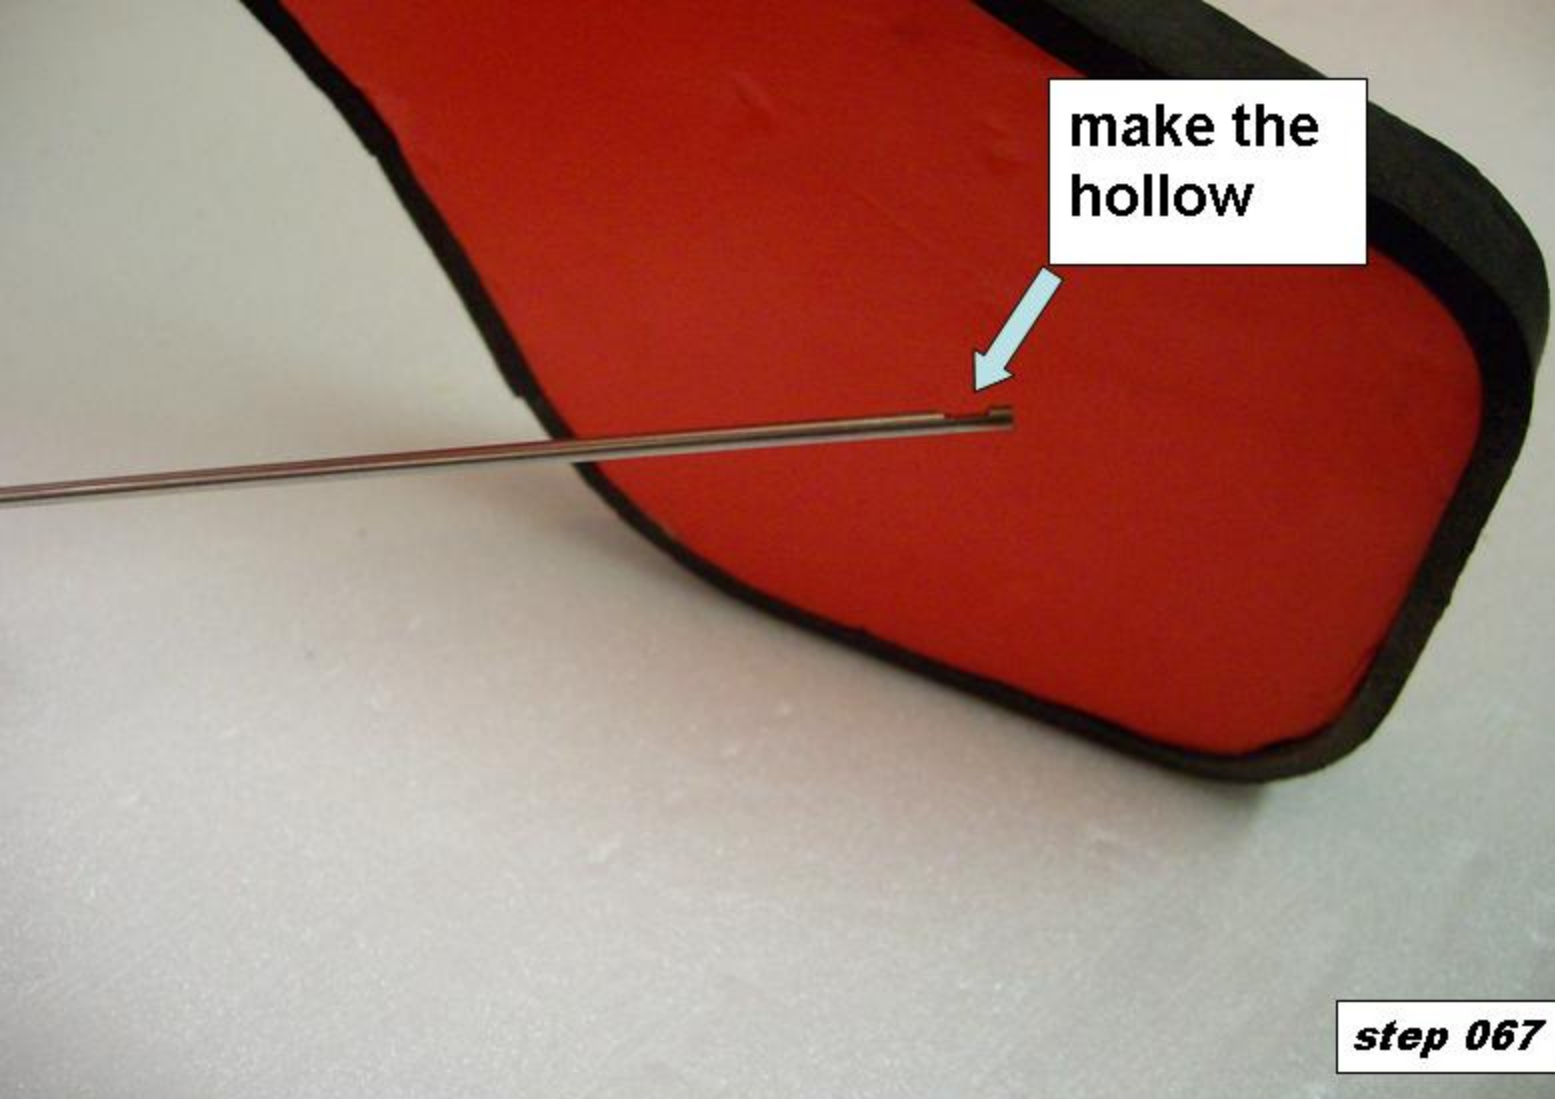


step 067

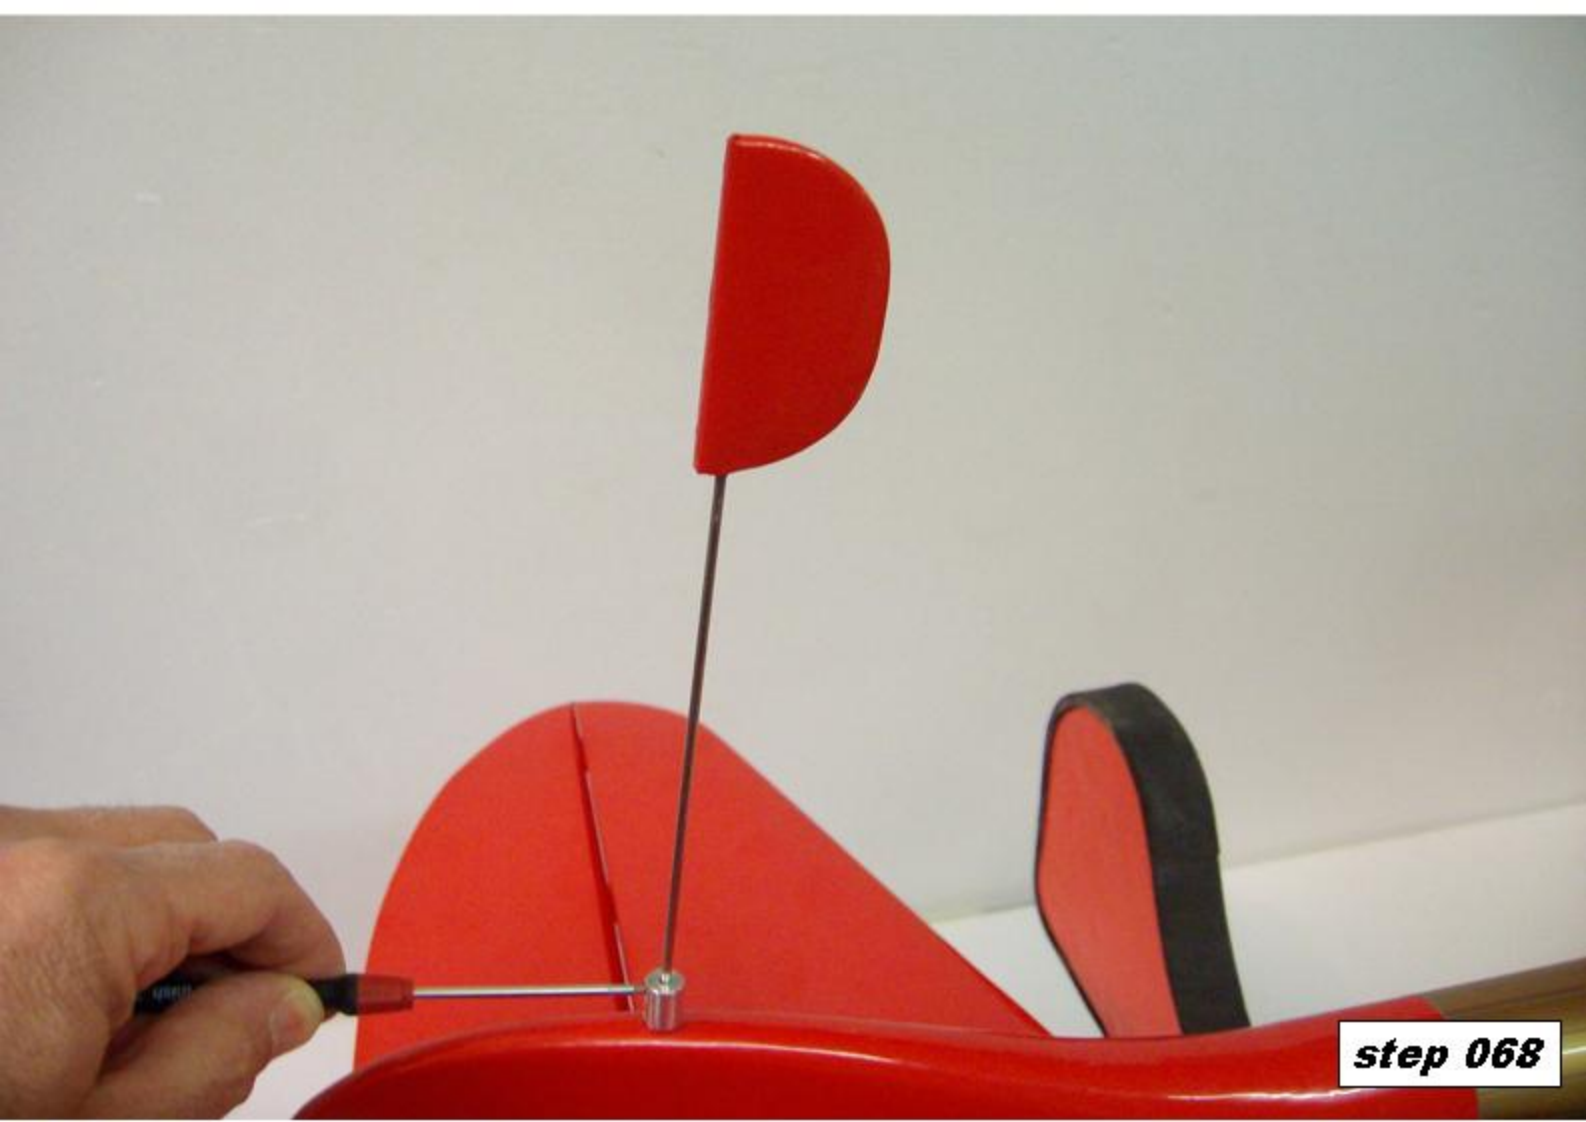

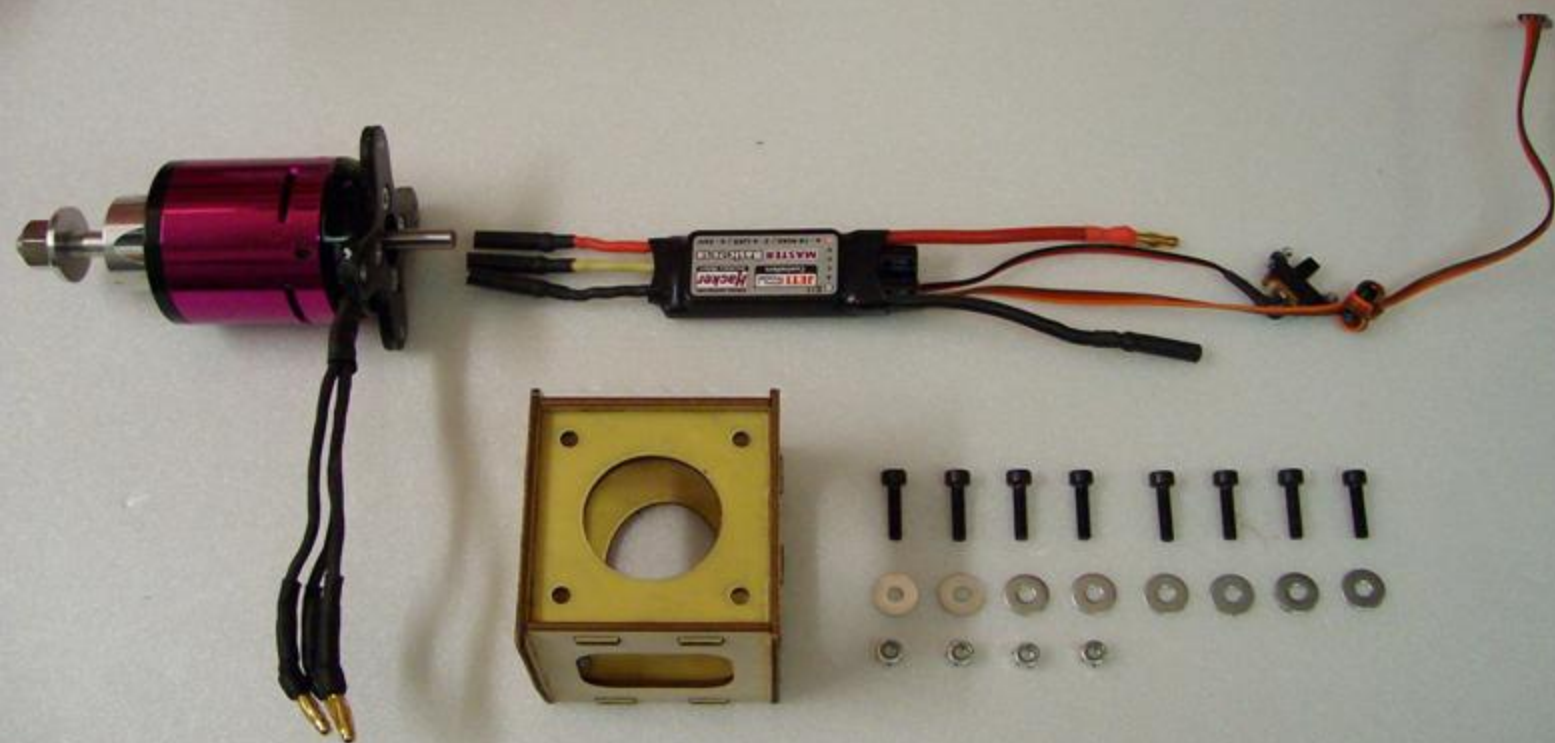


step 069

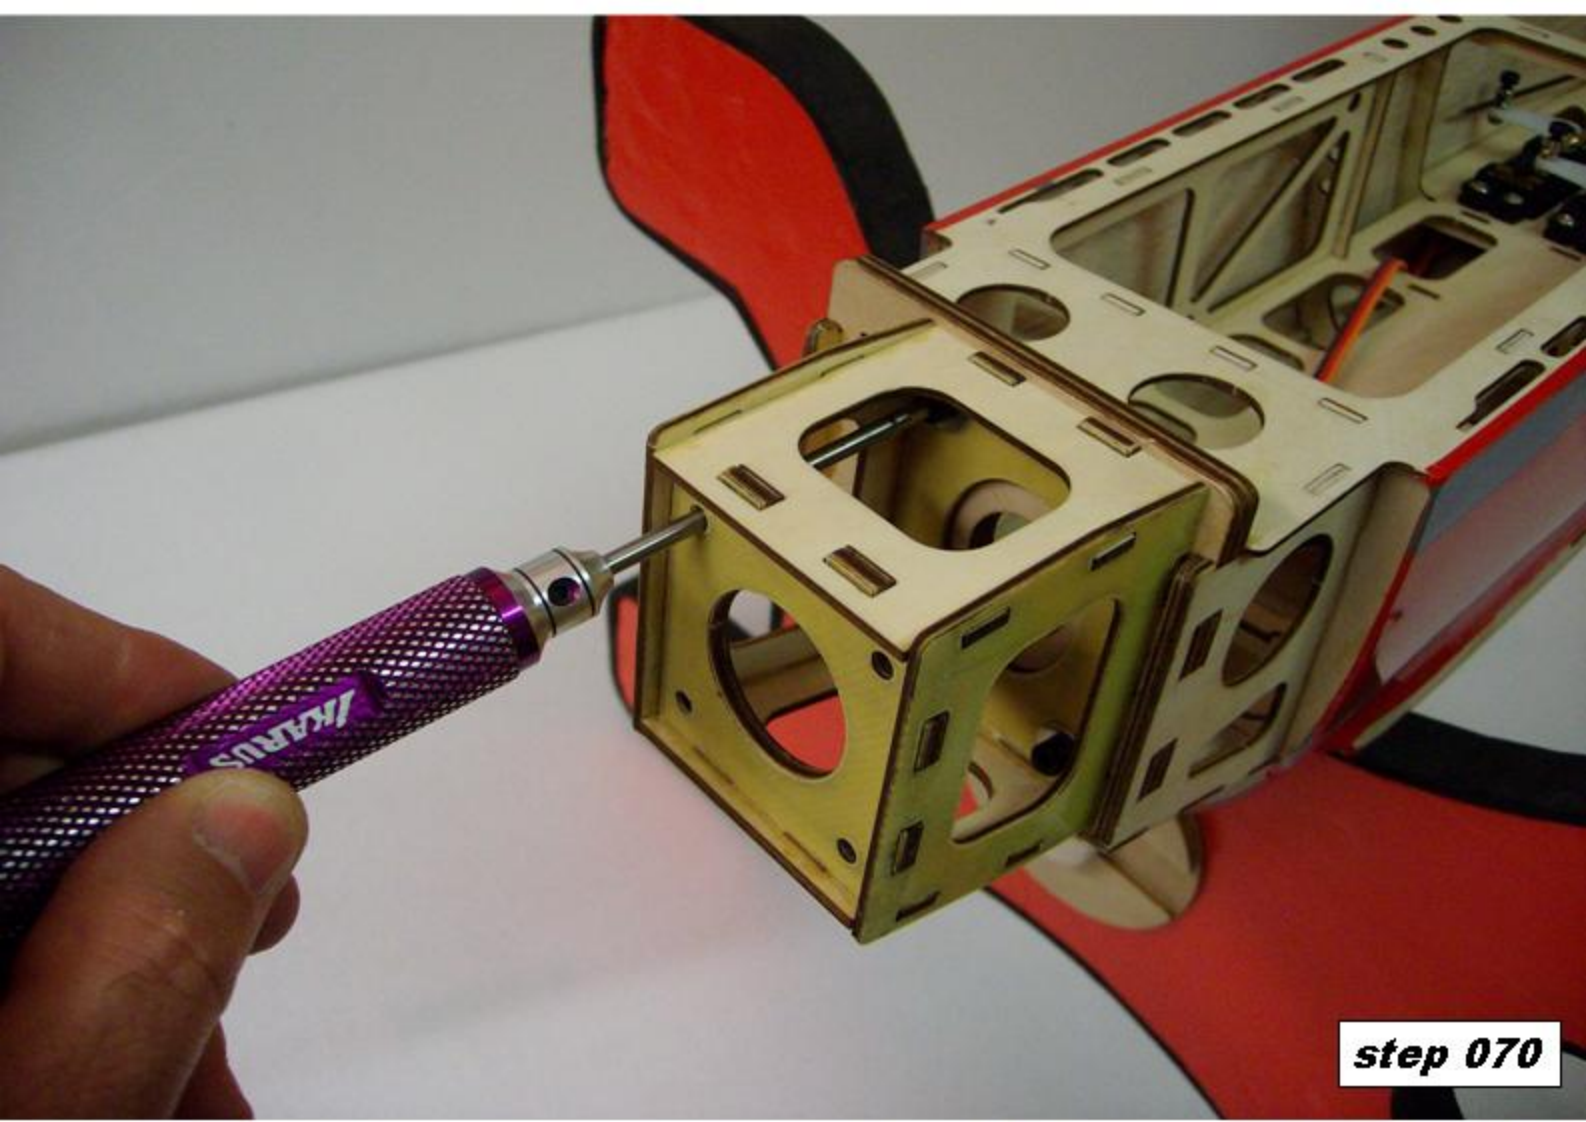


step 070




step 071

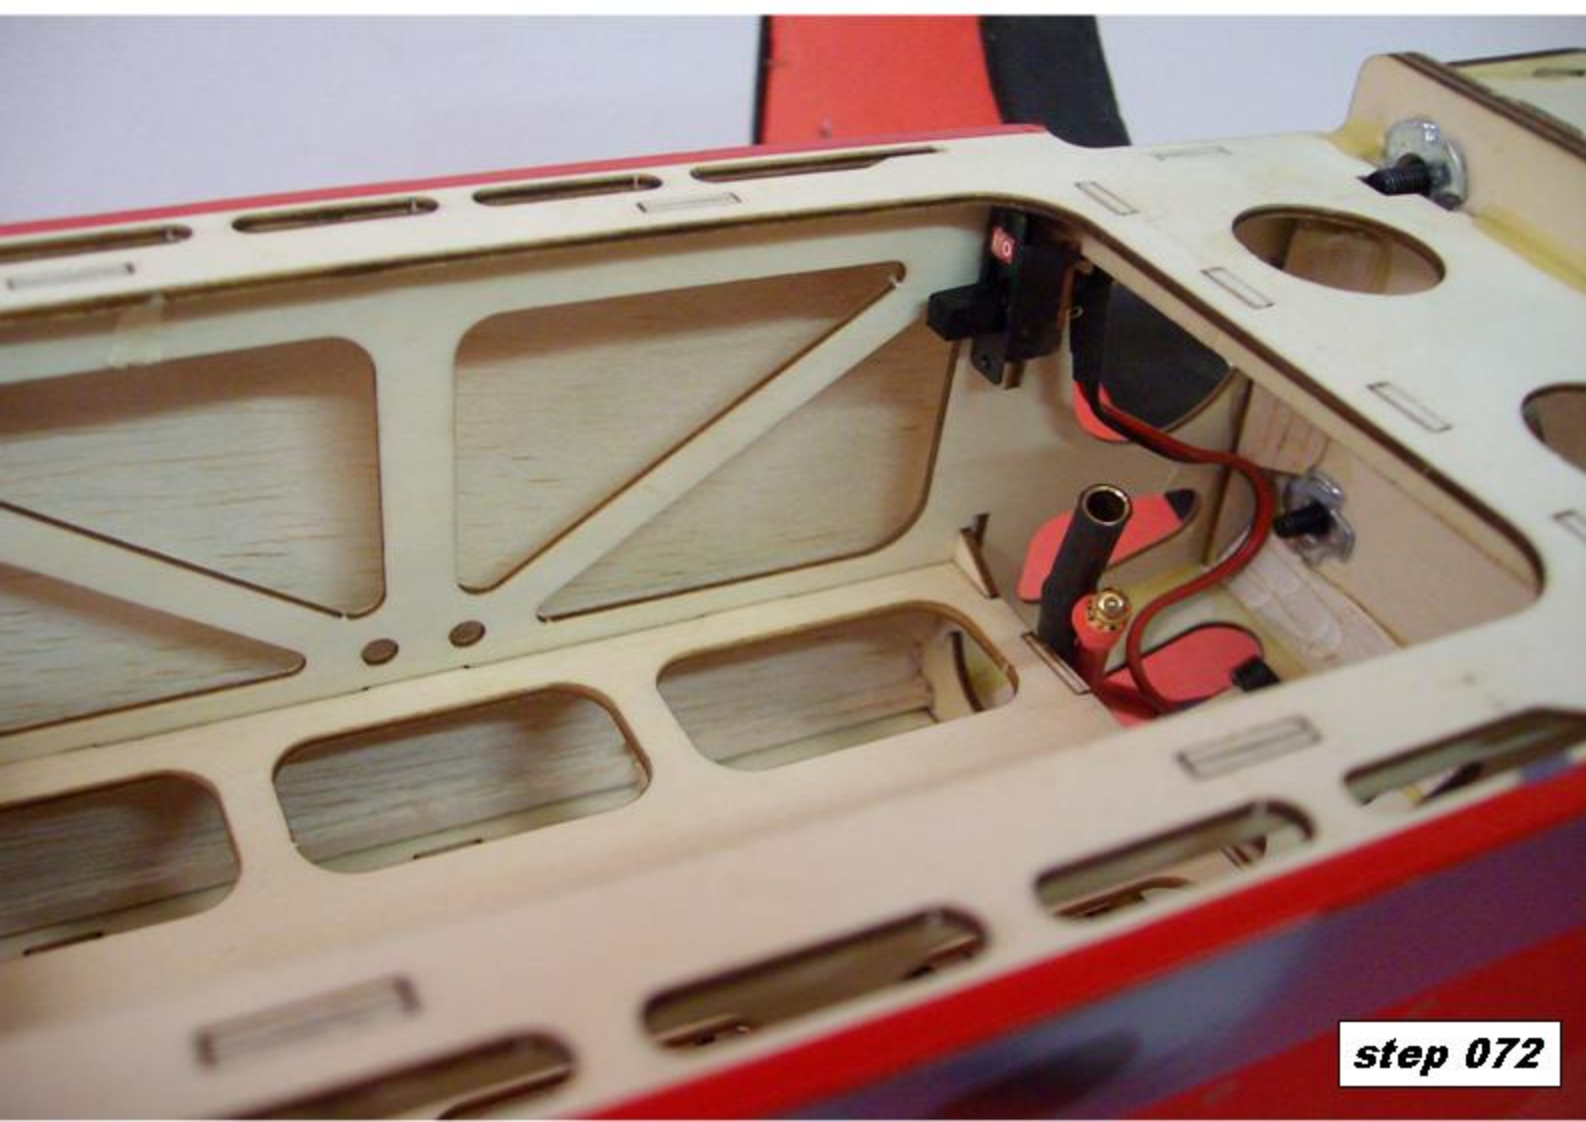

step 072

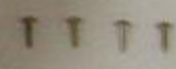


step 073

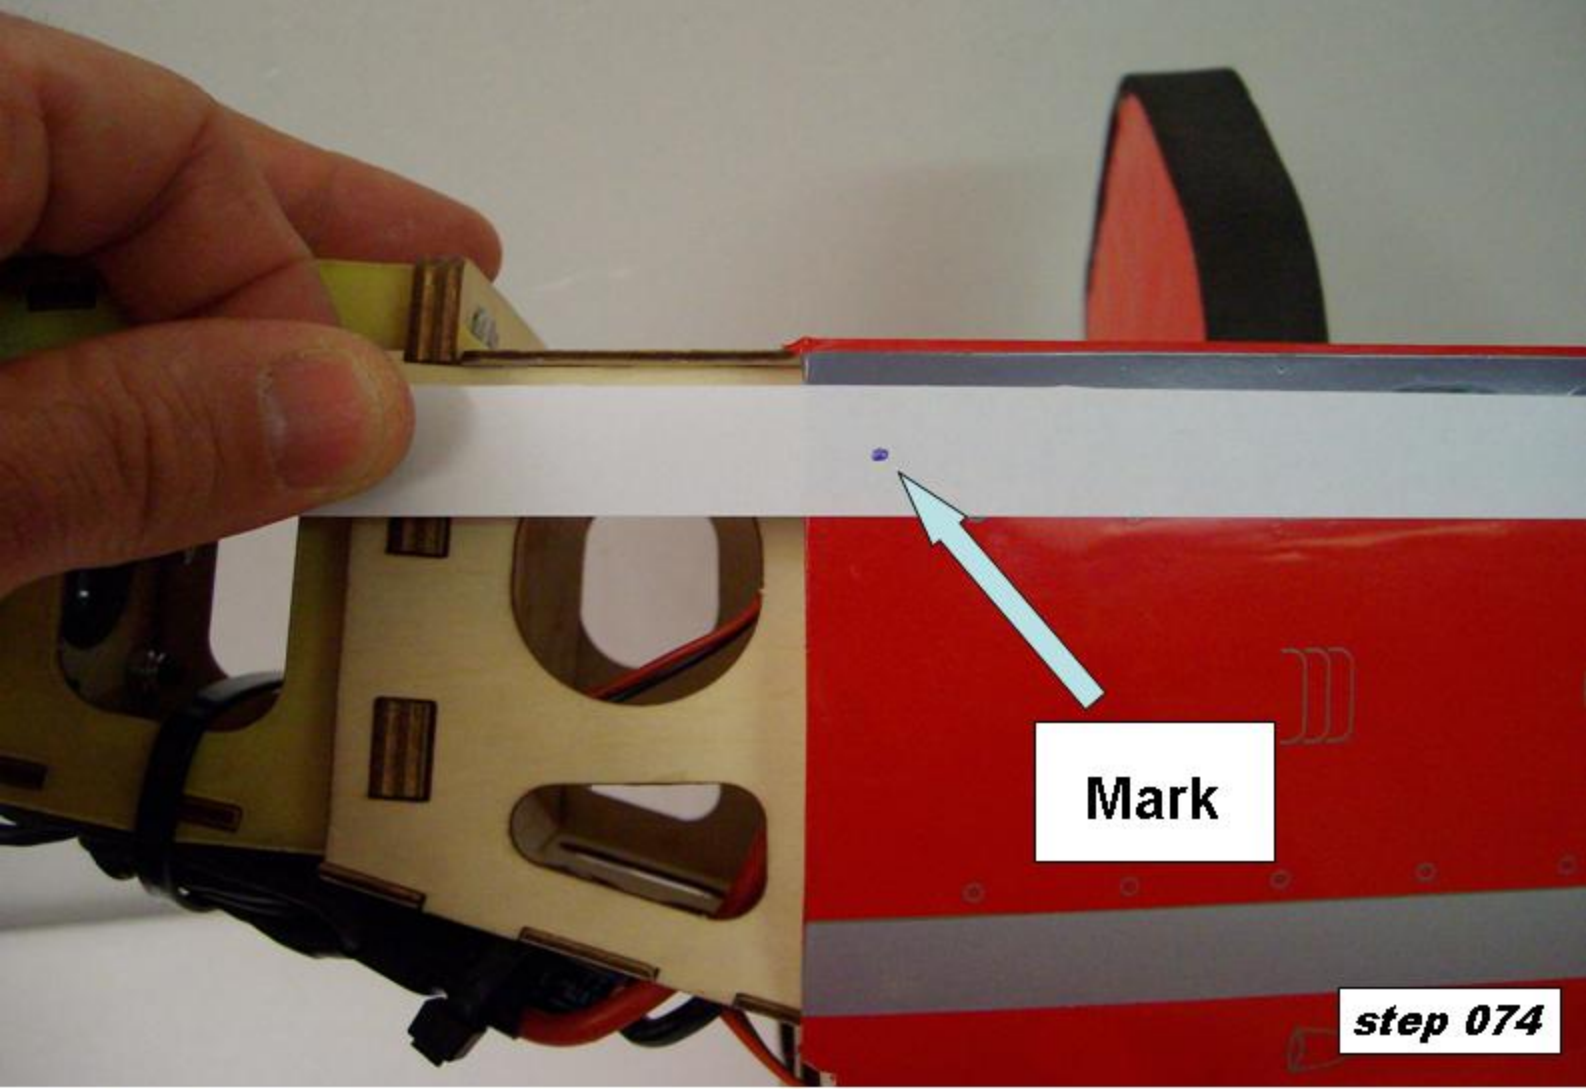


Mark


step 074



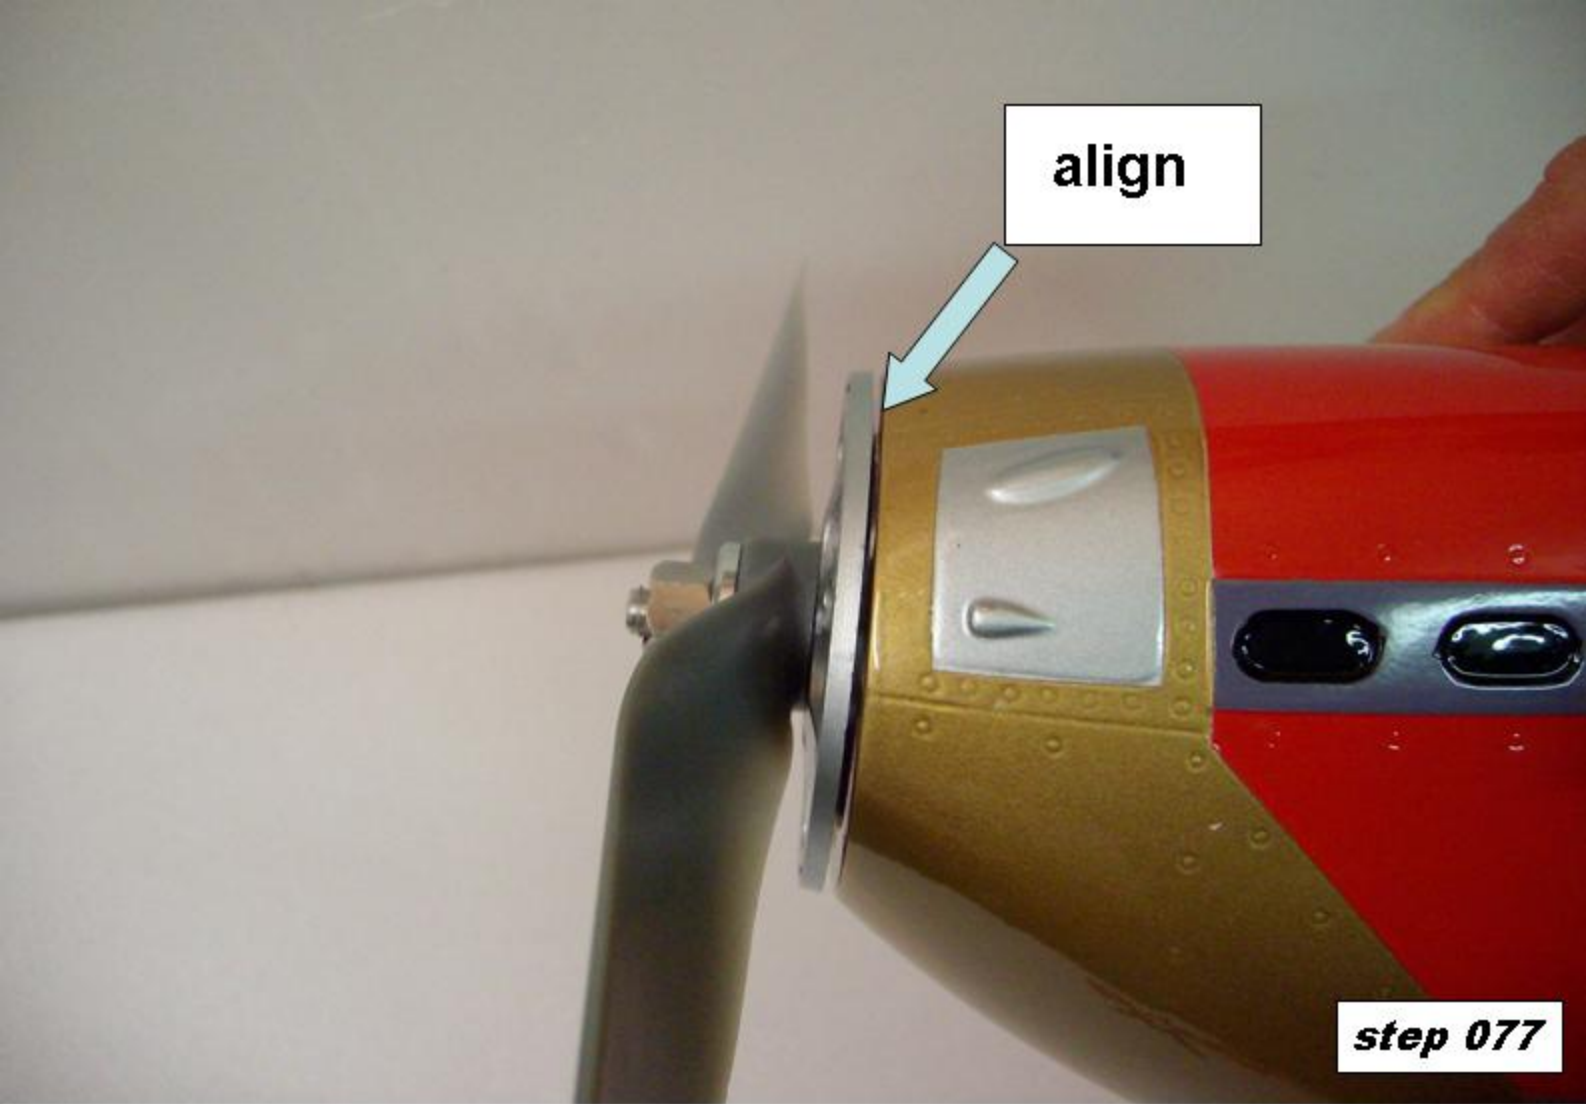


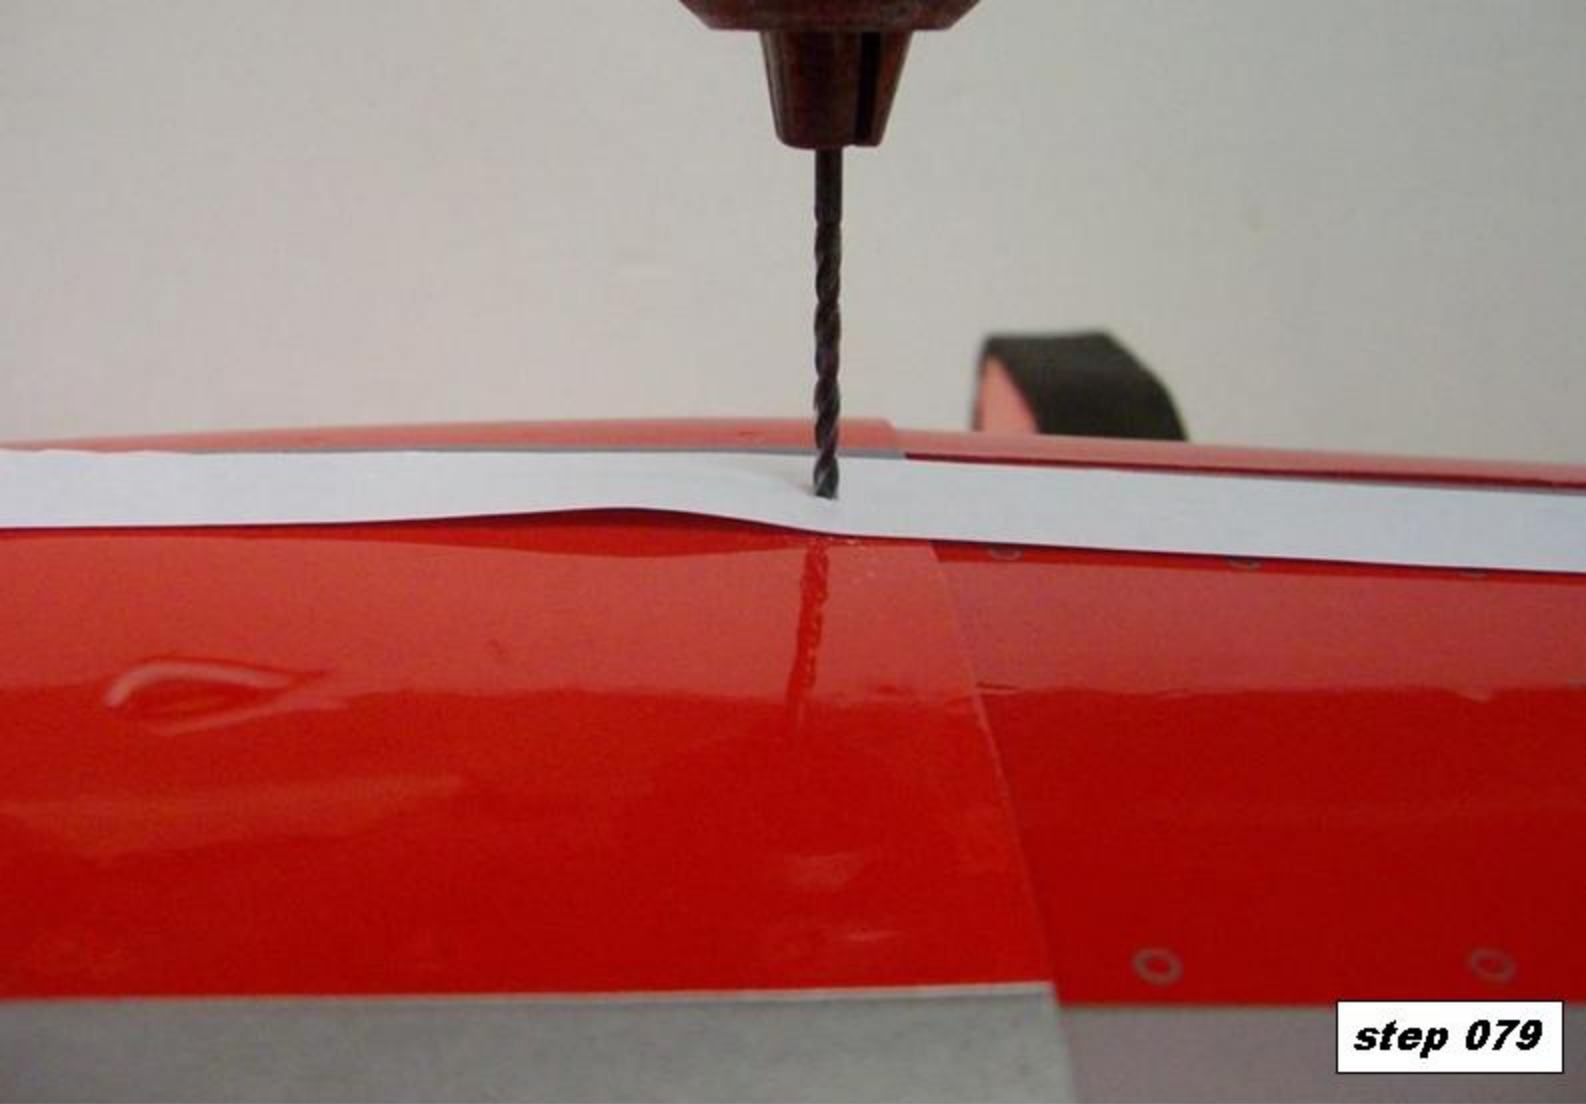


step 079

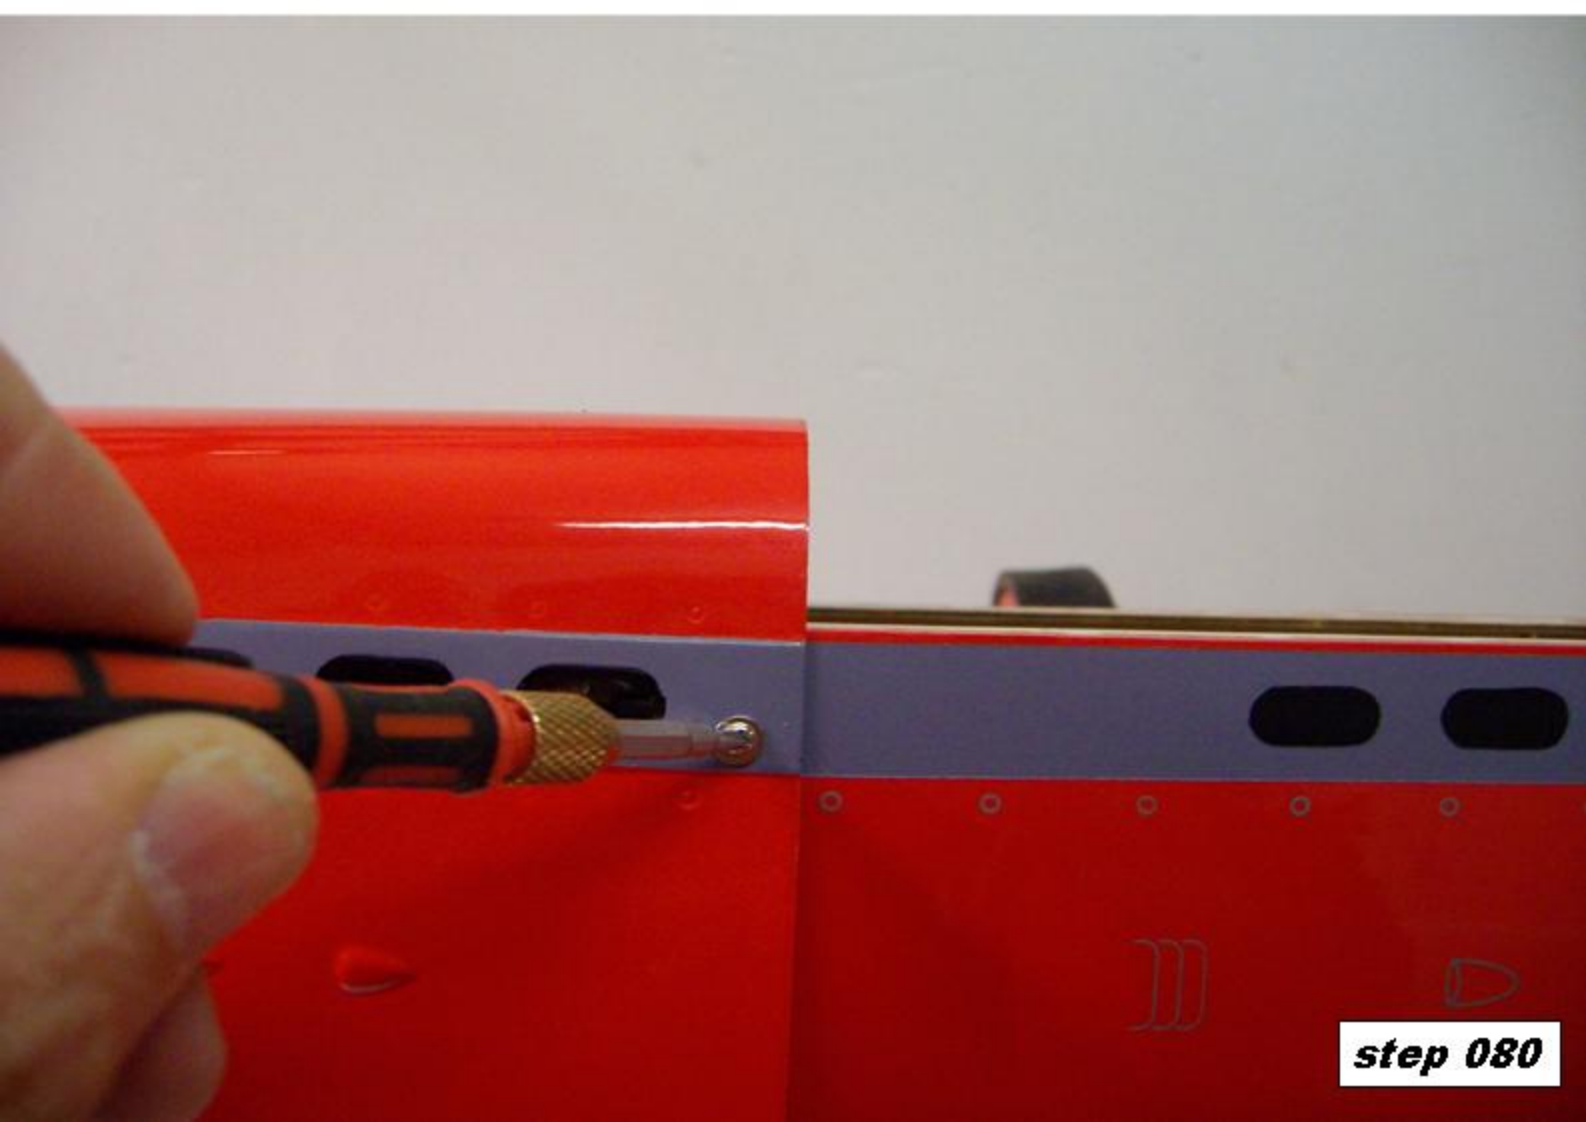

step 080

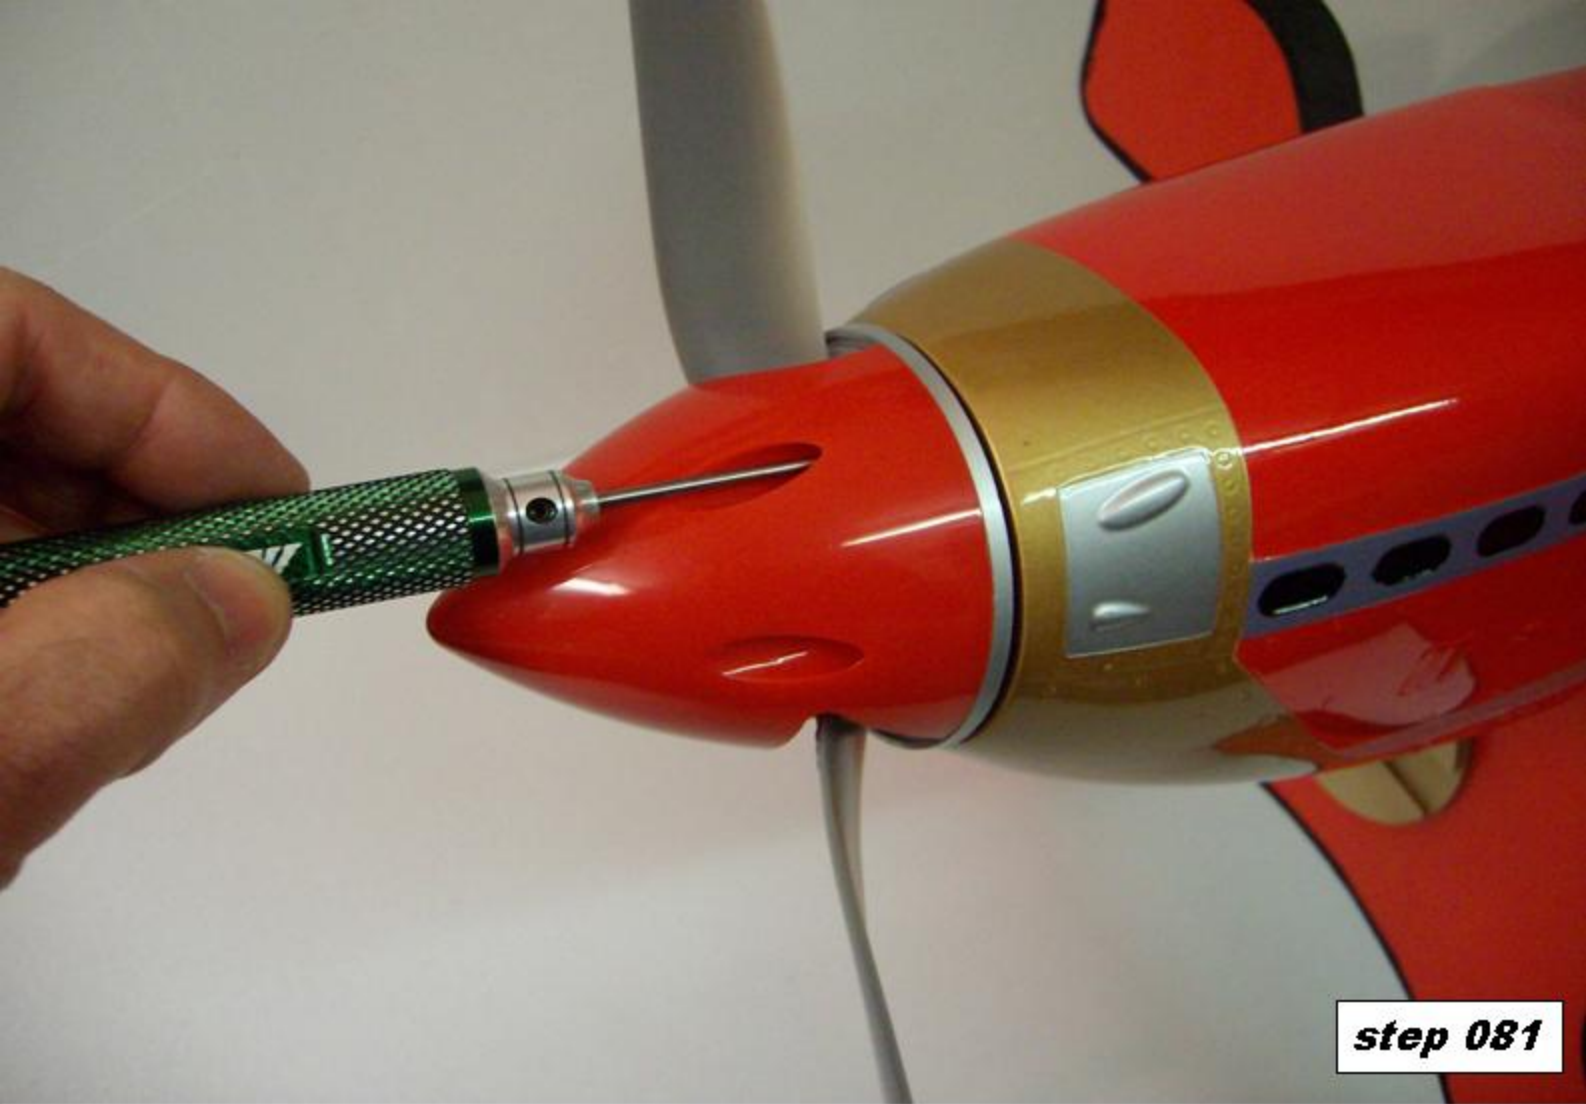


step 081

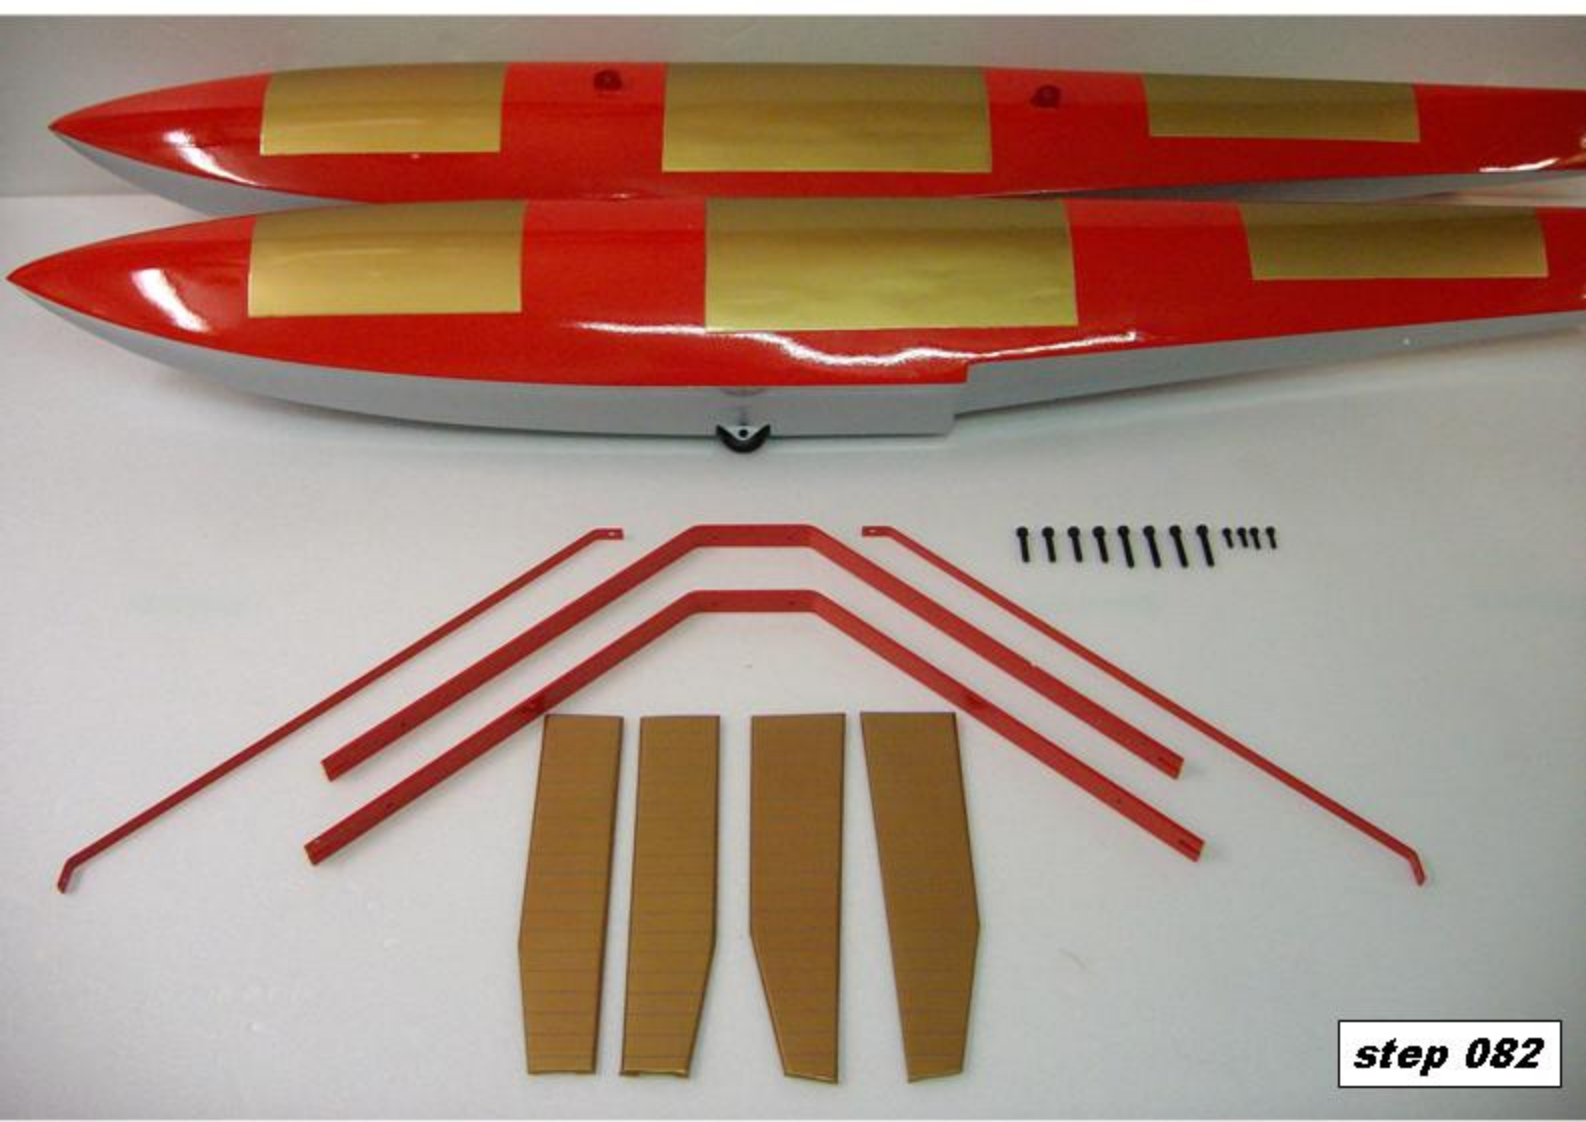



step 082






step 083

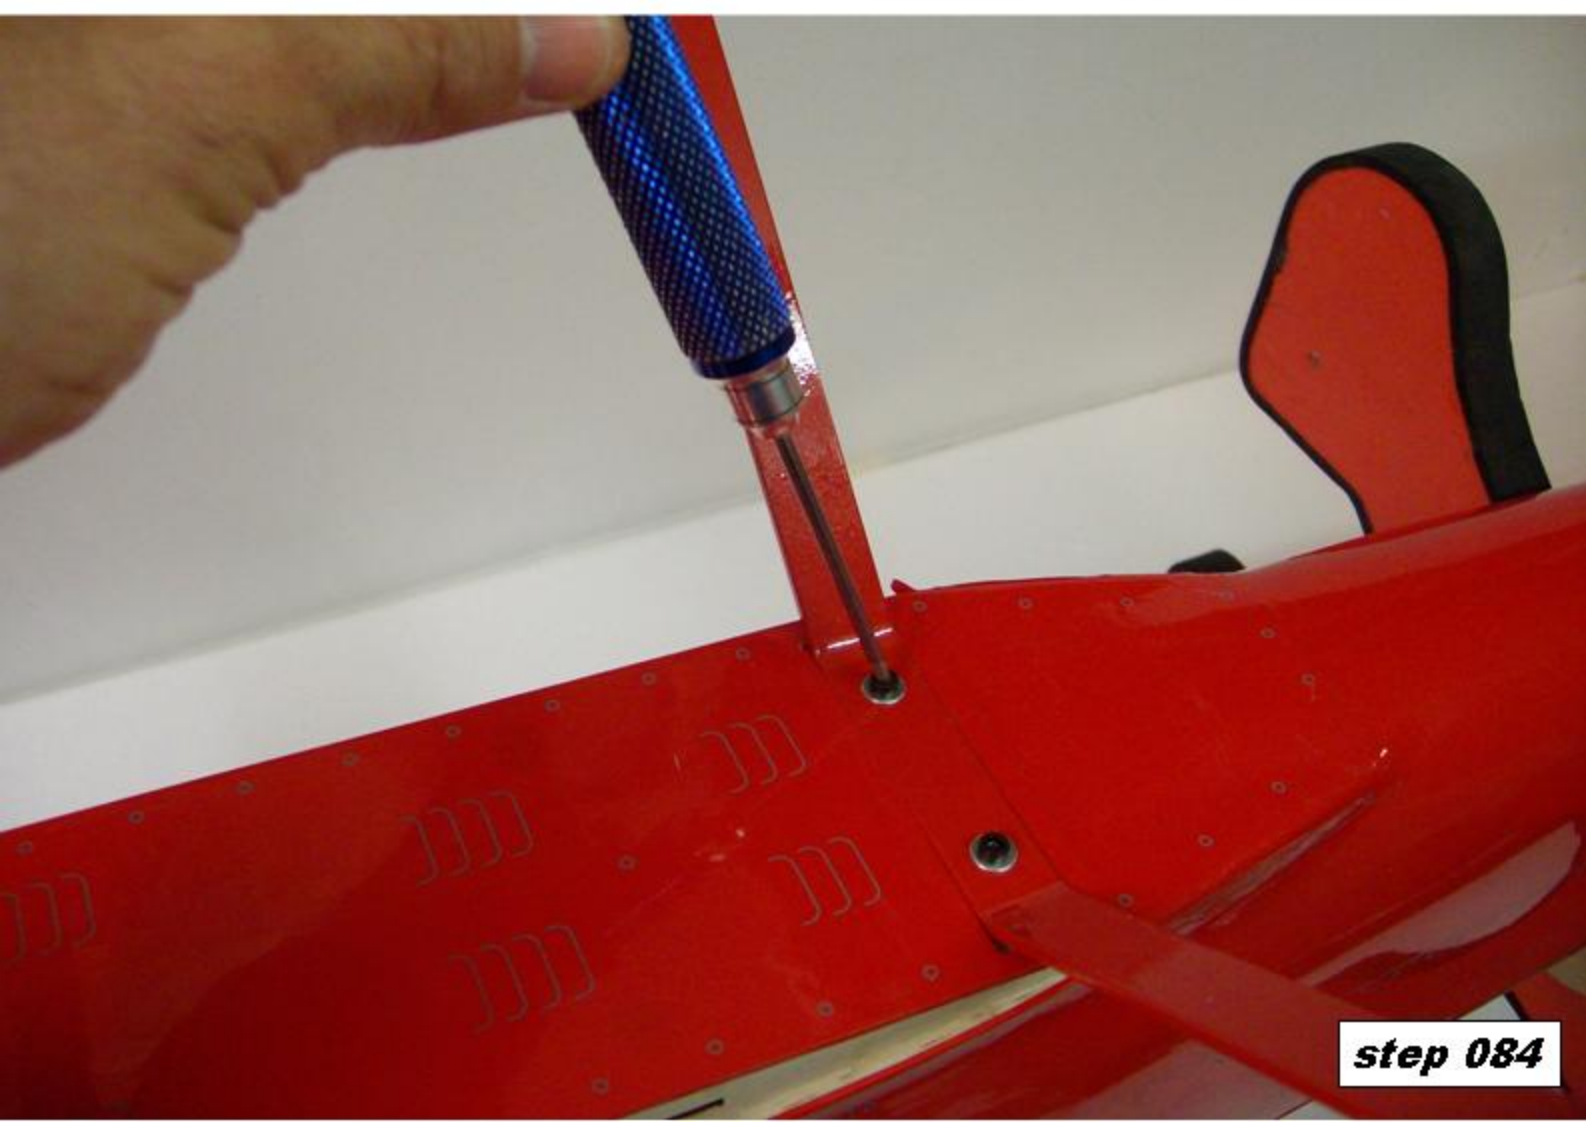


step 084

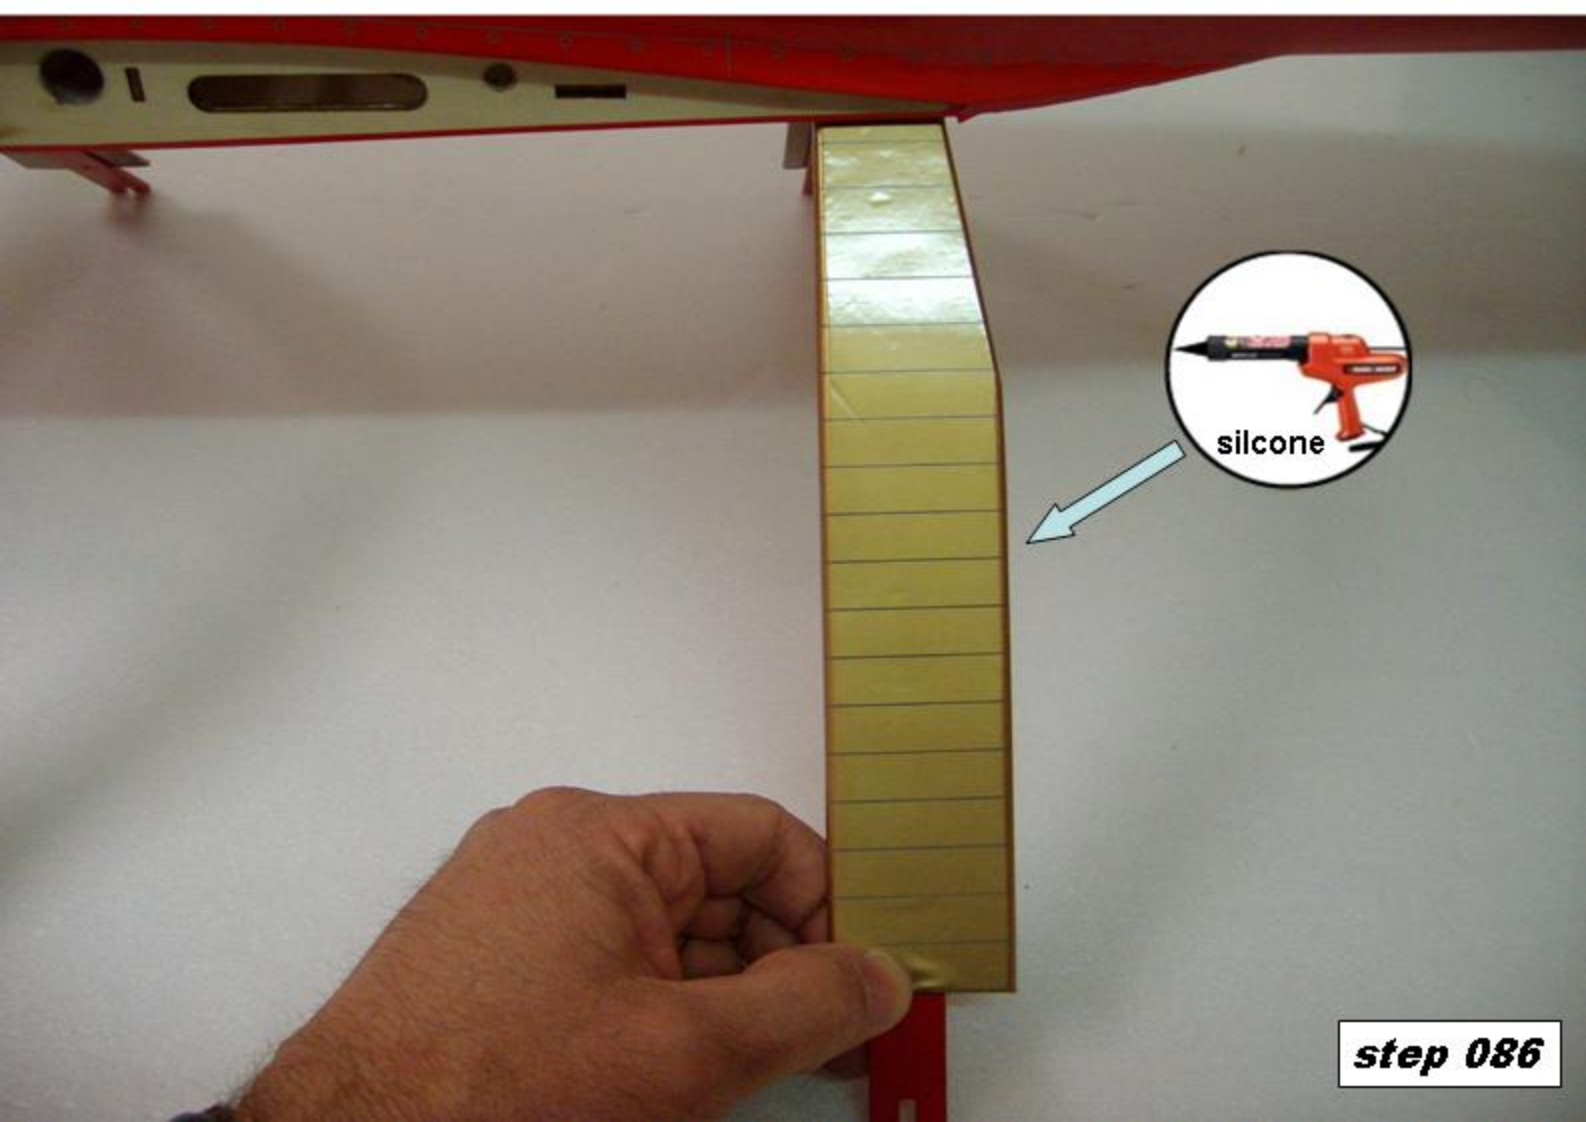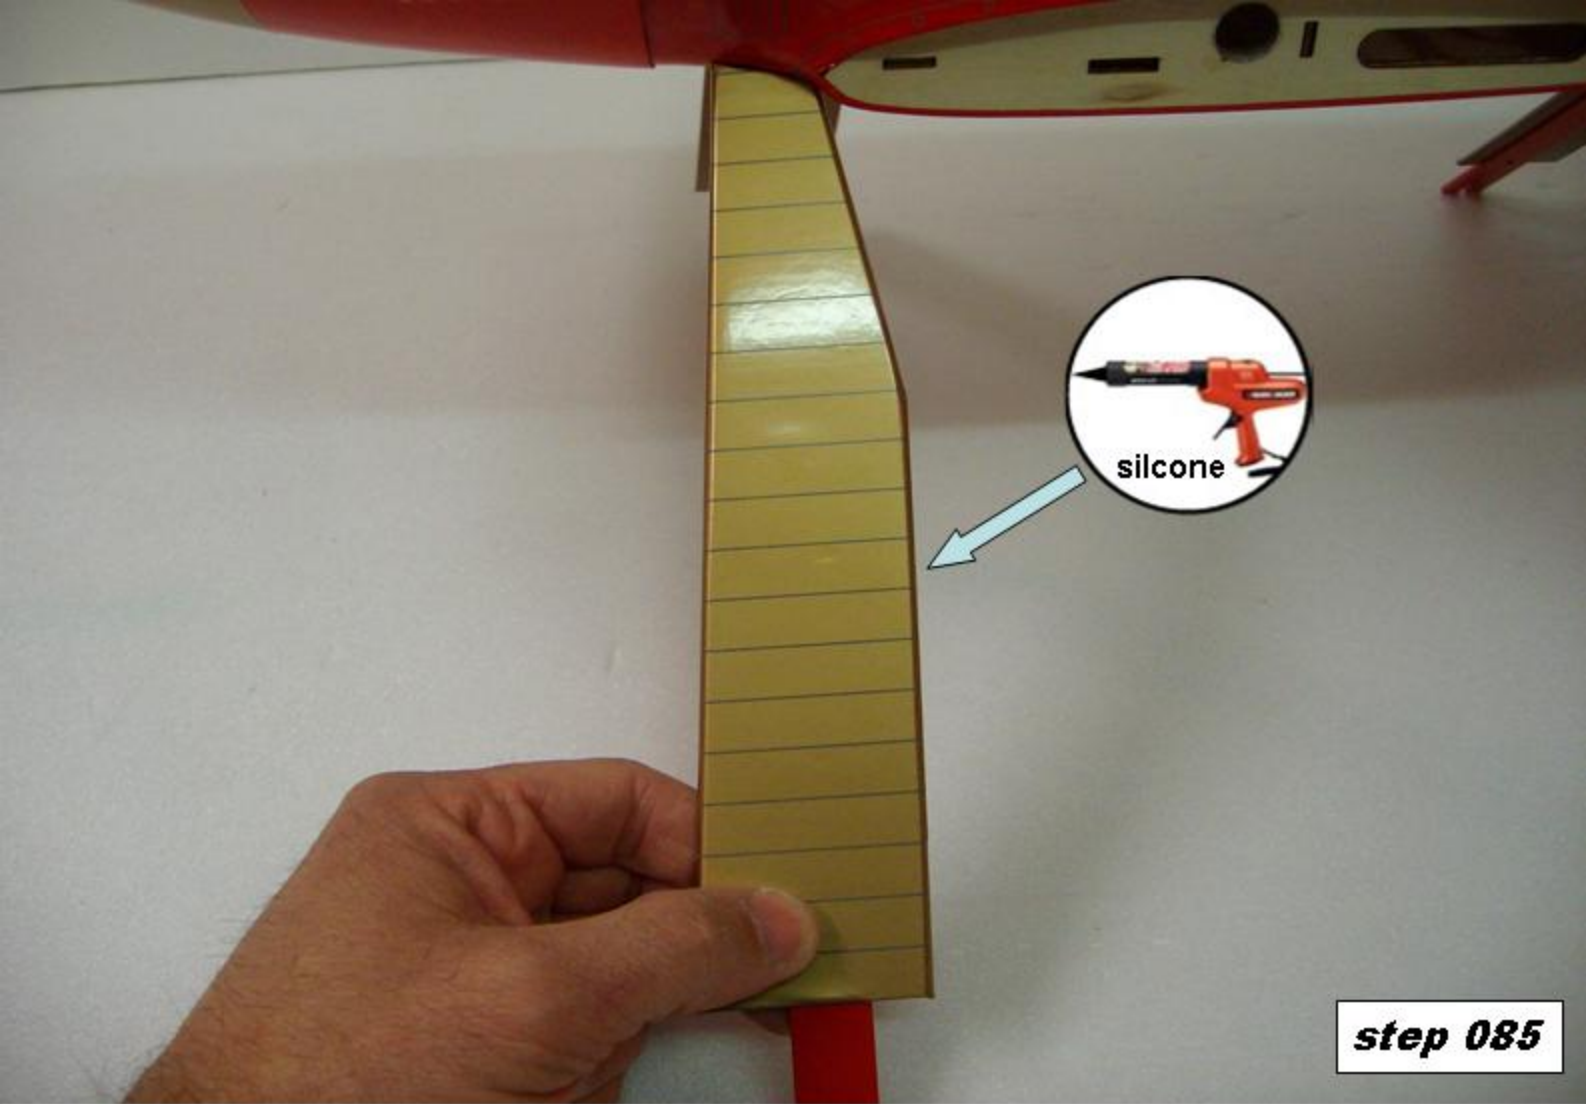

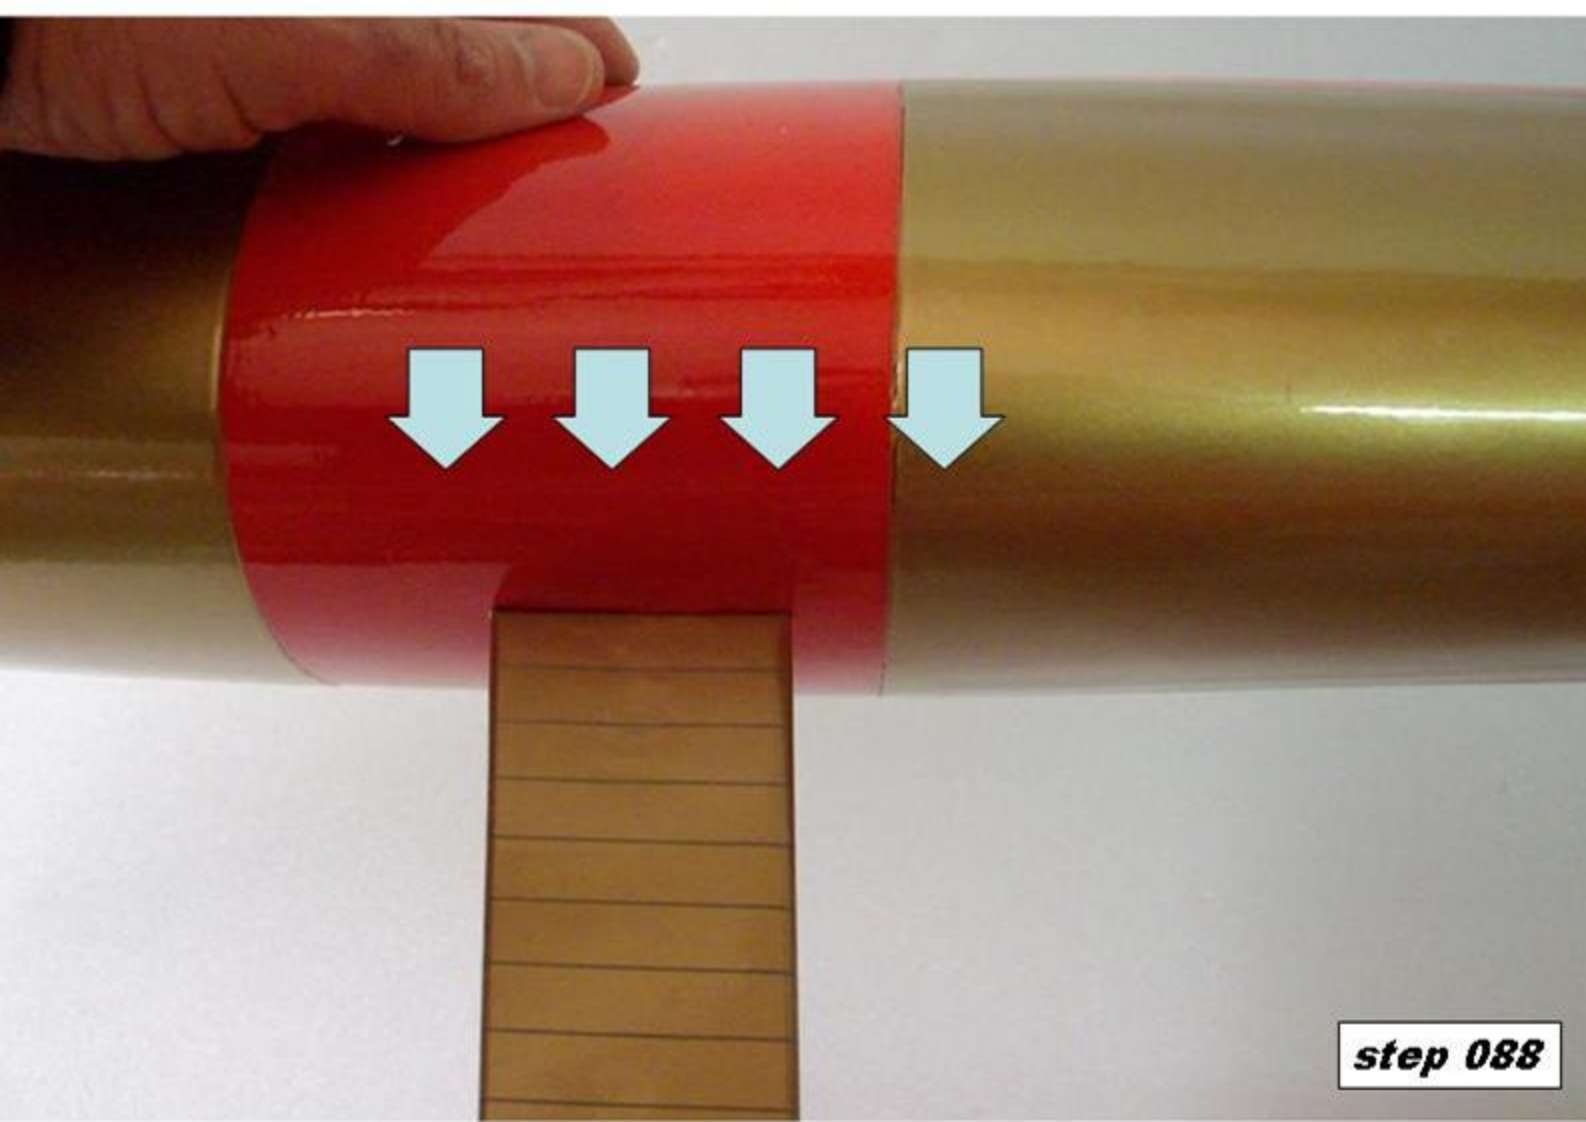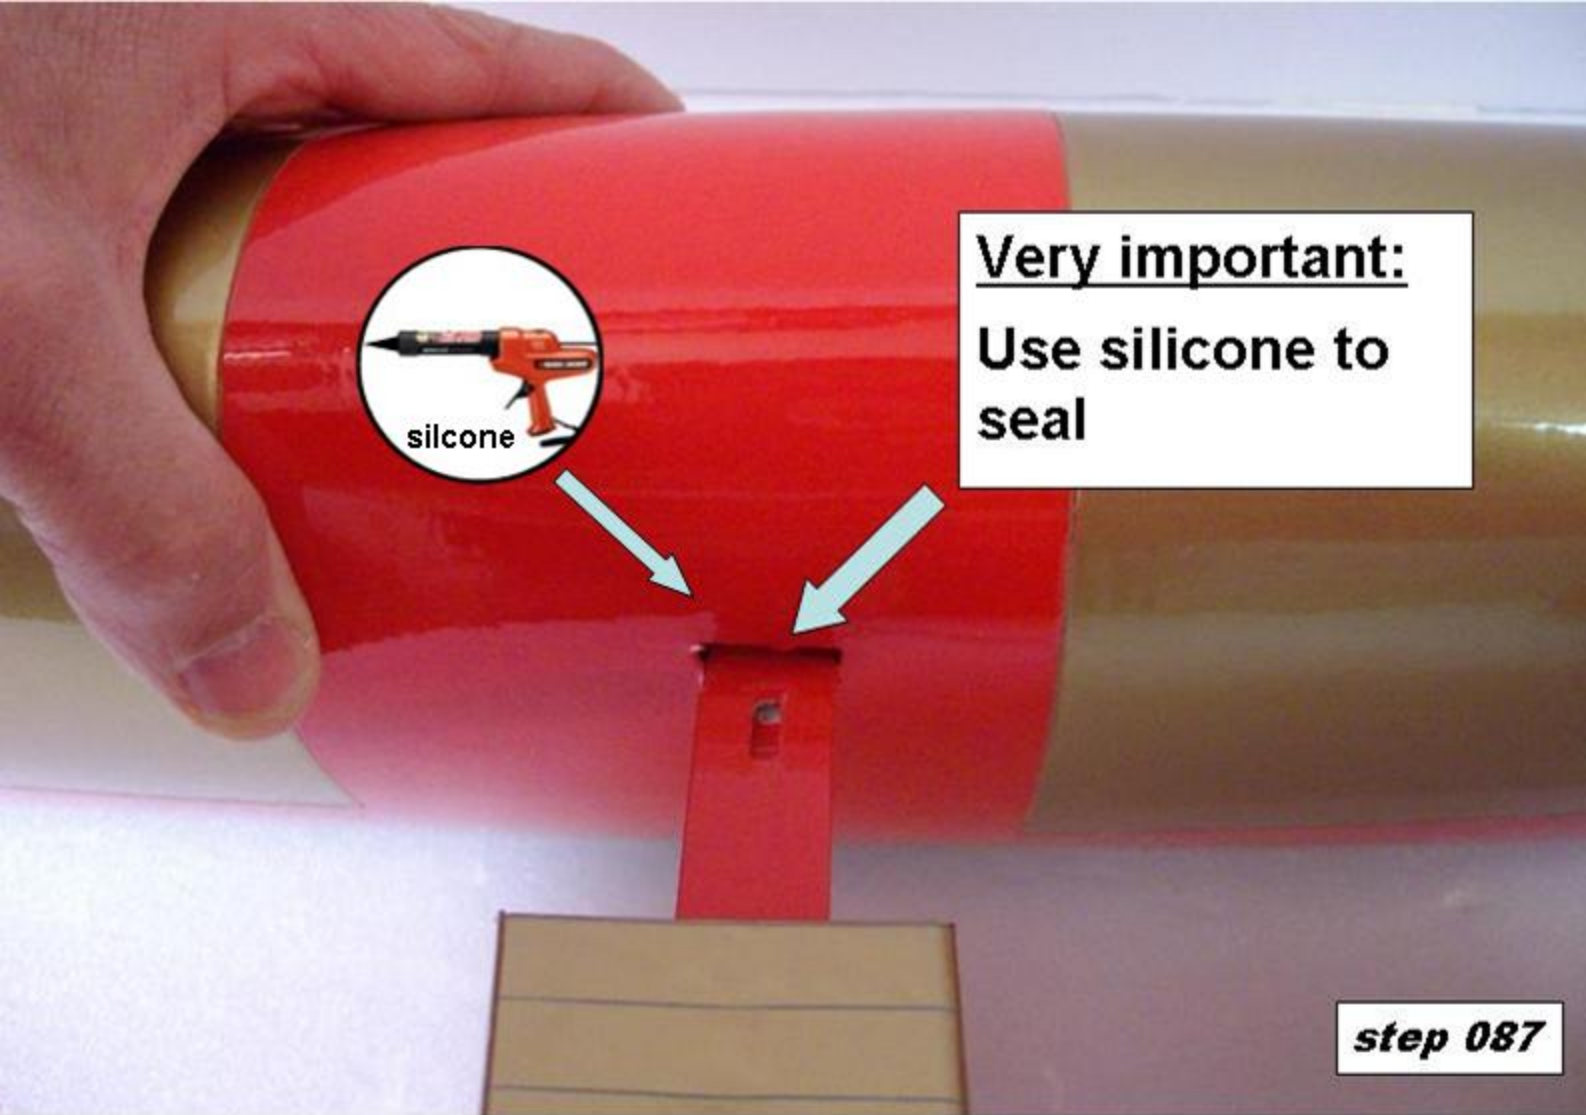


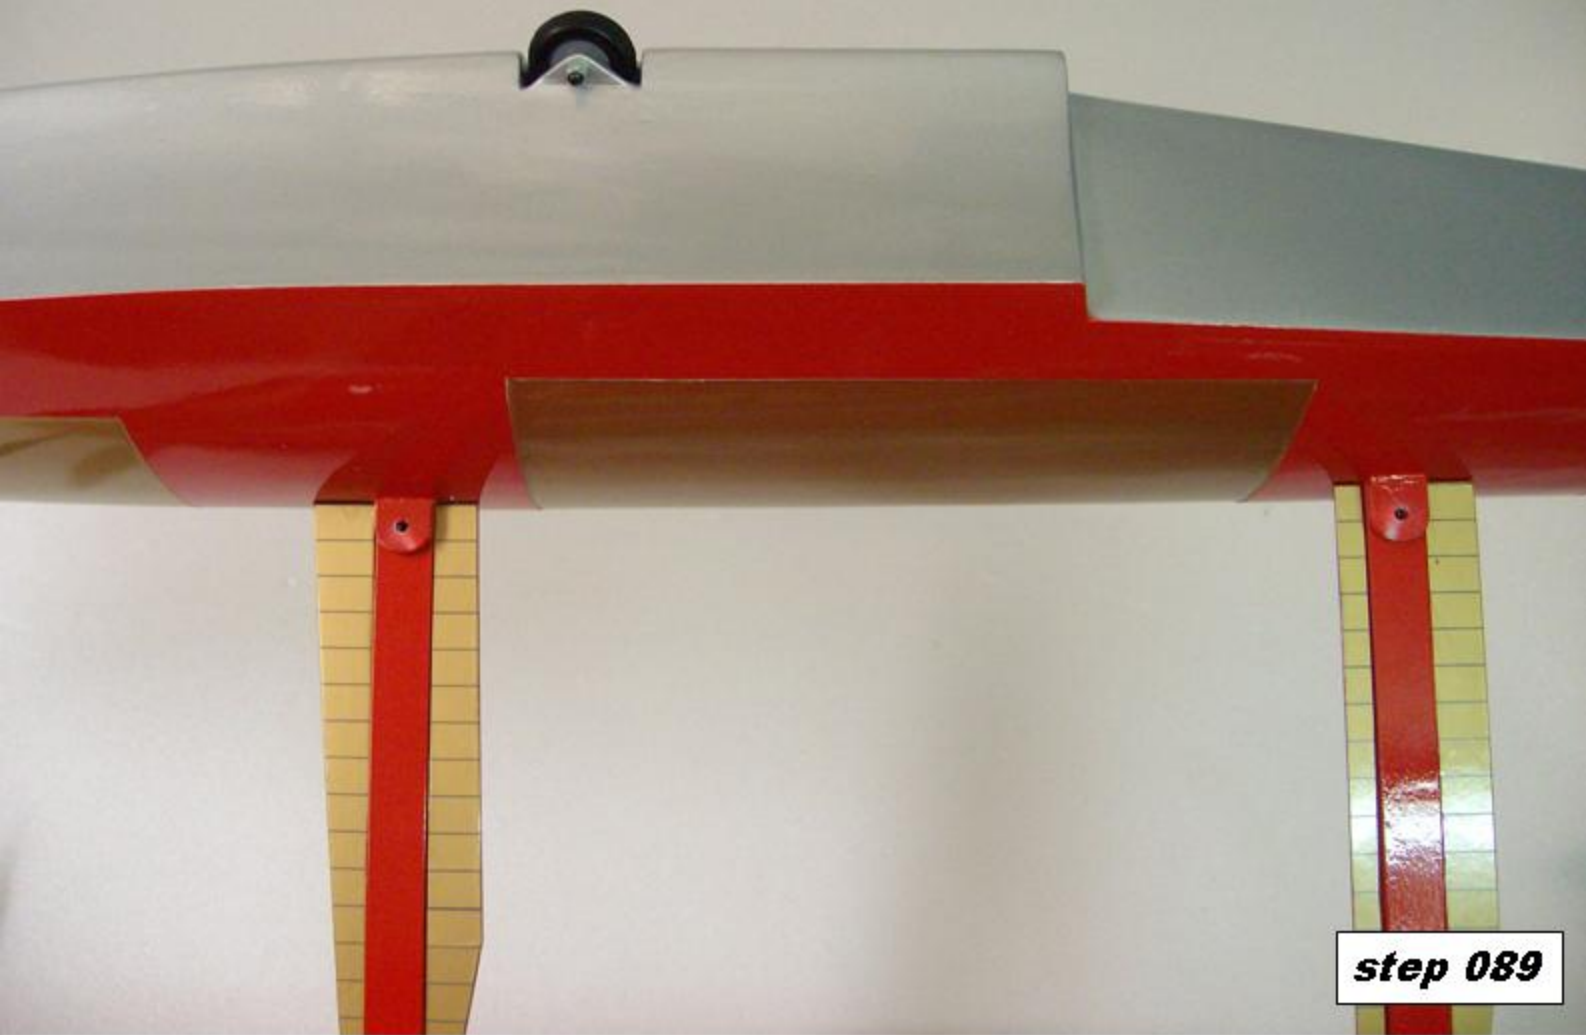


step 089

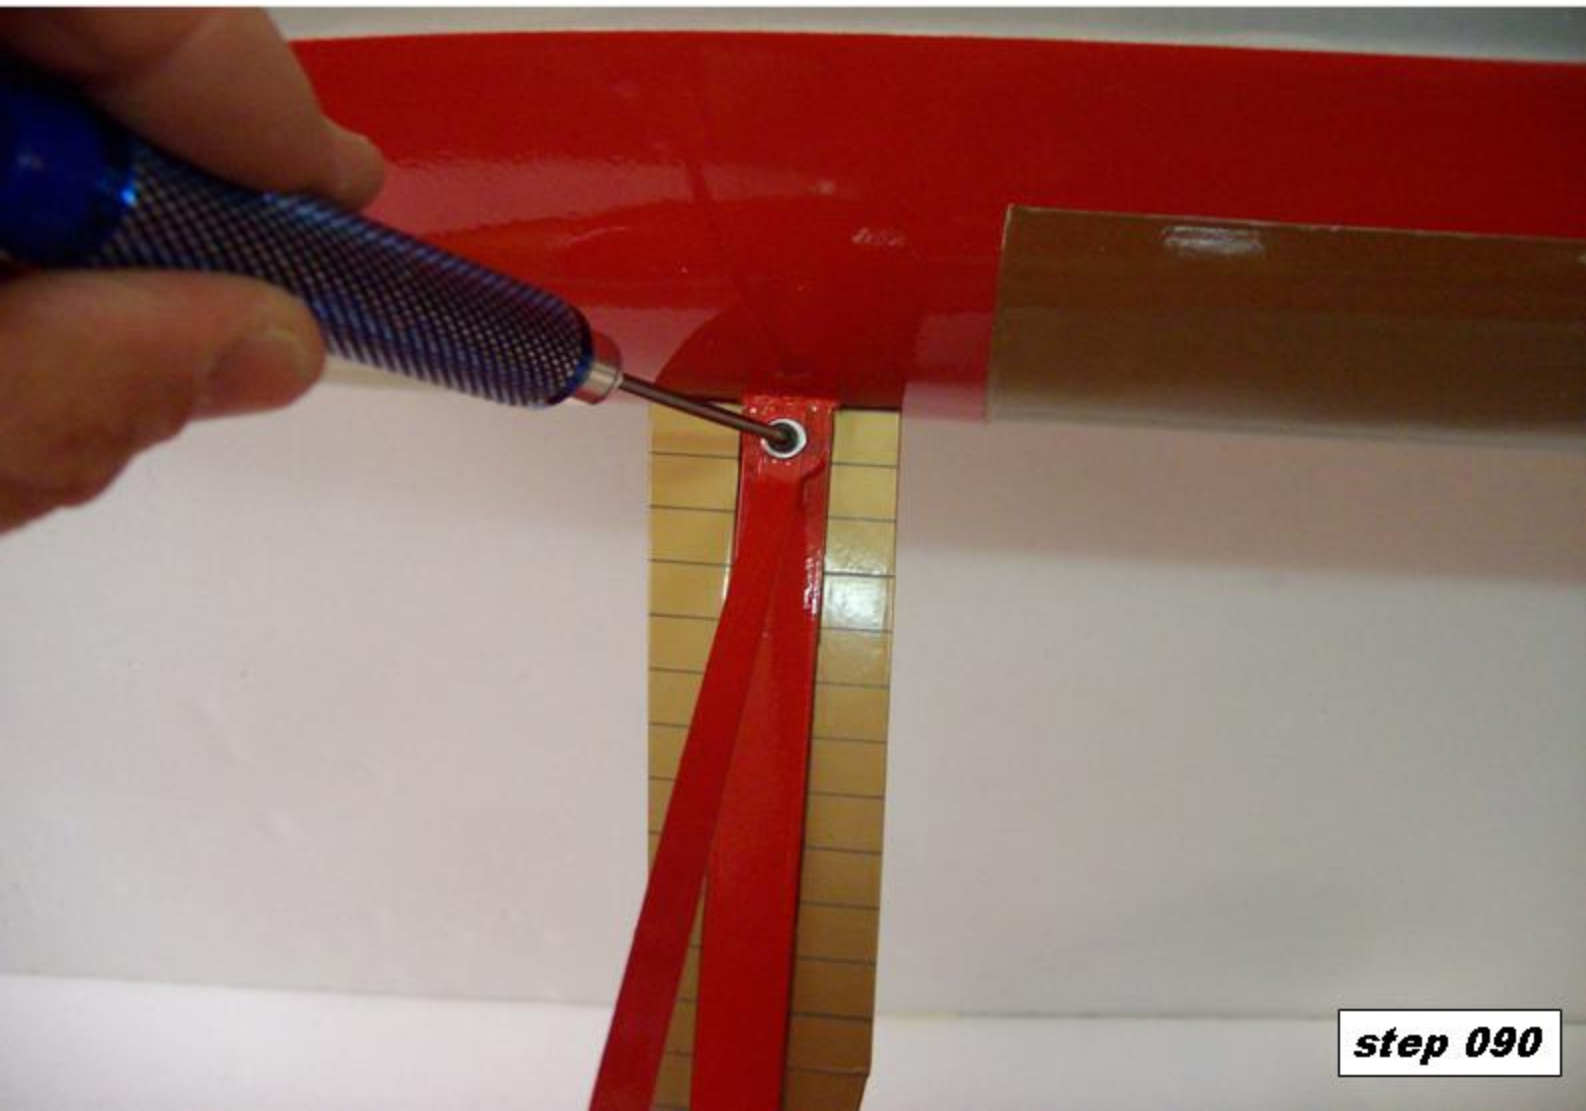

step 090

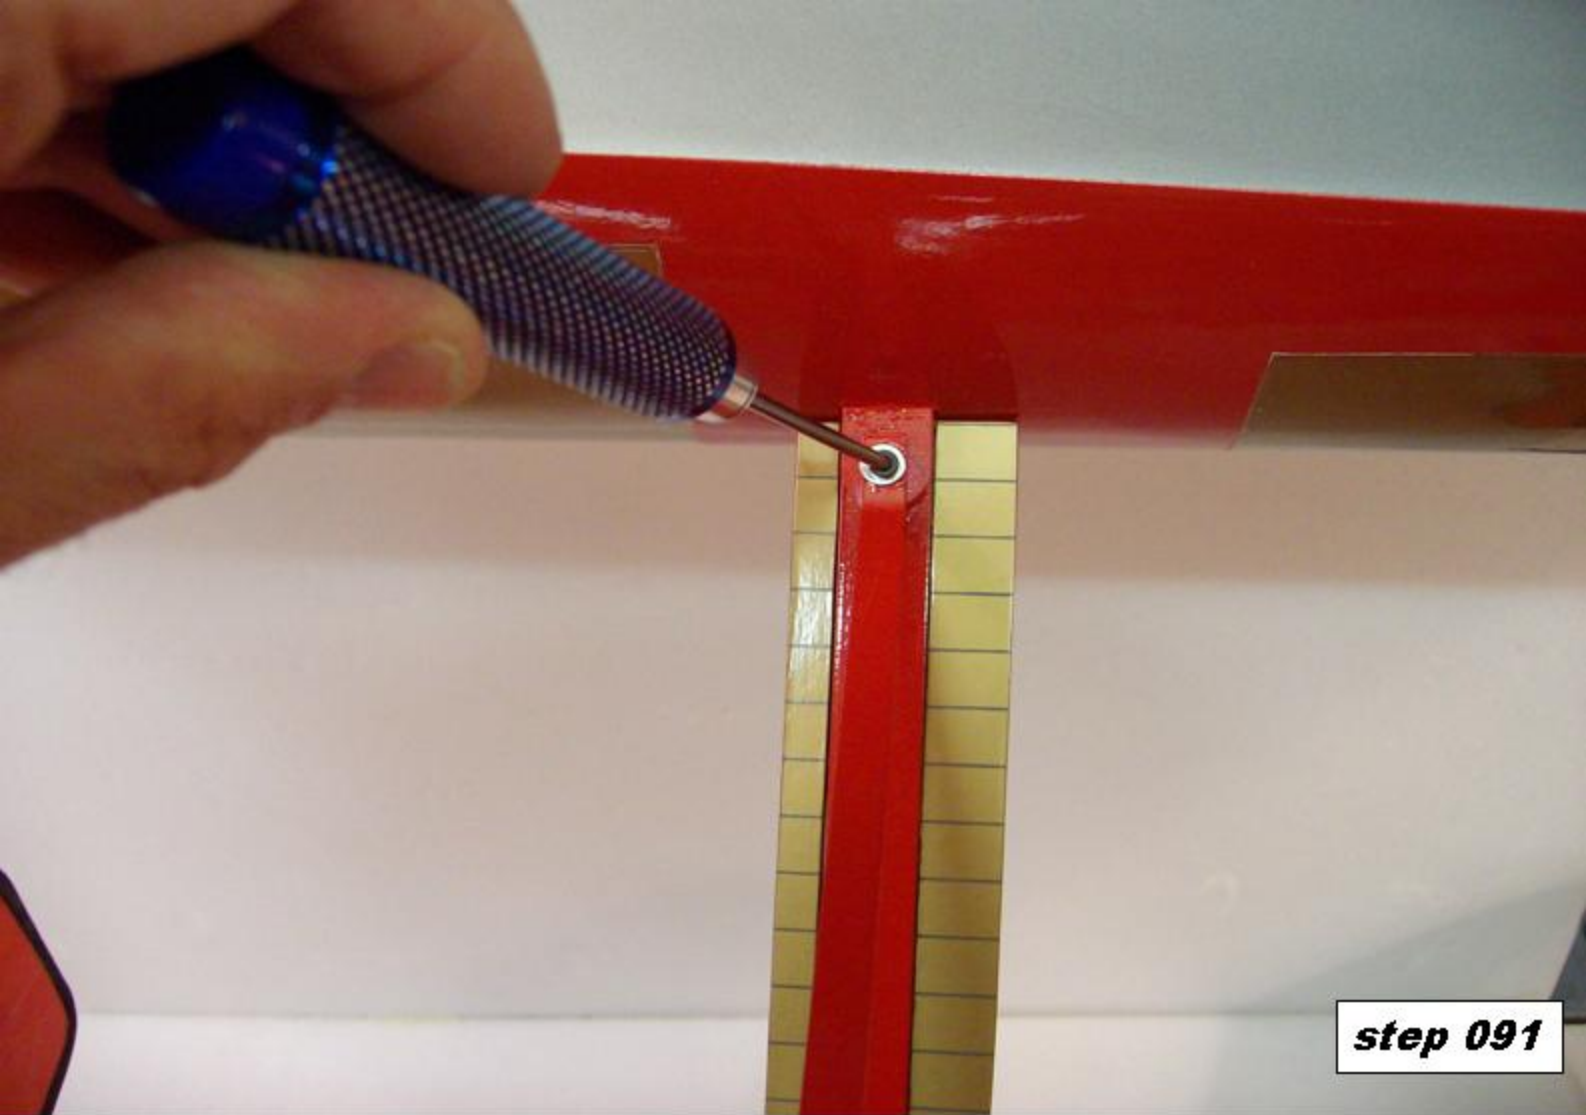


step 091

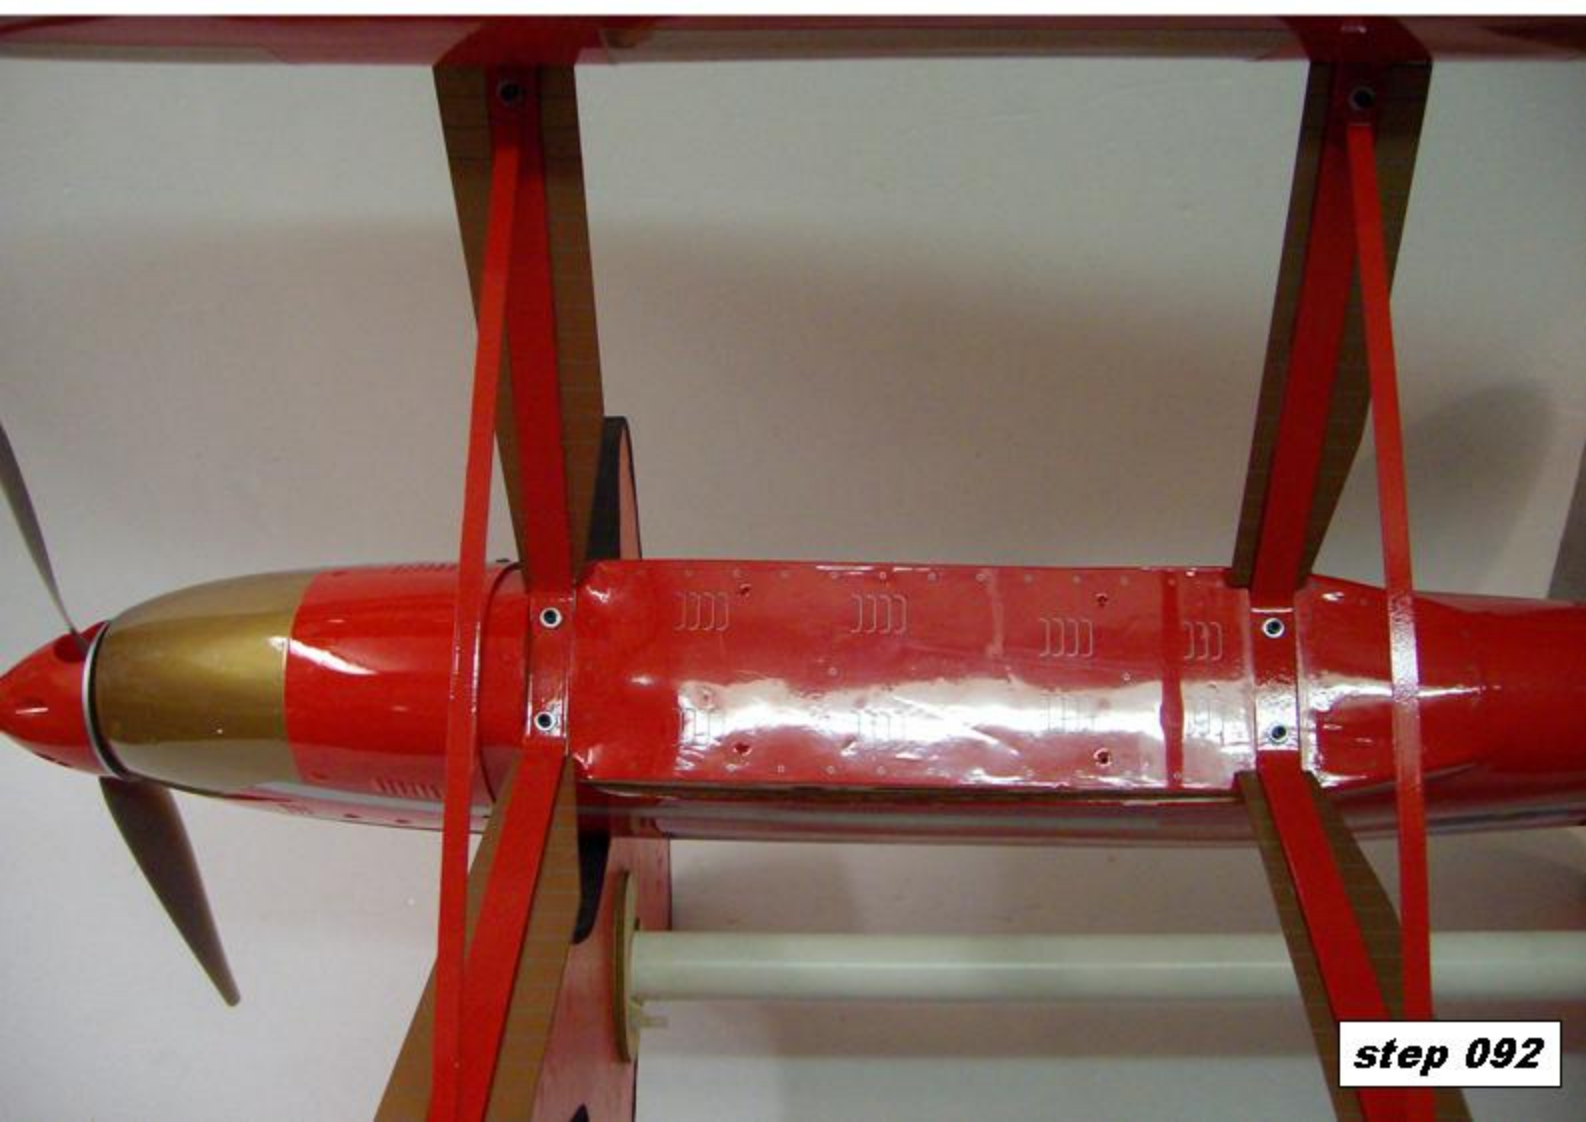


step 092




step 093

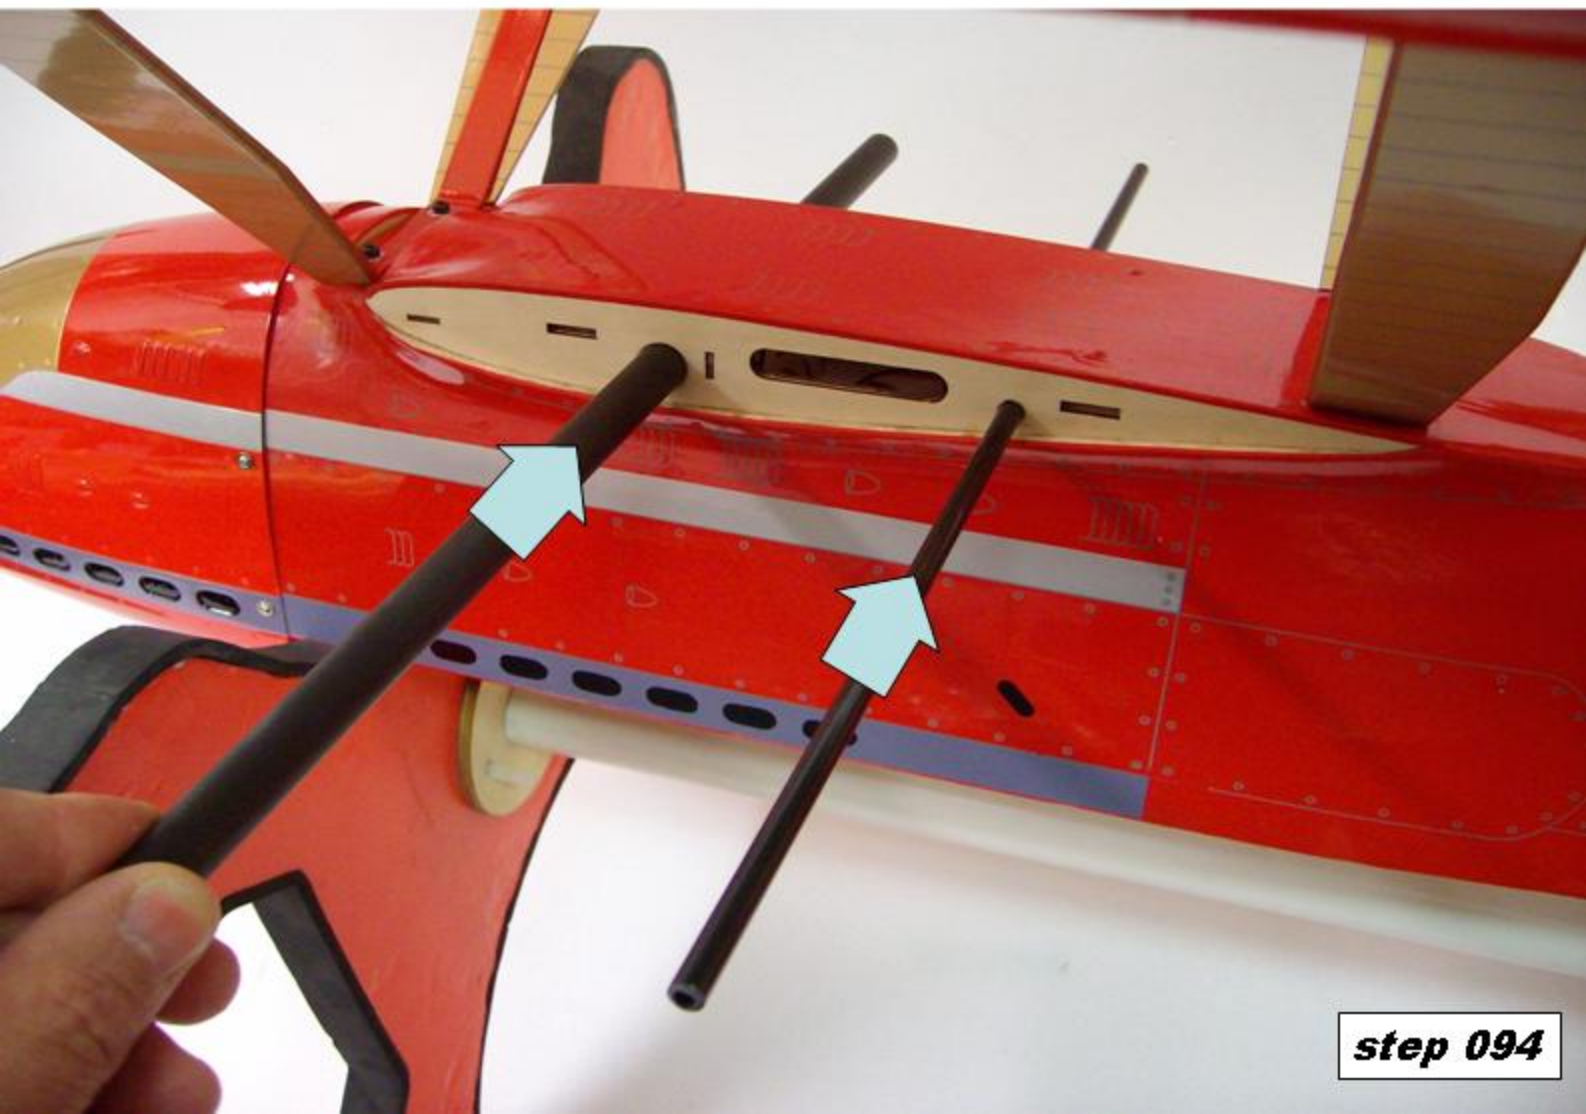

step 094

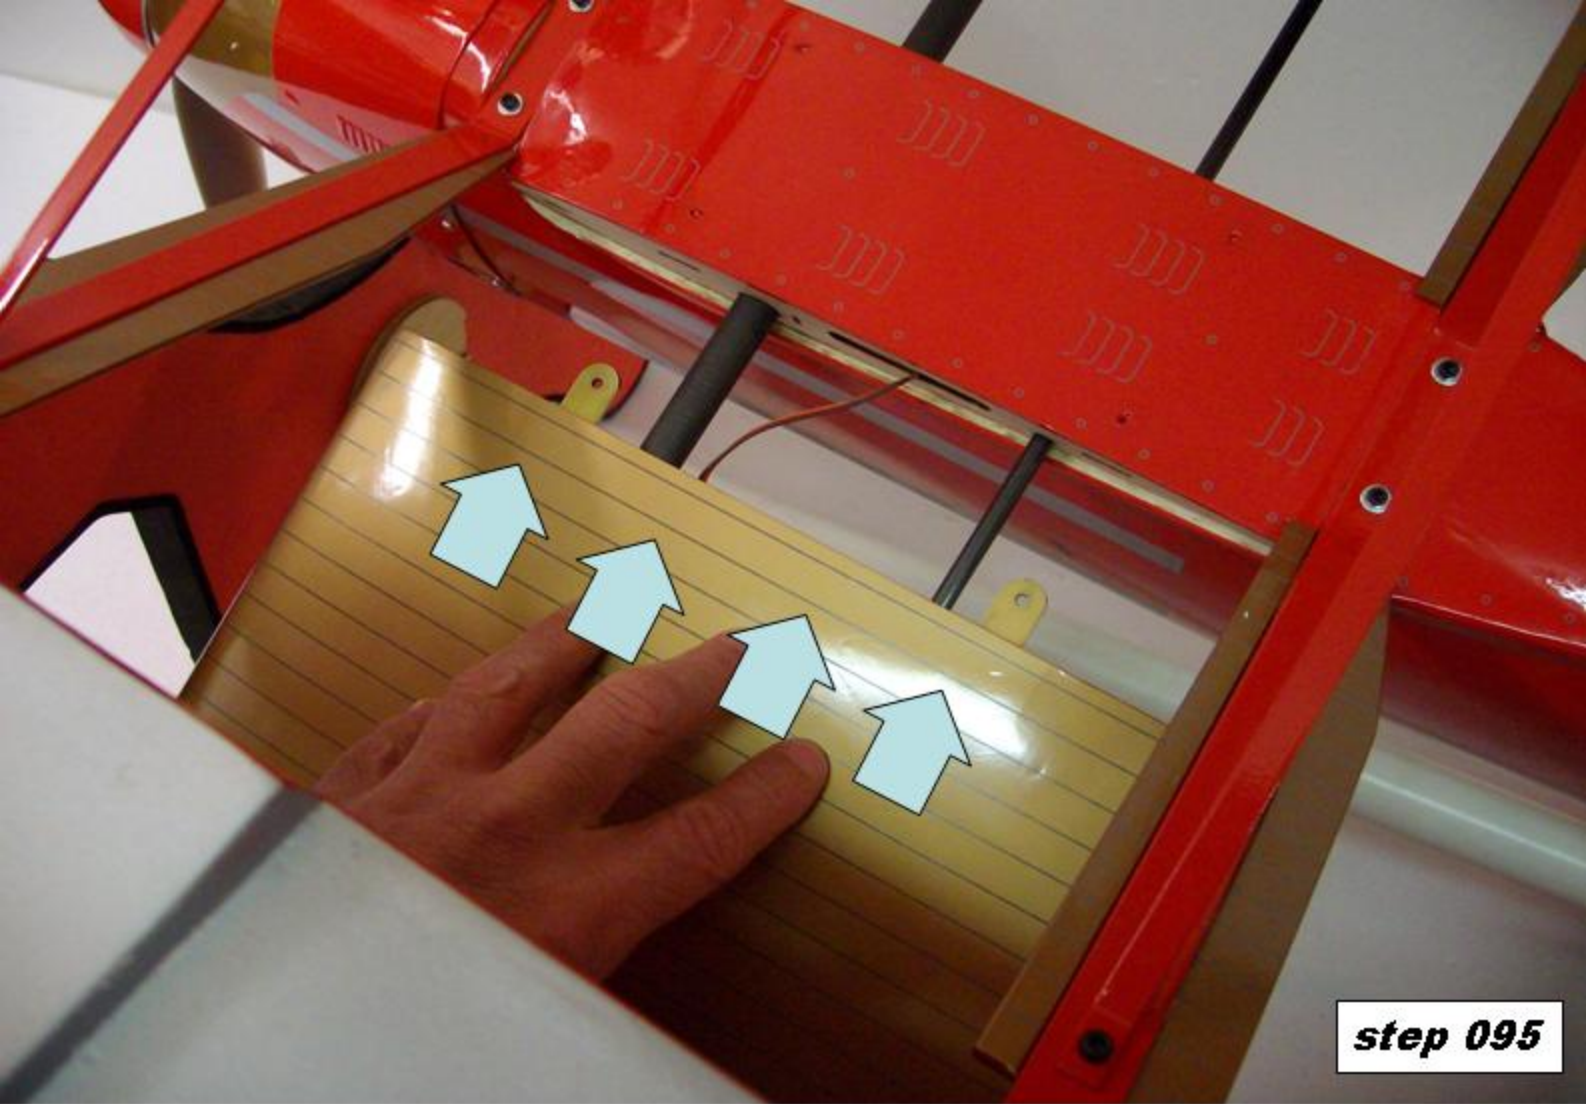


step 095

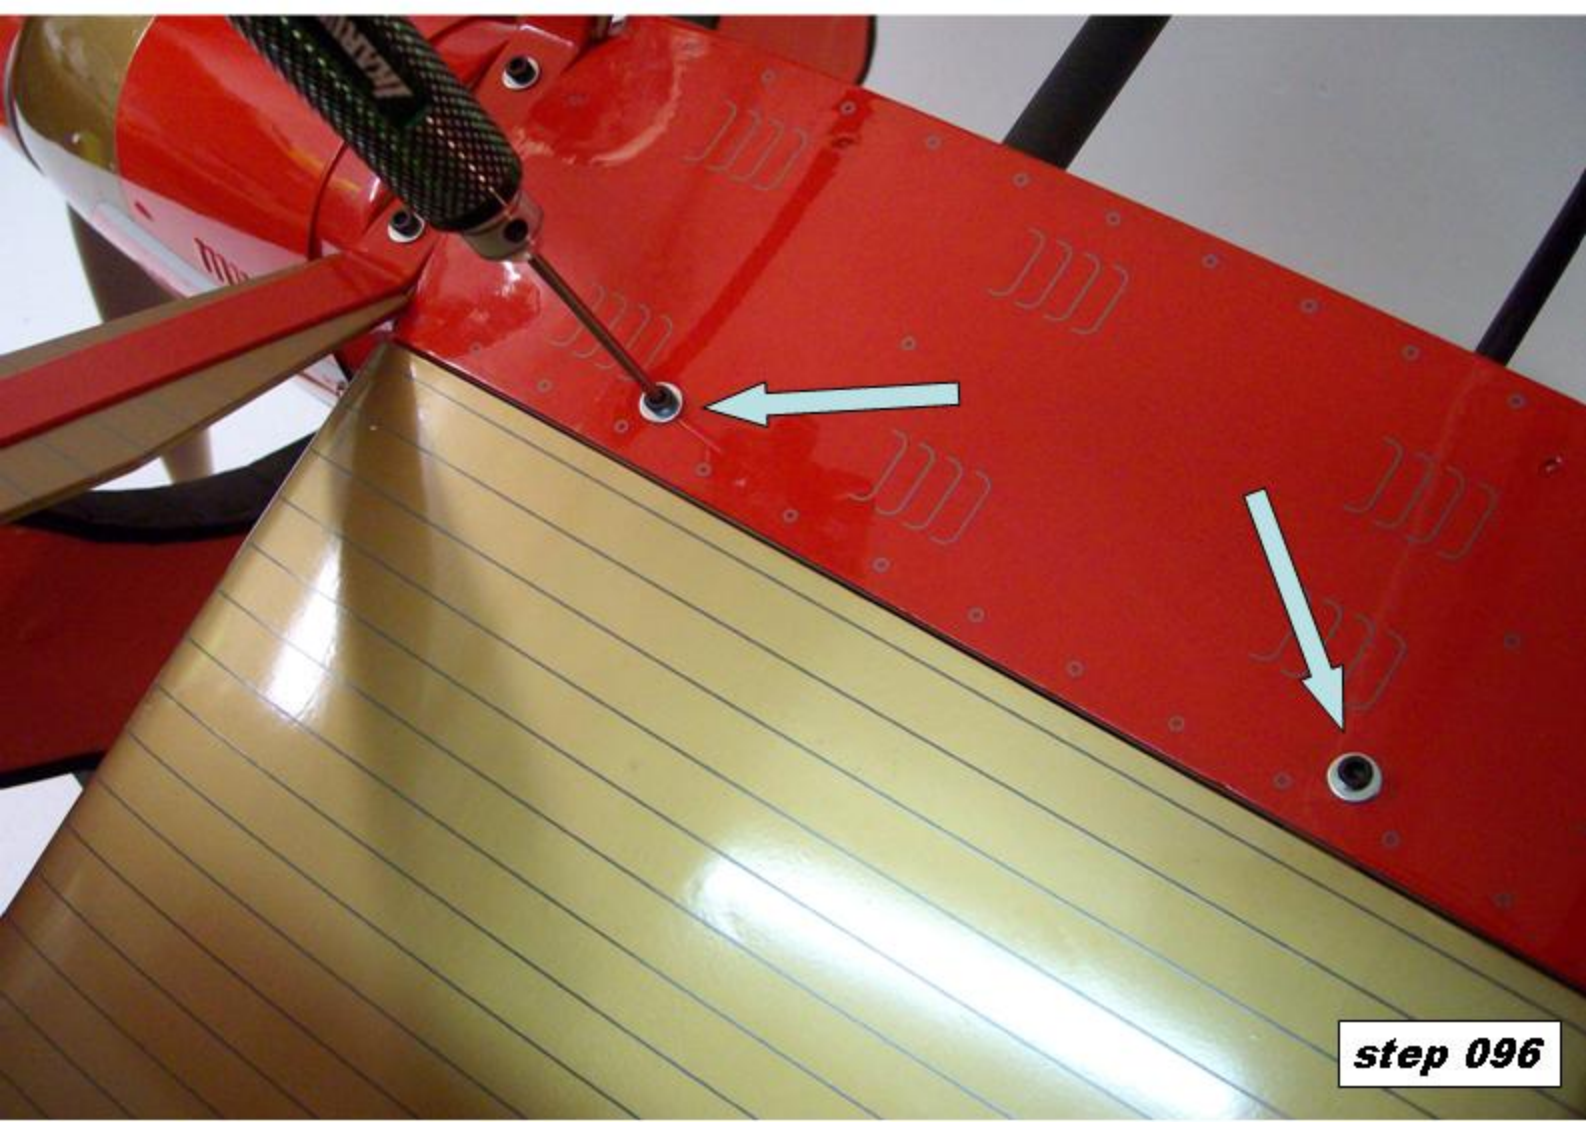

step 096



step 097

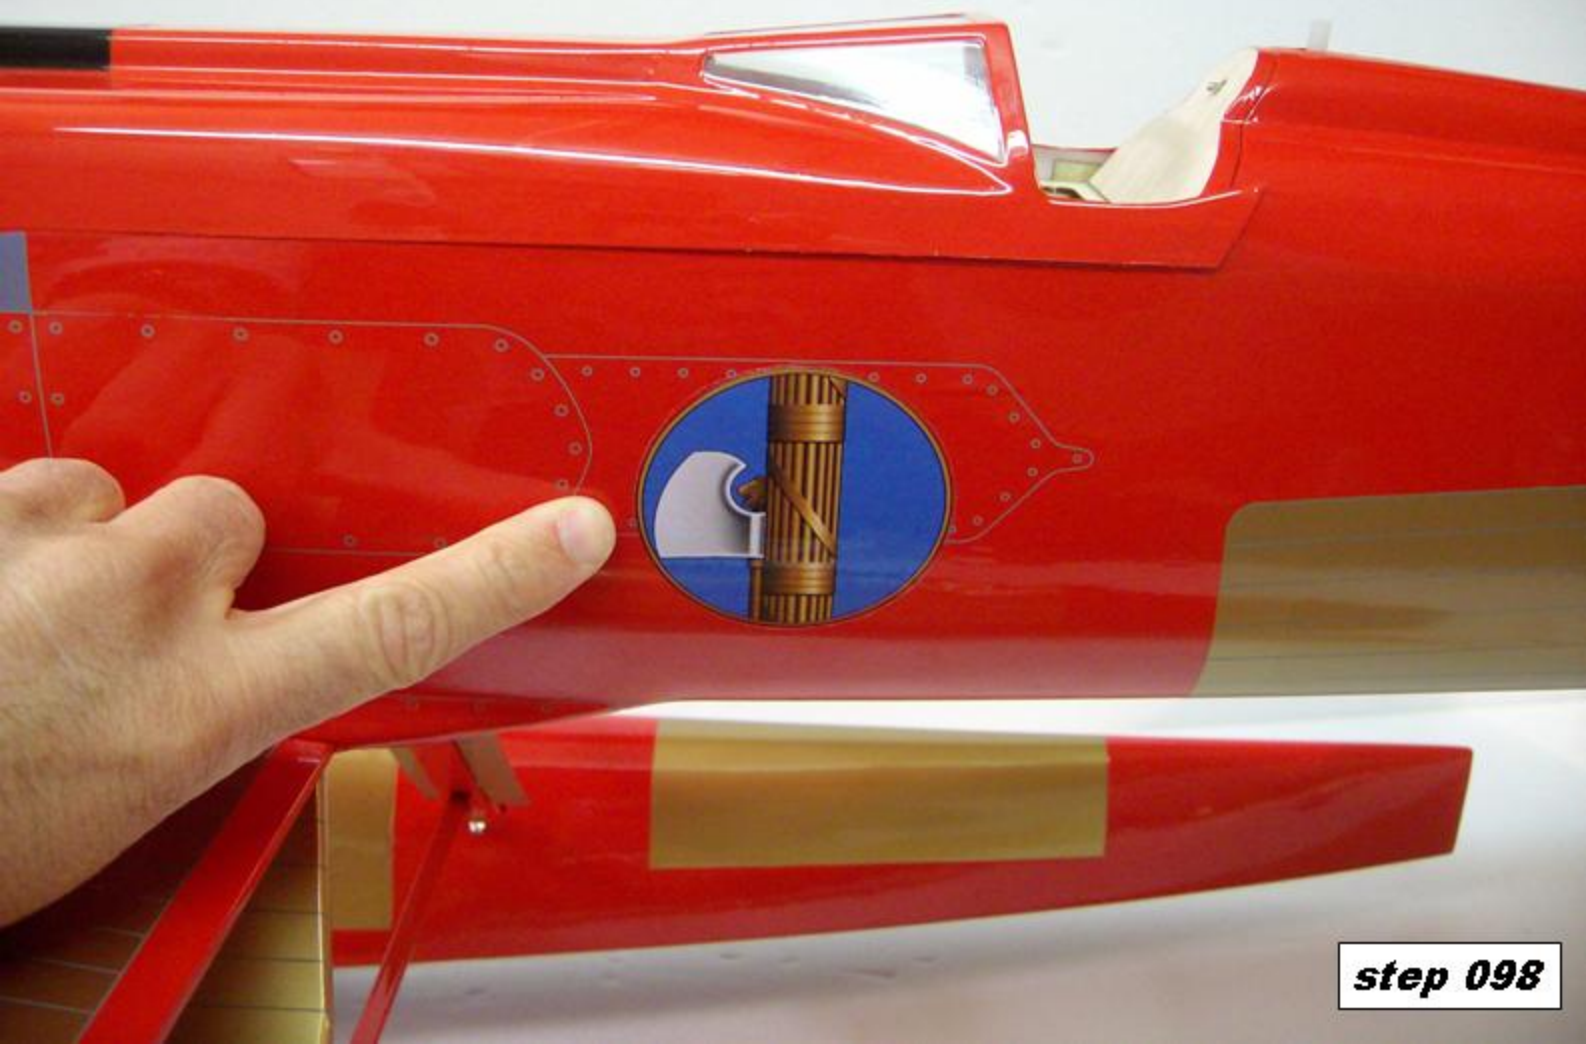

step 098



step 099




step 100



step 101

Very important:

before testing the C.G., assemble the wings to the fuselage. The right C.G. is obtained by moving the battery.

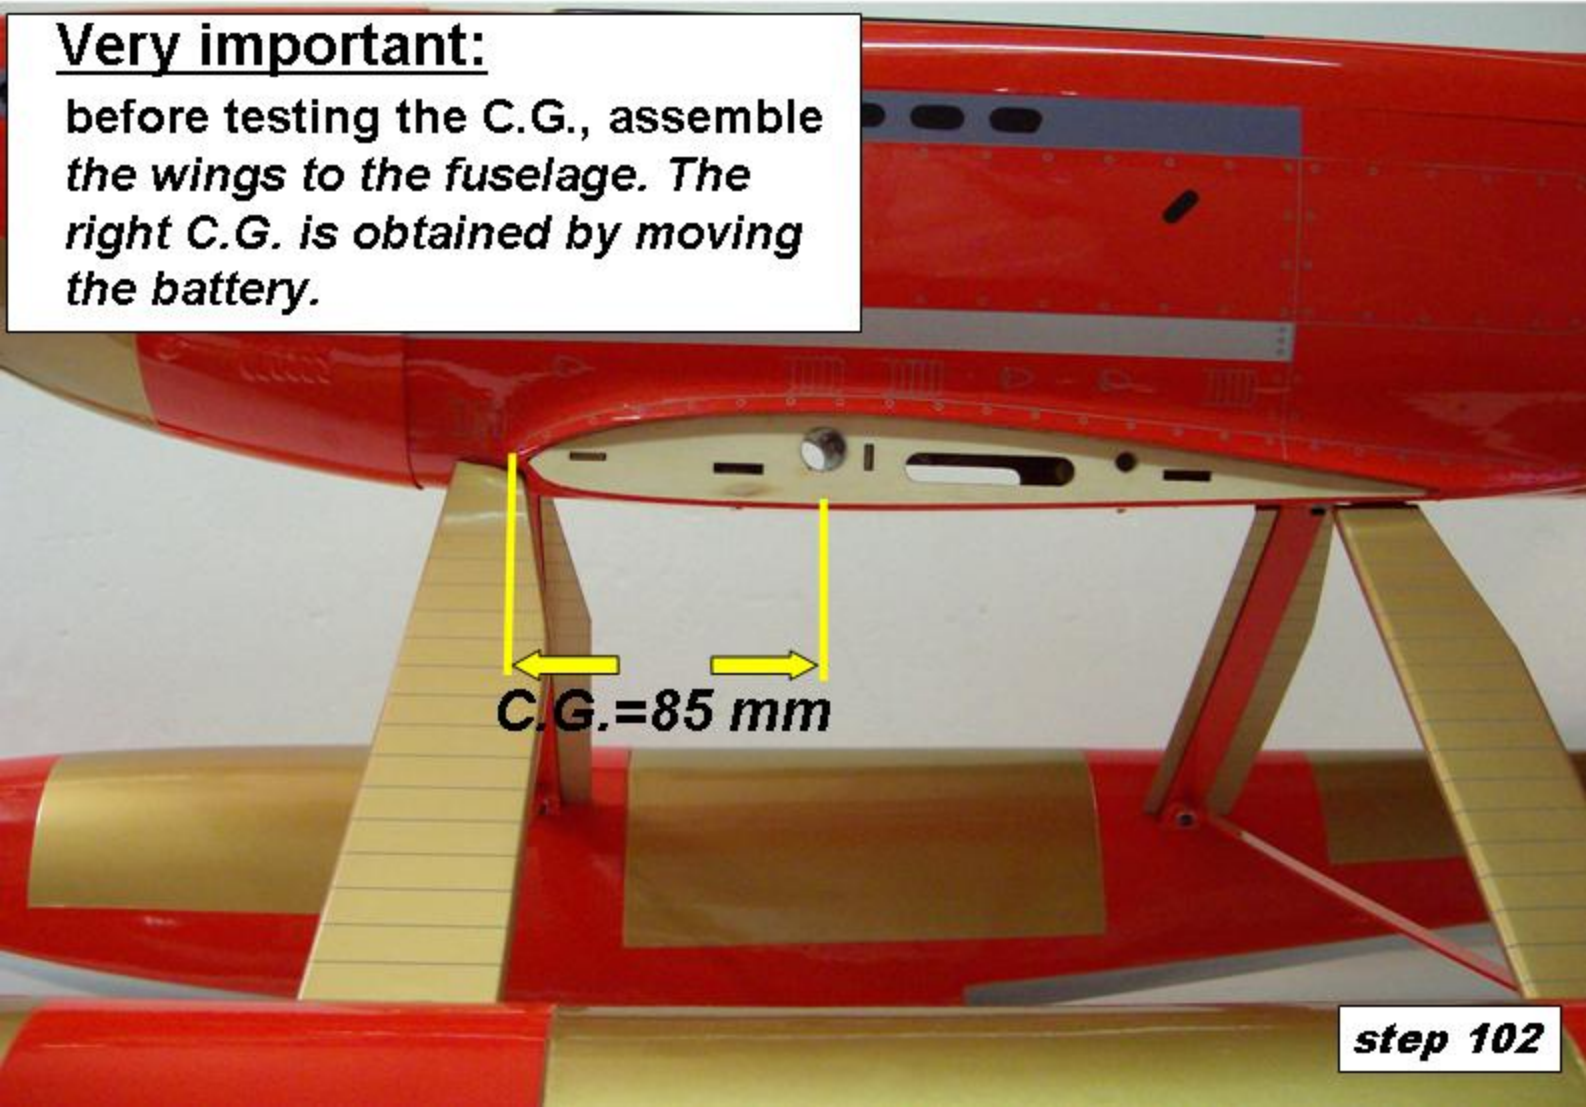

C.G.=85 mm

step 102